

Easytry18359

Generic Replacement Remote Control User Manual

For Pioneer Car Stereo AV Receivers (Models: CXB6797, CXB3455, CXB3456, FH-P404, KEH-P780, KEH-P7850, DEH-P400, DEH-P4000, DEH-P600, DEH-P7000R)

1. INTRODUCTION

This manual provides instructions for the Generic replacement infrared remote control, model Easytry18359. This remote is designed to function as a direct replacement for the original remote controls of various Pioneer Car Stereo AV Receiver models, including CXB6797, CXB3455, CXB3456, FH-P404, KEH-P780, KEH-P7850, DEH-P400, DEH-P4000, DEH-P600, and DEH-P7000R. Please ensure your original remote matches the appearance of this replacement for full compatibility.

2. SETUP: BATTERY INSTALLATION

The remote control requires two (2) CR2 batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or gently pry open the battery compartment cover.
3. Insert two CR2 batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.



Image 2.1: Back of the remote control, illustrating the battery compartment location.

Note: Always use fresh batteries and dispose of old batteries responsibly.

3. OPERATING INSTRUCTIONS

This infrared replacement remote control operates your compatible Pioneer Car Stereo AV Receiver without any additional setup or coding. Point the remote directly at the receiver's infrared sensor. The maximum effective range is approximately 10 meters (33 feet).



Image 3.1: Front view of the remote control, displaying all functional buttons.

Button Functions:

- **POWER (⏻):** Turns the receiver on or off.
- **VOLUME (+/-):** Increases or decreases the audio volume.
- **ATT (Attenuate):** Mutes or significantly reduces the audio volume.
- **BAND/ESC:** Changes radio bands (e.g., FM1, FM2, AM) or exits a menu/function.
- **SELECT:** Confirms a selection or enters a menu.
- **TRACK/SEEK (◀▶):** Skips tracks forward/backward or seeks radio stations.
- **AUDIO:** Accesses audio settings or sound modes.
- **F (Function):** Activates special functions or menu options.
- **DISC/P.CH:** Selects disc playback or changes preset channels.
- **Directional Arrows (▲ ▼ ◀▶):** Navigates through menus or adjusts settings.

4. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or it stops responding. Refer to Section 2 for battery installation.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is not responding.	<ul style="list-style-type: none"> ◦ Dead or incorrectly installed batteries. ◦ Obstruction between remote and receiver. ◦ Remote is out of range. 	<ul style="list-style-type: none"> ◦ Replace batteries with new CR2 batteries, ensuring correct polarity. ◦ Remove any objects blocking the line of sight to the receiver. ◦ Move closer to the receiver (within 10 meters).
Some functions do not work.	<ul style="list-style-type: none"> ◦ Incompatibility with specific receiver model. ◦ Receiver not in the correct mode. 	<ul style="list-style-type: none"> ◦ Verify your Pioneer receiver model is listed as compatible. This remote is a replacement for specific models only. ◦ Ensure the receiver is in the appropriate mode (e.g., CD, Tuner) for the desired function.
Remote works intermittently.	<ul style="list-style-type: none"> ◦ Low battery power. ◦ Infrared interference. 	<ul style="list-style-type: none"> ◦ Replace batteries. ◦ Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) are interfering with the IR signal.

If issues persist after attempting these solutions, please contact customer support.

6. SPECIFICATIONS

- **Model Number:** Easytry18359
- **Brand:** Generic
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Maximum Number of Supported Devices:** 1
- **Maximum Range:** 10 meters (approximately 33 feet)
- **Batteries Required:** 2 x CR2 (not included)

7. WARRANTY INFORMATION

This Generic replacement remote control comes with a **90-day warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage. Please retain your proof of purchase for warranty claims.

8. CUSTOMER SUPPORT

For any questions, concerns, or troubleshooting assistance not covered in this manual, please contact the seller directly through the platform where the product was purchased. Provide your order number and a detailed description of the issue for prompt support.