

[Manuals.plus](#) /

› [Vitamix](#) /

› Vitamix V1200 Venturist Blender Instruction Manual

Vitamix V1200

Vitamix V1200 Venturist Blender Instruction Manual

Model: V1200 | 64 Oz Capacity

1. INTRODUCTION

Thank you for choosing the Vitamix V1200 Venturist Blender. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read all instructions thoroughly before first use and retain this manual for future reference.





Figure 1.1: The Vitamix V1200 Venturist Blender, showcasing its sleek design and clear 64 oz container.

2. IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not immerse the motor base in water or other liquid.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.

- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A tamper may be used but only when the main lid is in place through the lid plug opening.
- Blades are sharp. Handle carefully.
- Always operate the blender with the lid securely in place.

3. SETUP

Before first use, wash the container, lid, and lid plug in warm, soapy water. Rinse thoroughly and dry. The motor base can be wiped clean with a damp cloth.

3.1 Unpacking

Carefully remove all components from the packaging. Ensure all parts are present: motor base, 64-ounce container with blade assembly, lid, and lid plug.

3.2 Placing the Blender

Place the motor base on a dry, level, and stable surface. Ensure there is adequate ventilation around the unit.

3.3 Assembling the Container

1. Place the 64-ounce container onto the motor base, ensuring it is seated firmly. The container can be placed in any direction.
2. Add your ingredients to the container.
3. Secure the lid onto the container. Ensure the lid is fully seated and locked into place.
4. Insert the lid plug into the opening in the center of the lid. Twist to secure.





Figure 3.1: The Vitamix V1200 Venturist Blender with its 64 oz container and lid properly assembled on the motor base.

4. OPERATING INSTRUCTIONS

The Vitamix V1200 features intuitive controls for precise blending.

4.1 Controls Overview

- **Variable Speed Dial:** Controls the blending speed from 1 (lowest) to 10 (highest).
- **Start/Stop Switch:** Initiates and stops the blending cycle.
- **Pulse Switch:** Provides short bursts of power at the selected speed setting.
- **Program Settings:** The V1200 may feature pre-programmed settings for common recipes. Refer to your recipe book for specific program usage.





Figure 4.1: Close-up of the Vitamix V1200 control panel, showing the variable speed dial, start/stop, and pulse switches.

4.2 Blending Process

1. Ensure the container is properly assembled on the motor base with ingredients, lid, and lid plug in place.
2. Plug the blender into a grounded electrical outlet.
3. Turn the Variable Speed Dial to setting 1.
4. Flip the Start/Stop switch to the 'Start' position.
5. Slowly increase the speed to your desired setting. For tough ingredients, gradually increase speed to prevent

overloading.

6. Use the tamper through the lid plug opening if ingredients need to be pushed towards the blades*Never use the tamper with the lid plug removed or if the tamper cannot move freely.*
7. When blending is complete, flip the Start/Stop switch to the 'Stop' position.
8. Wait for the blades to stop completely before removing the lid.

4.3 Blending Tips

- Always add liquids first, then soft ingredients (leafy greens), then hard ingredients (frozen fruit, ice).
- Do not overfill the container.
- For best results, start at a low speed and gradually increase to high.
- If the blend stalls, use the tamper to push ingredients into the blades. If necessary, add more liquid.

5. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Vitamix blender.

5.1 Self-Cleaning Method

1. Fill the container halfway with warm water.
2. Add a few drops of dish soap.
3. Secure the lid and lid plug.
4. Start the blender on Variable Speed 1, then slowly increase to Variable Speed 10.
5. Run for 30-60 seconds.
6. Rinse the container thoroughly with clean water.

5.2 Hand Washing

For a more thorough clean, disassemble the container, lid, and lid plug. Wash with warm, soapy water using a soft brush for hard-to-reach areas. Rinse and dry all parts completely.

5.3 Motor Base Cleaning

Wipe the motor base with a damp cloth. Do not immerse the motor base in water or spray it with water. Dry immediately with a soft cloth.

5.4 Storage

Store the blender in a clean, dry place. You can store the container on the motor base or separately.

6. TROUBLESHOOTING

If you encounter issues with your Vitamix V1200, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not start.	Not plugged in; container not seated correctly; power switch off.	Ensure power cord is securely plugged in. Check that the container is fully seated on the motor base. Verify the Start/Stop switch is in the 'Start' position.

Problem	Possible Cause	Solution
Ingredients not blending smoothly.	Too little liquid; ingredients too large; air pocket around blades.	Add more liquid. Cut ingredients into smaller pieces. Use the tamper to push ingredients towards the blades. Increase speed gradually.
Motor smells or overheats.	Overloading; prolonged blending of thick mixtures.	Reduce load. Allow the motor to cool down for 20-45 minutes. The blender has an automatic overload protection system.
Lid is difficult to remove.	Suction from blending.	Ensure the blender has stopped completely. Wiggle the lid gently to break the seal.

If the problem persists after attempting these solutions, please contact Vitamix Customer Service.

7. SPECIFICATIONS

- **Brand:** Vitamix
- **Model:** V1200 Venturist Blender
- **Color:** Black
- **Special Feature:** Multiple Speeds
- **Capacity:** 64 Ounces (4 Pounds)
- **Product Dimensions:** 10"D x 7"W x 17"H
- **Included Components:** 64-ounce container
- **Style:** Modern
- **Recommended Uses:** Blending
- **Power Source:** Corded Electric
- **Voltage:** 240 Volts
- **Controls Type:** Knob, Push Button
- **Item Weight:** 16.07 pounds

8. WARRANTY AND SUPPORT

The Vitamix V1200 Venturist Blender comes with a Limited Warranty. Please refer to the warranty card included with your product for specific terms and conditions, including coverage duration and what is covered.

For technical support, warranty claims, or to purchase replacement parts, please visit the official Vitamix website or contact their customer service department. Contact information can typically be found on the Vitamix website or on your product registration materials.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question