

## Silvercrest SHBSB 800 A1

# Silvercrest SHBSB 800 A1 Hair and Beard Trimmer

Model: SHBSB 800 A1 | Brand: Silvercrest

## 1. PRODUCT OVERVIEW

The Silvercrest SHBSB 800 A1 is a versatile hair and beard trimmer designed for precise grooming. It offers flexible operation via both mains power and an integrated lithium-ion battery, providing convenience for home and travel use.

Key features include:

- Titanium-coated blade block with a ceramic blade for optimal cutting precision.
- 6 comb attachments providing 11 different cutting lengths (3, 6, 9, 12, 20, and 30 mm).
- 5 fine adjustment levels (0.8 to 2.0 mm) for precise styling.
- Two speed settings: Normal and Turbo.
- Easy-to-read LED display for operational status.
- Ergonomic handle for comfortable and secure handling.
- Travel lock function to prevent accidental activation.



Image 1: The Silvercrest SHBSB 800 A1 Hair and Beard Trimmer, showcasing its sleek design and main components.

## 2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent injury or damage, please adhere to the following safety guidelines:

- **Intended Use:** This device is designed exclusively for trimming hair and beards on the head. Do not use it on other body parts.
- **Water Proximity:** Never use the trimmer near water sources, such as bathtubs, showers, basins, or other vessels containing water. Avoid using it in damp environments.
- **Cleaning:** Always follow the manufacturer's cleaning instructions provided in this manual. Ensure the device is unplugged before cleaning.

- **Power Supply:** Use only the original power adapter supplied with the device. Ensure the voltage matches your local power supply (100-240 V).
- **Children and Supervision:** Keep the device out of reach of children. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- **Damage:** Do not use the device if it or its power cord is damaged. Contact customer support for repairs.
- **Battery Safety:** Do not expose the battery to extreme temperatures or direct sunlight. Do not attempt to replace the battery yourself.

### 3. PACKAGE CONTENTS

Upon opening the package, please verify that all components are present and undamaged:

- Silvercrest SHBSB 800 A1 Hair and Beard Trimmer
- 6 Comb Attachments (for 3, 6, 9, 12, 20, and 30 mm cutting lengths)
- 1 Thinning Attachment
- Scissors
- Comb
- Travel Case (100% polyester)
- Cleaning Brush
- Shear Oil
- Hairdressing Cape (100% polyester)
- Power Adapter (with worldwide voltage setting 100–240 V)
- Charging Station

### 4. SETUP

#### 4.1 Charging the Device

1. Connect the power adapter to the charging station.
2. Plug the power adapter into a suitable electrical outlet (100-240V).
3. Place the trimmer into the charging station. Ensure it is seated correctly.
4. The LED display will indicate the charging status. A full charge takes approximately 90 minutes.
5. Once fully charged, the trimmer provides approximately 60 minutes of operating time.

#### 4.2 Attaching Comb Attachments

1. Ensure the trimmer is switched off.
2. Select the desired comb attachment based on the cutting length (3, 6, 9, 12, 20, or 30 mm).
3. Align the comb attachment with the trimmer head and slide it on until it clicks securely into place.
4. To remove, gently push the release tab (if present) or pull the comb attachment away from the trimmer head.

### 5. OPERATING INSTRUCTIONS

#### 5.1 Basic Operation

1. **Power On/Off:** Press the power button to turn the trimmer on or off.
2. **Speed Settings:** The trimmer features two speeds: Normal and Turbo. Press the speed button to toggle

between them. The LED display will indicate the selected speed.

3. **Direct-Drive Function:** The trimmer can be used directly from the mains power supply even if the battery is low or depleted.

## 5.2 Adjusting Cutting Length

1. **Comb Attachments:** For longer cutting lengths (3mm to 30mm), attach the appropriate comb as described in Section 4.2.
2. **Fine Adjustment:** For precise short cuts and detailing, use the integrated fine adjustment wheel or lever on the trimmer body. This allows for 5 levels of adjustment from 0.8 mm to 2.0 mm. Adjust this setting before you begin trimming.

## 5.3 Trimming Hair and Beard

- Ensure hair is clean and dry before trimming.
- Start with a longer comb attachment if you are unsure of the desired length, and gradually reduce it.
- Hold the trimmer with the blade flat against the skin and move it slowly against the direction of hair growth.
- For an even cut, make multiple passes over the same area.
- Use the thinning attachment for texturizing or reducing hair volume.

# 6. MAINTENANCE

## 6.1 Cleaning the Trimmer

Regular cleaning ensures optimal performance and extends the life of your trimmer.

1. **After Each Use:** Switch off the trimmer and disconnect it from the power supply.
2. Remove any comb attachments.
3. Use the provided cleaning brush to remove loose hairs from the blade block and the trimmer body.
4. The blade block can be carefully detached (refer to specific instructions in the full manual if available) for thorough cleaning.
5. Wipe the trimmer body with a dry or slightly damp cloth. Do not rinse the entire unit under water.
6. Ensure all parts are completely dry before reassembling or storing.

## 6.2 Oiling the Blades

To maintain the sharpness and smooth operation of the blades, apply a few drops of the supplied shear oil after every few uses, or when you notice the blades becoming less smooth.

1. Apply 1-2 drops of shear oil evenly across the top of the blades.
2. Turn the trimmer on for a few seconds to allow the oil to distribute.
3. Wipe off any excess oil with a clean cloth.

# 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted. Travel lock is activated.	Charge the trimmer. Deactivate the travel lock (refer to full manual for specific button combination, usually press and hold power button).

Problem	Possible Cause	Solution
Poor cutting performance.	Blades are dirty or clogged with hair. Blades are not oiled. Blades are dull.	Clean the blades thoroughly. Apply shear oil to the blades. Contact customer support for blade replacement or service.
Trimmer makes unusual noise.	Blades are not properly aligned or oiled. Internal malfunction.	Clean and oil the blades. Ensure they are correctly seated. Discontinue use and contact customer support.

## 8. SPECIFICATIONS

**Model Name:** SHBSB 800 A1

**Item Model Number:** SILVERCREST® SHBSB 800 A1

**Power Source:** Mains or Battery Operated

**Battery Type:** Lithium-ion (800 mAh, 3.7 V)

**Operating Time (full charge):** Approx. 60 minutes

**Charging Time:** Approx. 90 minutes

**Input Voltage (Power Adapter):** 100–240 V ~ 50/60 Hz

**Cutting Lengths (with combs):** 3, 6, 9, 12, 20, 30 mm

**Fine Adjustment Levels:** 0.8, 1.1, 1.4, 1.7, 2.0 mm

**Speeds:** Normal, Turbo

**Blade Material:** Titanium coating with Ceramic blade

**Body Material:** Plastic, Nylon

**Color:** Black

**Approximate Dimensions:** 4.5 x 4.5 x 18.1 cm (L x W x H)

**Weight:** Approx. 205 g

**Manufacturer:** SILVERCREST®

## 9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Silvercrest website. Keep your proof of purchase for warranty claims.

**Manufacturer:** SILVERCREST®

**Model:** SHBSB 800 A1

**Date First Available on Amazon.com.be:** April 19, 2023

© 2024 Silvercrest. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.