

FLEXISPOT B0C2Y3645L

FLEXISPOT Comhar 55" Electric Standing Desk with Drawers (White) Instruction Manual

INTRODUCTION

This manual provides essential instructions for the assembly, operation, maintenance, and troubleshooting of your FLEXISPOT Comhar 55-inch Electric Standing Desk. Please read this manual thoroughly before use to ensure proper function and safety.



The FLEXISPOT Comhar 55-inch Electric Standing Desk, showcasing its spacious desktop, integrated drawer, and control panel.

SAFETY INFORMATION

- Do not exceed the desk's maximum weight capacity of 154 lbs (70 kg).
- Exercise caution during assembly and operation. Keep hands and objects clear of moving parts.
- Ensure the desk is placed on a level surface.
- Keep children and pets away from the desk during operation. Utilize the child lock feature when not in use.
- Do not attempt to modify the desk's structure or electrical components.

SETUP

The FLEXISPOT Comhar desk features an innovative quick-install design, significantly simplifying the assembly process. A factory-installed crossbeam reduces setup time, allowing for completion in approximately 5 minutes.

Assembly Steps:

1. Unpack all components and verify against the included parts list.
2. Place the desktop upside down on a soft, clean surface to prevent scratches.
3. Attach the desk legs to the pre-installed crossbeam and desktop using the provided hardware.
4. Connect all necessary cables according to the diagram in the separate quick start guide.
5. Carefully flip the desk upright with assistance and position it in your desired location.

OPERATING INSTRUCTIONS

Height Adjustment

The desk's electric motor allows for smooth height adjustments. Use the up and down arrow buttons on the control panel to move the desk to your desired height. The height can be adjusted from 28.7 inches to 48 inches.



The desk offers a wide height adjustment range, allowing users to easily switch between sitting and standing positions.

Memory Presets

The control panel includes four programmable height presets. To save a height:

1. Adjust the desk to your desired height.
2. Press the 'M' button (or similar memory set button, refer to quick start guide).
3. Press one of the numbered preset buttons (1, 2, 3, or 4) until you hear a beep or see the display confirm.

To recall a saved height, simply press the corresponding numbered preset button.

Child Lock

Activate the child lock feature to prevent accidental height adjustments. Locate the child lock button on the control panel and press it to engage or disengage the lock.

Integrated USB Charging Ports


The desk is equipped with integrated USB-A and USB-C ports for convenient charging of mobile devices. Note that these ports may temporarily pause charging while the desk height is being adjusted. Laptop charging is not supported through these ports.



The control panel features a digital display, height adjustment buttons, four programmable memory presets, a child lock, and integrated USB-A and USB-C charging ports.

Storage Drawer

A pull-out drawer is integrated into the desktop, providing discreet storage for small office supplies and personal items. Gently pull the drawer to open and push to close.

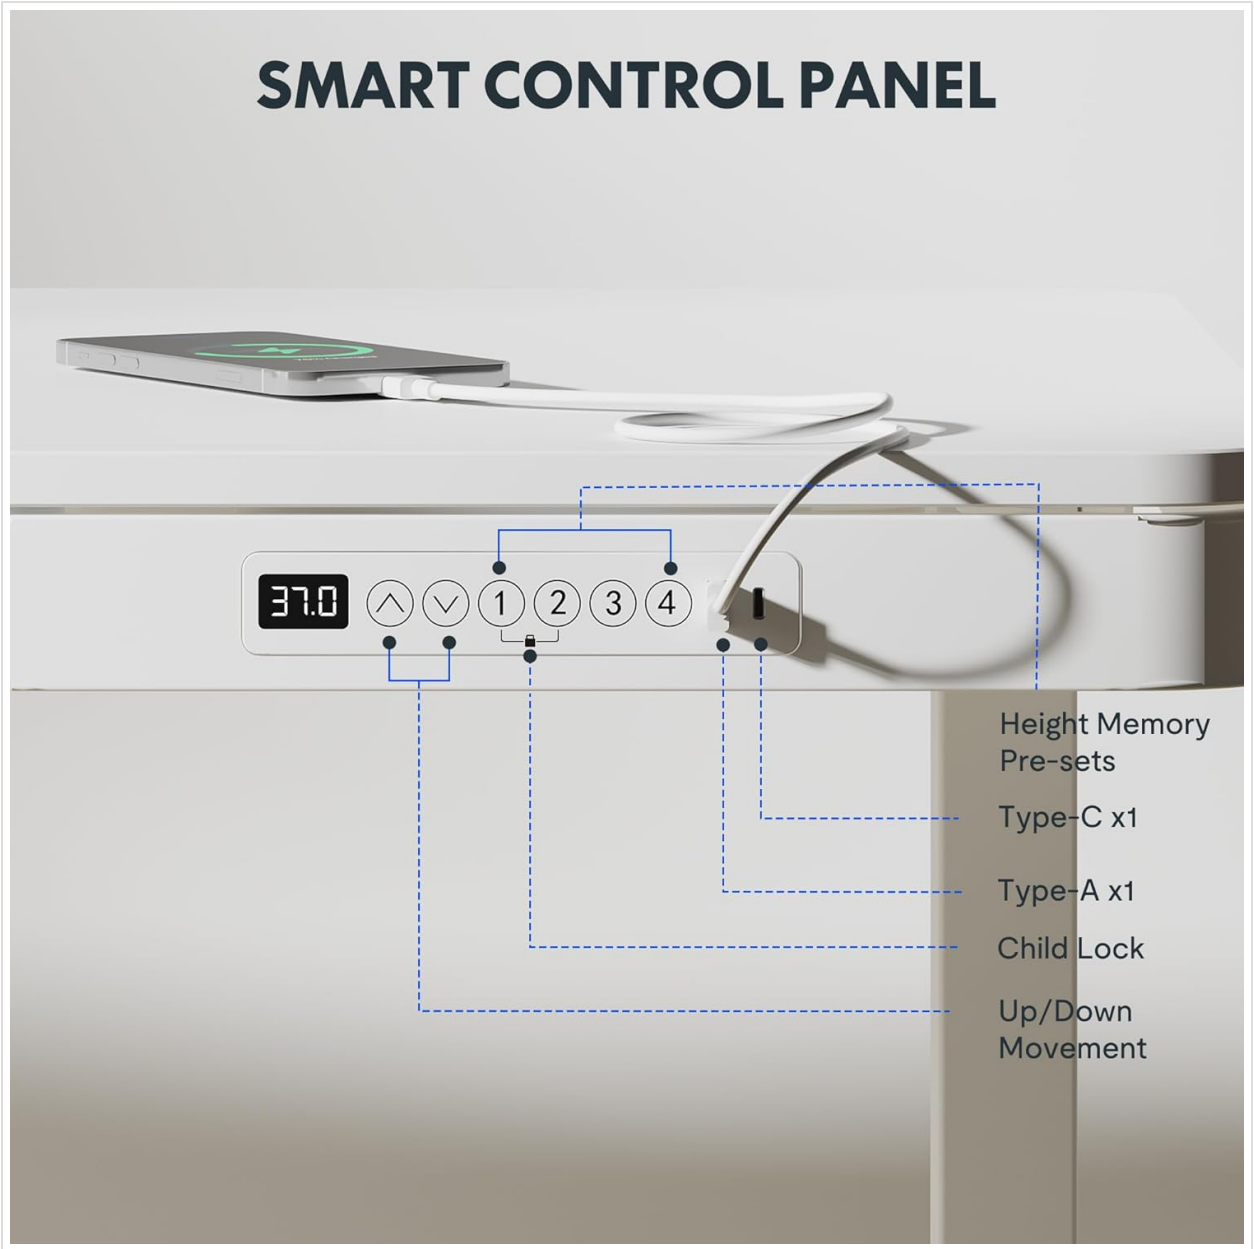

The convenient pull-out drawer provides integrated storage for office essentials, keeping your workspace organized.

Anti-Collision Feature

The desk is equipped with an anti-collision system. If the desk encounters an obstacle during height adjustment, it will automatically stop and reverse slightly to prevent damage or injury.



SPACIOUS DESK DRAWER

An embeded drawer for your desktop essentials

The anti-collision system automatically detects obstacles during height adjustment, stopping and reversing to prevent damage or injury.

MAINTENANCE

- Regularly wipe the desktop and frame with a soft, damp cloth. Avoid abrasive cleaners.
- Check all screws and connections periodically to ensure they are secure.
- Keep the motor and electrical components free from dust and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk does not move or respond to controls.	Power cable disconnected; Child lock engaged; Motor overload; Control panel malfunction.	Check power connection. Disengage child lock. Unplug desk for 10 minutes, then plug back in. Reduce weight on desk. If problem persists, contact support.

Problem	Possible Cause	Solution
USB ports not charging.	Desk is adjusting height; Device not compatible; Cable issue.	Wait for desk movement to complete. Ensure device is compatible with USB charging. Try a different USB cable. Note: Laptop charging is not supported.
Desk makes unusual noises.	Loose components; Obstruction.	Check all screws and ensure they are tightened. Inspect for any obstructions under or around the desk.

SPECIFICATIONS



Detailed dimensions of the desk, illustrating the desktop size and the adjustable height range from 28.9 inches to 46.5 inches.

Feature	Detail
Brand	FLEXISPOT

Feature	Detail
Model Name	Standing Desk (Comhar)
Model Number	B0C2Y3645L
Color	White
Product Dimensions (D x W x H)	23.8" x 47.3" x 47.6" (Overall)
Desktop Size	55" x 28" (approximate working surface)
Height Adjustment Range	28.7" to 48" (including 2.6" tabletop thickness)
Maximum Weight Capacity	154 Pounds (70 kg)
Item Weight	113 Pounds (51.3 kg)
Desktop Material	Wood
Base Material	Metal (Alloy Steel)
Special Features	Electric Height Adjustment, Integrated Drawer, USB-A & USB-C Charging Ports, 4 Memory Presets, Child Lock, Anti-Collision System
Assembly Required	Yes (Quick Assembly)
Included Components	Built-in USB Port, All Assembly Tools

 



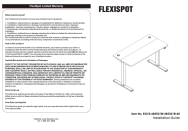 
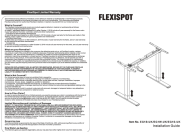 
WARRANTY

This FLEXISPOT Comhar Electric Standing Desk comes with a Limited Warranty. For specific terms and conditions, please refer to the warranty documentation included with your product or visit the official FLEXISPOT website.

SUPPORT

If you encounter any issues or have questions regarding your FLEXISPOT Comhar Electric Standing Desk that are not addressed in this manual, please contact FLEXISPOT customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.

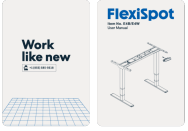Related Documents - B0C2Y3645L

	<p>FlexiSpot E4B/E4W Electric Standing Desk User Manual</p> <p>Comprehensive user manual for the FlexiSpot E4B/E4W electric standing desk, covering specifications, assembly instructions, keypad operation, troubleshooting, and warranty information.</p>
	<p>FlexiSpot M7L-US Computer Riser Installation Guide and Warranty</p> <p>Official installation guide and limited warranty information for the FlexiSpot M7L-US Sit-Stand Desktop Workstation. Learn how to assemble, use, and understand the warranty terms for your FlexiSpot computer riser.</p>
	<p>FlexiSpot EM7L Motorized Computer Riser Installation Guide</p> <p>Comprehensive installation guide for the FlexiSpot EM7L Motorized Computer Riser. Features include specifications, parts list, step-by-step assembly instructions, troubleshooting tips, and limited warranty information.</p>
	<p>FlexiSpot Q3G-1206-EU Electric Standing Desk User Manual</p> <p>Comprehensive user manual and installation guide for the FlexiSpot Q3G-1206-EU electric standing desk, covering specifications, assembly, operation, safety, and troubleshooting.</p>
	<p>FlexiSpot EG1S/EG1W/EG1B Series Height-Adjustable Desk: Installation Guide & Limited Warranty</p> <p>Comprehensive installation guide and limited warranty details for FlexiSpot EG1S, EG1W, and EG1B series height-adjustable desks, covering setup, specifications, troubleshooting, and warranty coverage.</p>
	<p>FlexiSpot Height Adjustable Desk EG1B/EG1W/EG1S Series Installation Guide and Limited Warranty</p> <p>Comprehensive guide for installing FlexiSpot height adjustable desks (EG1B/EG1W/EG1S series), including detailed steps, specifications, warranty information, and troubleshooting tips.</p>