

[Manuals.plus](#) /

› [FLEXISPOT](#) /

› FLEXISPOT 55" Electric Standing Desk User Manual

## FLEXISPOT ET118\_ALL

# FLEXISPOT 55" Electric Standing Desk User Manual

MODEL: ET118\_ALL

### Important Safety Information

---

Please read this manual thoroughly before assembly and operation to ensure safe and proper use of your FLEXISPOT Electric Standing Desk.

- Desk components may arrive in separate packages. Please ensure all packages are received before beginning assembly.
- Use caution when cleaning to avoid water damage to electrical components and to prevent personal injury.
- Keep children and pets away from the desk during operation to prevent accidents.
- Do not overload the desk. The maximum weight capacity is 154 lbs.

### Product Overview

---

The FLEXISPOT 55" Electric Standing Desk is designed to provide a versatile and ergonomic workspace for your home office. It features an electric height adjustment mechanism, integrated storage, and convenient USB charging ports.



Figure 1: FLEXISPOT 55" Electric Standing Desk (Maple Top + White Frame)

This desk allows you to effortlessly switch between sitting and standing positions, promoting a healthier work routine. The spacious one-piece desktop provides ample room for your professional and entertainment equipment.

## Setup and Assembly

---

Your FLEXISPOT Electric Standing Desk is designed for quick and straightforward assembly. All necessary assembly tools are included in the package. It is recommended for one person to assemble the desk.

# DESK DIMENSIONS



Figure 2: Desk Components and Dimensions

Follow the step-by-step instructions provided in the separate assembly guide included with your product. Ensure all connections are secure before operating the desk.

## Operating Instructions

### Height Adjustment

The desk features an electric motor lift mechanism for smooth height adjustment. The height can be adjusted from 28.7" to 48" (including the 2.6" thickness of the tabletop).

- **Manual Adjustment:** Use the Up/Down arrow buttons on the control panel to raise or lower the desk to your desired height.
- **Programmable Presets:** The desk comes with four programmable height presets. To save a preferred height, adjust the desk to the desired level, then press and hold one of the numbered preset buttons (1, 2, 3, or 4) until the display confirms the setting.
- **Child Lock:** Activate the child lock feature to prevent accidental adjustments. Refer to the control panel diagram for

the child lock button location.



Figure 3: Smart Control Panel with USB Ports and Presets

## USB Charging

Integrated USB ports (Type-A and Type-C) allow you to charge up to three devices directly from the desk. Note that USB ports may pause charging while adjusting desk height, and laptop charging is not supported.

## Key Features

---

### Spacious One-Piece Desktop

The desk features a generous 55" x 28" one-piece desktop, providing ample space for multiple monitors, keyboards, and other office essentials. Its robust construction supports a weight capacity of 154 lbs.

### Convenient Storage Drawer

A pull-out drawer is seamlessly embedded into the desktop, offering integrated storage for your home office supplies. This modern design keeps your belongings neatly organized and out of sight.

# SPACIOUS DESK DRAWER

An embeded drawer for your desktop essentials



Figure 4: Integrated Storage Drawer

## Anti-Collision Technology

The desk is equipped with an anti-collision system that detects obstacles during height adjustment. If an obstruction is encountered, the desk will automatically stop and reverse slightly to prevent damage or injury.



Figure 5: Anti-Collision Feature

## Maintenance

To ensure the longevity and optimal performance of your FLEXISPOT Electric Standing Desk, follow these maintenance guidelines:

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid abrasive cleaners or excessive moisture, especially near electrical components.
- **Cable Management:** Periodically check and secure all cables underneath the desk to prevent tangling or damage.
- **Regular Checks:** Ensure all screws and bolts remain tightened. If any looseness is detected, tighten immediately.

## Troubleshooting

If you encounter any issues with your desk, please refer to the following common troubleshooting steps:

| Problem                                               | Possible Cause                                                 | Solution                                                                                         |
|-------------------------------------------------------|----------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| Desk does not move or respond to controls.            | Power cable disconnected;<br>Child lock activated; Overload.   | Check power connections; Deactivate child lock;<br>Reduce weight on desk.                        |
| Desk moves unevenly or makes unusual noises.          | Loose connections; Obstruction;<br>Uneven weight distribution. | Check and tighten all assembly connections; Remove any obstructions; Redistribute weight evenly. |
| Height presets are not saving or recalling correctly. | Incorrect saving procedure.                                    | Ensure you press and hold the preset button until the display confirms the setting.              |

If the issue persists after attempting these solutions, please contact FLEXISPOT customer support for further assistance.

## Specifications

Detailed technical specifications for your FLEXISPOT Electric Standing Desk:

| Feature                                   | Detail                                           |
|-------------------------------------------|--------------------------------------------------|
| Brand                                     | FLEXISPOT                                        |
| Model Number                              | ET118_ALL                                        |
| Product Dimensions (D x W x H)            | 28"D x 55"W x 28.7"H                             |
| Color                                     | Maple/White                                      |
| Top Material Type                         | Maple Wood                                       |
| Base Material                             | Alloy Steel                                      |
| Minimum Height                            | 28.7 Inches                                      |
| Maximum Height                            | 48 Inches (121.9 Centimeters)                    |
| Maximum Weight Recommendation             | 154 Pounds                                       |
| Number of Drawers                         | 1                                                |
| Included Components                       | Integrated USB Ports, Convenient Pull-out Drawer |
| Lifting Mechanism                         | Electric                                         |
| Required Assembly                         | Yes                                              |
| Recommended Number of People for Assembly | 1                                                |
| Includes All Assembly Tools               | Yes                                              |

## Warranty and Support

FLEXISPOT is committed to providing high-quality products. For specific warranty details, please refer to the warranty card included with your product or visit the official FLEXISPOT website.

**Return Policy:** This product is eligible for a 30-day refund/replacement policy from the date of purchase, as per

Amazon's terms.

For any product inquiries, technical support, or warranty claims, please contact FLEXISPOT customer service directly. Contact information can typically be found on the manufacturer's website or on your purchase documentation.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

## Answered questions about this manual

**I purchased a Flexispot 55" standing desk (Model: EC38EP1D3-1-650560) and it has stopped raising. The letters 'ASR' appear on the control panel. How do I fix this and raise the desk?**

The "ASR" code on your Flexispot control panel indicates that the desk is in Reset Mode. This often happens after a power outage, if the desk is unplugged, or if the system detects an...

[Read full answer](#)