

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [HOOBRO](#) /

> HOOBRO BF30USF01 C-Shaped Side Table with Charging Station User Manual

HOOBRO BF30USF01

HOOBRO BF30USF01 C-Shaped Side Table with Charging Station User Manual

Model: BF30USF01

INTRODUCTION

Thank you for choosing the HOOBRO BF30USF01 C-Shaped Side Table. This versatile end table is designed to enhance your living space with its convenient C-shaped design, integrated charging station, and practical storage solutions. This manual provides detailed instructions for assembly, operation, and maintenance to ensure optimal use and longevity of your product.

SAFETY INFORMATION

Please read and understand all safety warnings before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- Keep the foldable end table away from water, fire, and high-temperature environments.
- For safety reasons, children are not allowed to climb on or play with the end table.
- Ensure all connections for the charging station are secure before use.
- Do not overload the table; the maximum weight recommendation is 50 pounds.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- 1 x C-Shaped End Table with Charging Station
- 1 x Accessory Kit (screws, nuts, etc.)
- 1 x Allen Key
- 1 x Instructions Manual

ASSEMBLY INSTRUCTIONS

Assembly is straightforward and typically takes about 15 minutes. Follow these steps carefully:

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out and compare them against

the parts list in the included instructions to ensure everything is present.

2. **Assemble the Frame:** Using the provided Allen key and screws from the accessory kit, connect the metal frame components. Ensure all screws are finger-tightened initially.
3. **Attach the Tabletop:** Secure the rustic brown tabletop to the top of the assembled frame. The tabletop features a foldable section; ensure it is correctly oriented.
4. **Install the Charging Station:** Mount the charging station unit into its designated slot on the side of the table. Secure it with the provided screws.
5. **Insert the Fabric Bag:** Place the black fabric storage bag into the lower section of the table frame. Ensure it is properly seated and supported.
6. **Tighten All Screws:** Once all components are in place, go back and securely tighten all screws. Do not overtighten.
7. **Adjust Feet:** The table is equipped with four adjustable feet. Turn them to level the table on uneven surfaces and prevent wobbling.



Figure 1: Product dimensions and key features diagram.



Figure 2: Fully assembled HOOBRO C-Shaped Side Table.

PRODUCT FEATURES

- **C-Shaped Design:** The unique C-shape allows the table to slide easily under sofas, beds, or chairs, bringing the tabletop closer for convenience in small spaces.
- **Integrated Charging Station:** Features one 120V/12A AC outlet and two 5V/2A USB ports, powered by a 4.9-foot cord, allowing simultaneous charging of multiple electronic devices.
- **Foldable Tabletop:** The tabletop can expand from 15.3"L x 10.2"W to 15.3"L x 20.6"W, providing additional surface area when needed.
- **Fabric Storage Bag:** A removable cloth bag offers extra storage for magazines, remote controls, or other small items, helping to keep your space tidy.
- **Stable and Firm Construction:** Constructed with quality engineered wood boards and thick metal pipes, ensuring reliability and stability. Four adjustable feet provide balance on various floor types.



- 1 AC Outlets -
120V/12A



- 2 USB Ports -
5V/2A



- Power Cord -
4.9-Foot



Figure 3: Detail of the integrated charging station.



Figure 4: The foldable section of the tabletop.



Figure 5: The removable fabric storage bag.

OPERATING INSTRUCTIONS

- **Using the Charging Station:** Plug the table's power cord into a standard wall outlet. The AC outlet and USB ports are then ready for use. Connect your electronic devices to charge them.
- **Adjusting the Tabletop:** To expand the tabletop, gently lift the foldable section and extend it outwards. To fold it back, lift slightly and push it inwards until it aligns with the main tabletop.
- **Positioning the Table:** Slide the C-shaped base under your sofa, bed, or chair to bring the tabletop closer to you for comfortable access to your items.

MAINTENANCE

To maintain the appearance and functionality of your HOOBRO C-Shaped Side Table, follow these simple care instructions:

- **Cleaning:** Wipe the table surfaces with a dry cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the engineered wood.
- **Electrical Components:** Ensure the charging station remains dry. Do not attempt to clean the electrical outlets with liquids.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

TROUBLESHOOTING

If you encounter any issues with your side table, refer to the following common solutions:

- **Table is Wobbly:** Check that all assembly screws are securely tightened. Adjust the four leveling feet at the bottom of the frame to stabilize the table on uneven floors.
- **Charging Station Not Working:** Ensure the table's power cord is fully plugged into a functional wall outlet. Verify that the devices you are trying to charge are properly connected to the AC outlet or USB ports. Test the outlet with another device to confirm power.
- **Foldable Top is Stiff:** If the foldable tabletop is difficult to move, ensure no debris is caught in the hinges. A small amount of silicone spray (avoiding contact with wood) can help if hinges are stiff.
- **Missing Parts:** If you find any parts missing during assembly, please contact HOOBRO customer service with your purchase details for assistance.

SPECIFICATIONS

Feature	Specification
Brand	HOOBRO
Model Name	HOOBRO BF30USF01
Product Dimensions (D x W x H)	15.3"D x 20.6"W x 24.4"H
Item Weight	11.2 Pounds
Maximum Weight Recommendation	50 Pounds
Frame Material	Metal
Top Material Type	Engineered Wood

Feature	Specification
Color	Rustic Brown + Black
AC Outlet	120V/12A
USB Ports	2 (5V/2A)
Power Cord Length	4.9-Foot
Care Instructions	Wipe with Dry Cloth

WARRANTY AND SUPPORT

HOOBRO products are manufactured with quality and customer satisfaction in mind. For warranty information, technical support, or assistance with parts, please refer to the contact information provided with your purchase or visit the official HOOBRO website. Please have your model number (BF30USF01) and purchase date ready when contacting support.