

[manuals.plus](#) /› [Parrot Uncle](#) /› [Parrot Uncle 60-Inch Black Ceiling Fan with Lights and Remote \(Model F8252\) Instruction Manual](#)

Parrot Uncle F8252

Parrot Uncle 60-Inch Black Ceiling Fan with Lights and Remote (Model F8252) Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Parrot Uncle 60-inch black ceiling fan with integrated LED lighting and remote control. Please read all instructions carefully before beginning installation and retain this manual for future reference.

This ceiling fan is designed for both indoor and outdoor (covered patio) use, featuring a powerful DC motor, reversible blades, and dimmable LED light with adjustable color temperature.



Image: The Parrot Uncle 60-inch black ceiling fan with its remote control, installed in a modern living space.

SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these basic precautions:

- Read all instructions and safety information before installing your fan and save these instructions.
- All wiring must be in accordance with national and local electrical codes. Consult a qualified electrician if you are unsure about wiring.
- Before installation, disconnect power by turning off the circuit breakers at the main fuse box or circuit panel.
- Ensure the installation site allows the fan blades to rotate without obstruction and that the blades are at least 7 feet (2.1 meters) from the floor.
- The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 35 lbs (15.9 kg). Use only UL/ETL listed outlet boxes marked 'FOR FAN SUPPORT'.
- Do not operate the fan with damaged power cords or plugs.
- Avoid placing objects in the path of the blades.
- Do not use the fan with a dimmer switch not specifically designed for ceiling fans.

PACKAGE CONTENTS

Verify that all components listed below are included in your package:

- Ceiling Fan Motor Housing
- Fan Blades (6 pieces)
- Integrated LED Light Kit
- Remote Control
- Downrods (4-inch and 10-inch options)
- Mounting Bracket
- Hardware Pack (screws, wire nuts, washers)
- Instruction Manual

**60
INCHES**

LARGE CEILING FAN WITH LIGHT



Matte Black Metal Body



Dual Finished Blades - Coffee & Brown



2 Downrods (L 4" & 10")



Image: A detailed diagram illustrating the fan's dimensions (60" diameter, 14" height) and key components such as the matte black metal body, dual-finished blades (coffee/brown), and the two included downrods (4" and 10").

SPECIFICATIONS

Feature	Specification
Model Number	F8252
Brand	Parrot Uncle
Size	60 Inches (Diameter)
Product Dimensions	60"L x 60"W x 14"H
Color	Black
Material	Engineered Wood (Blades), Iron (Housing)
Motor Type	DC Motor
Light Source Type	Integrated LED
LED Wattage	Max 24 Watts
Brightness	1500 Lumen
Color Temperature	3000K (Warm), 4000K (Natural), 5700K (Bright)
Control Method	Remote Control
Fan Speeds	6 Levels
Special Features	Dimmable Light, Adjustable Color Temperature, Reversible Motor, Timer Function
Indoor/Outdoor Usage	Indoor, Outdoor (Covered Patio)
Installation Type	Downrod Mount
Voltage	120 Volts
Certifications	ETL Listed

INSTALLATION

1. Pre-Installation Checks

- Ensure power is disconnected at the circuit breaker.
- Confirm the ceiling outlet box is rated for fan support (minimum 35 lbs).
- Gather all necessary tools: screwdriver, wire strippers, electrical tape, ladder.

2. Mounting the Bracket

Attach the mounting bracket to the ceiling outlet box using the screws provided with the outlet box. Ensure the bracket is securely fastened.

3. Assembling the Downrod and Fan Motor

Select either the 4-inch or 10-inch downrod based on your ceiling height and preference. Feed the fan wires through the downrod. Secure the downrod to the fan motor housing according to the diagrams in the separate

installation guide (not included in this manual).

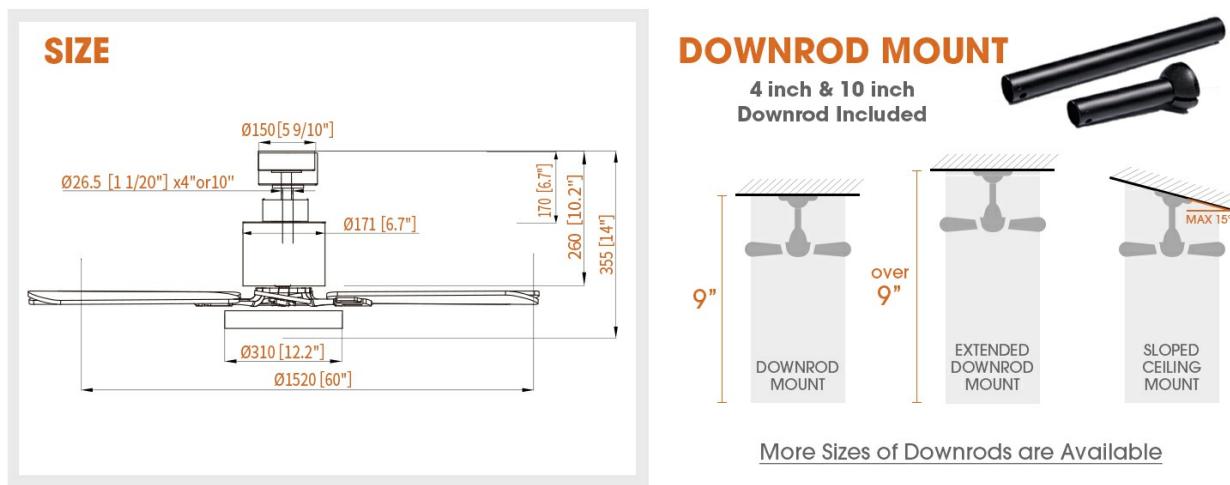


Image: This diagram shows various downrod mounting configurations, including standard downrod mount, extended downrod mount, and sloped ceiling mount (up to 15 degrees), indicating the fan's adaptability to different ceiling types.

4. Hanging the Fan

Carefully lift the fan assembly and hang it from the mounting bracket. This typically involves placing the downrod ball into the bracket's opening.

5. Wiring Connections

Connect the fan's electrical wires to the household wiring according to the color codes (typically black to black, white to white, and green/bare copper to ground). Ensure all connections are secure with wire nuts and electrical tape. The remote receiver will also need to be wired in line with the fan's power supply.

6. Attaching Fan Blades

Attach each fan blade to the motor housing using the provided screws. Ensure all screws are tightened securely.

7. Installing the LED Light Kit

Connect the LED light kit wires to the fan motor's light wires. Secure the LED light kit to the bottom of the fan housing. Some models use magnetic attachment for ease of installation.



Image: A close-up view of the integrated LED light module, highlighting its sleek design and how it integrates with the fan's body.

OPERATING INSTRUCTIONS

Your Parrot Uncle ceiling fan is operated using the included remote control. Ensure the remote has two LR03/AAA 1.5 Volt batteries installed (not included).

REMOTE CONTROL FOR YOUR CONVENIENCE


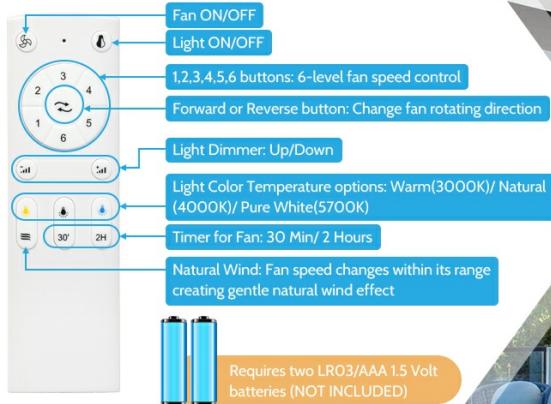


Image: The remote control for the fan, showing buttons for fan ON/OFF, light ON/OFF, 6-level fan speed, forward/reverse rotation, light dimmer, light color temperature options (3000K/4000K/5700K), and timer settings (30 min/2 hours).

1. Fan Operation

- Fan ON/OFF:** Press the fan icon button to turn the fan on or off.
- Fan Speed:** Use buttons 1-6 to select desired fan speed, with 6 being the highest.
- Reversible Motor:** Press the forward/reverse button to change the direction of blade rotation. This feature allows for downdraft (cooling) in summer and updraft (warm air circulation) in winter.
- Timer Function:** Press the '30 min' or '2H' button to set the fan to automatically shut off after 30 minutes or 2 hours.

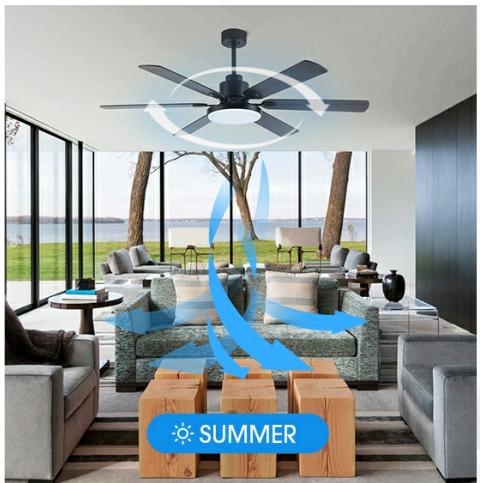

COOLING & AIR CIRCULATION

The reversible motor allows you to change the direction of the fan for optimal airflow during different seasons.

In the summer, the downdraft mode helps cool the room, while in the winter, the updraft mode helps to circulate warm air.

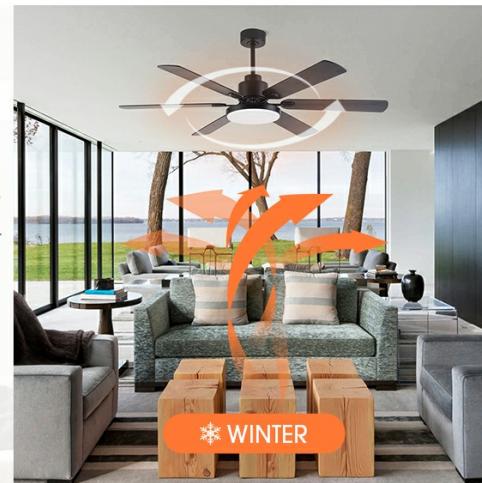


Image: This graphic demonstrates the reversible motor's function, showing clockwise rotation for warm air circulation in winter and counter-clockwise rotation for cooling in summer.

2. Light Operation

- Light ON/OFF:** Press the light bulb icon button to turn the light on or off.
- Light Dimmer:** Use the up/down arrow buttons to adjust the light brightness from 1% to 100%.
- Color Temperature Adjustment:** Press the '3000K', '4000K', or '5700K' buttons to switch between Warm White, Natural White, and Bright White light color temperatures.

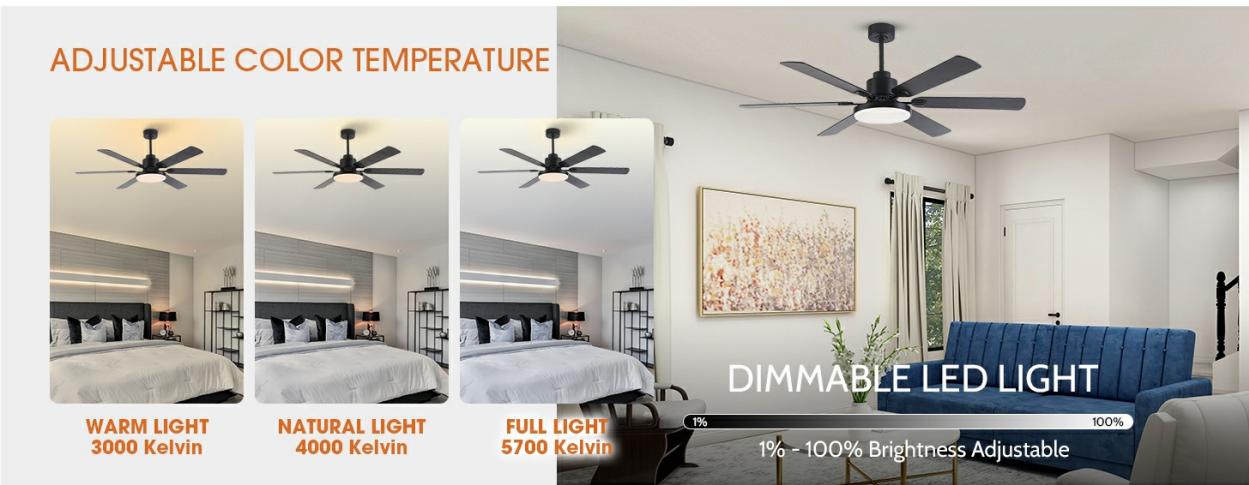


Image: This image displays the fan's integrated LED light capabilities, demonstrating the adjustable color temperature settings from 3000 Kelvin (warm light) to 5700 Kelvin (bright light), and its dimmable range from 1% to 100% brightness.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your ceiling fan.

- **Cleaning:** To clean the fan, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish or electrical components.
- **Blade Cleaning:** Dust the fan blades regularly to prevent dust buildup, which can affect fan balance and air circulation.
- **Tightening Screws:** Periodically check all screws on the fan and mounting hardware to ensure they are tight. Loose screws can cause noise or wobble.
- **No Lubrication Needed:** The fan's motor is permanently lubricated and does not require oiling.

TROUBLESHOOTING

If you experience issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low or not paired.	Check circuit breaker; Verify all wire connections are secure; Replace remote battery or re-pair remote.
Fan wobbles	Loose blade screws; Loose mounting bracket; Unbalanced blades.	Tighten all blade screws; Ensure mounting bracket is secure; Use a balancing kit (not included) if necessary.
Light does not work	Loose wire connection to light kit; Faulty LED module.	Check light kit wiring; Contact customer support for LED module replacement if faulty.
Remote control not working	Dead batteries; Remote not paired with receiver; Obstruction between remote and receiver.	Replace batteries; Follow pairing instructions (refer to separate remote manual); Ensure clear line of sight.

Problem	Possible Cause	Solution
Fan is noisy	Loose screws; Motor noise; Blades hitting an obstruction.	Tighten all screws; Ensure no obstructions; If motor noise persists, contact customer support.



Image: This graphic highlights the fan's whisper-quiet operation, rated at 35dB, which is comparable to library learning, ensuring minimal disturbance for sleep or daily activities.


WARRANTY AND SUPPORT

Parrot Uncle offers a comprehensive warranty and customer support for your ceiling fan:

- **30-Day Free Return and Exchange:** If you are not satisfied with your purchase, you may return or exchange the product within 30 days.
- **One-Year Free Replacement Parts Service:** Enjoy one year of free replacement parts service for any manufacturing defects.
- **Lifetime Professional Customer Service:** For any questions or assistance, please do not hesitate to reach out to Parrot Uncle's professional customer service team.

For support, please visit the [Parrot Uncle Store on Amazon](#) or contact their customer service directly.

Related Documents - F8252

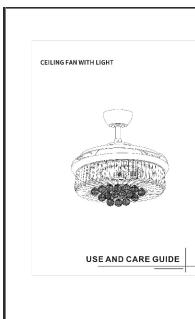	<p>Ceiling Fan with Light: Installation, Operation, and Care Guide Detailed installation, operation, and troubleshooting guide for the Parrotuncle Ceiling Fan with Light. Includes safety precautions, wiring instructions, remote control functions, and maintenance tips.</p>
--	---

 USE AND CARE GUIDE	<p>Parrot Uncle F8231110V Ceiling Fan: Installation, Operation & Troubleshooting Guide</p> <p>Comprehensive installation, operating, and troubleshooting guide for the Parrot Uncle F8231110V ceiling fan, including safety tips, component identification, wiring, remote operation, dimensions, and maintenance instructions.</p>
 USE AND CARE GUIDE	<p>Parrot Uncle F8232 65-Inch Crystal LED Ceiling Fan Installation and Operation Manual</p> <p>Comprehensive installation and operating instructions for the Parrot Uncle F8232 65-inch crystal LED ceiling fan with DC motor and remote control. Includes safety guidelines, parts list, installation steps, remote functions, troubleshooting, and care instructions.</p>
	<p>Parrot Uncle F3502Q110V/F3502BK110V/F3502WH110V Ceiling Fan Installation and Operating Manual</p> <p>Comprehensive installation and operating guide for Parrot Uncle F3502Q110V, F3502BK110V, and F3502WH110V ceiling fans. Includes safety precautions, parts list, step-by-step assembly instructions, wiring diagrams, and maintenance advice.</p>
	<p>Parrot Uncle F4706Q110V/F4706BK110V Ceiling Fan Installation and Operation Manual</p> <p>Installation and operating instructions for the Parrot Uncle Mateo 42-inch indoor chrome downrod mount retractable chandelier ceiling fan with light kit and remote control. Includes safety tips, parts list, assembly steps, wiring diagrams, and troubleshooting advice.</p>
 USE AND CARE GUIDE	<p>Parrot Uncle BBCPD1719-1 Ceiling Fan Installation and Operating Guide</p> <p>Comprehensive installation and operating instructions for the Parrot Uncle BBCPD1719-1 ceiling fan, including safety information, parts list, wiring diagrams, troubleshooting, and care instructions.</p>