

[manuals.plus](#) /

› [Saneen](#) /

› [Saneen Digital Camera X3 User Manual](#)

Saneen X3

Saneen Digital Camera X3 User Manual

Model: X3 | Brand: Saneen

1. INTRODUCTION

Thank you for choosing the Saneen Digital Camera X3. This compact and versatile camera is designed for users of all ages and skill levels, offering high-quality photography and video recording capabilities. With its 44 Megapixel sensor, 2.7K video resolution, and 16X digital zoom, you can capture memorable moments with clarity and detail. This manual provides essential information for setting up, operating, and maintaining your camera.



Figure 1.1: Front view of the Saneen Digital Camera X3.

2. WHAT'S IN THE Box

Please check the package contents to ensure all items are present:

- Saneen Digital Camera X3
- 32GB SD Card
- Two Rechargeable Batteries
- Type C USB Cable
- Lanyard
- Camera Bag
- Instruction Manual (this document)



Figure 2.1: Package contents of the Saneen Digital Camera X3.

3. SETUP

3.1. Battery Installation

1. Pull down to open the battery bay cover located on the bottom of the camera.
2. Pull down the battery buckle inside the compartment.
3. Insert a rechargeable battery into the compartment, ensuring it is aligned with the surface of the camera.
Incorrect insertion may prevent charging.
4. Close the battery bay cover securely.

3.2. SD Card Installation

1. With the battery installed, locate the SD card slot next to the battery compartment.
2. Insert the 32GB SD card with the metal contacts facing the front of the camera and the "orange side" consistent with the camera side, until it clicks into place.
3. To remove, gently press the SD card until it springs out.



Figure 3.1: Instructions for battery and SD card installation.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

Press and hold the power button (usually located on the top of the camera) to turn the camera on or off.

4.2. Mode Selection

Use the mode button or selector (often labeled with icons for video, photo, and playback) to switch between different functions.

Your browser does not support the video tag.

Video 4.1: Demonstrates how to select different modes (video, photo, playback) on the camera.

4.3. Photo Mode

In Photo Mode, press the shutter button halfway to focus, then press fully to capture an image. The camera supports various photo resolutions up to 44MP.



Figure 4.1: Available video and photo resolutions.

4.4. Video Mode

In Video Mode, press the shutter button to start recording. Press it again to stop. The camera supports FHD 2.7K video resolution.

4.5. Digital Zoom

Use the W/T buttons (Wide/Telephoto) to adjust the 16X digital zoom while in photo or video mode. This allows you to magnify your subject.



Figure 4.2: Digital Zoom functionality.

Your browser does not support the video tag.

Video 4.2: Demonstrates the 16X digital zoom feature of the camera.

4.6. Flash Light

The camera features a built-in flash. To activate or deactivate the flash, press the dedicated flash button (often indicated by a lightning bolt icon) or navigate through the camera's menu settings. The flash ensures clear images even in low-light conditions.



Figure 4.3: Built-in Flash Light operation.

4.7. Self-Timer

The self-timer function allows you to set a delay (e.g., 3s, 5s, 10s) before a photo is taken, useful for group shots or selfies. Access this feature through the camera's menu.



Figure 4.4: Self-Timer options.

4.8. Continuous Shooting (Burst Mode)

Activate continuous shooting mode to capture a rapid sequence of photos, ideal for action shots. This feature is accessible via the camera's menu.



Figure 4.5: Continuous Shooting mode.

4.9. Webcam Functionality

The Saneen Digital Camera X3 can function as a webcam. Connect the camera to your computer using the provided USB cable. In your computer's settings, select the camera as your webcam device for video calls or live streaming.



Figure 4.6: Camera used as a webcam.

Your browser does not support the video tag.

Video 4.3: Demonstration of connecting the camera to a computer for webcam use.

4.10. Viewing Photos and Videos

To view captured photos and videos directly on the camera, switch to Playback Mode. Use the navigation buttons to scroll through your media.

Your browser does not support the video tag.

Video 4.4: How to review images and navigate through media on the camera.

4.11. Transferring Files

You have several options for transferring your photos and videos:

- **View on Computer:** Connect the camera to your computer via the USB cable. Select "USB Mode" on the camera to access files.
- **Take out SD Card:** Remove the SD card from the camera and insert it into a card reader connected to your computer.
- **View on Phone:** Upload photos from your camera to a computer, then use a cable to transfer them to your phone.



Figure 4.7: Options for viewing and transferring media.

5. FEATURES OVERVIEW

- High Resolution:** 44 Megapixel photos and 2.7K Full HD video.
- Digital Zoom:** 16X digital zoom for capturing distant subjects.
- Multi-functional:** Burst shooting, pause function, self-timer (3s/5s/10s), and built-in flash.
- Webcam Capability:** Connects to PC for video calls and live streaming.
- Compact Design:** Lightweight and easy to carry, suitable for beginners, teens, and adults.
- Long Battery Life:** Includes two 1200mAh rechargeable batteries.

6. MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.
- Battery Care:** Fully charge batteries before first use. Do not expose batteries to fire or extreme heat.
- SD Card Care:** Format the SD card periodically to maintain optimal performance. Back up important files before formatting.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Low or dead battery; incorrectly installed battery.	Charge the battery fully. Ensure the battery is inserted correctly.
Cannot take photos/videos.	SD card full; SD card not inserted; camera in wrong mode.	Delete unnecessary files or replace SD card. Insert SD card correctly. Switch to Photo or Video mode.
Images are blurry.	Insufficient light; camera shake; dirty lens.	Use flash or shoot in brighter conditions. Hold camera steady or use a tripod. Clean the lens.
Cannot connect to computer as webcam.	Incorrect USB mode; computer settings.	Ensure camera is in USB mode. Select the camera as the webcam in your computer's settings.
Video playback is choppy.	Slow SD card; computer performance.	Use a high-speed SD card. Ensure your computer meets minimum requirements for video playback.

8. SPECIFICATIONS

Feature	Detail
Model Name	X3
Photo Sensor Resolution	44 MP
Video Resolution	2.7K (FHD), 1080p

Feature	Detail
Digital Zoom	16X
Screen Size	2.4 Inches
Display Type	LCD
Image Stabilization	Digital
Supported File Format	JPEG (Image), MP4 (Video)
Memory Storage	32 GB SD Card (included)
Battery Type	Lithium Ion (1200mAh)
Connectivity	USB 2.0
Special Features	Time-lapse, Continuous Shooting, Self-Timer, Built-in Flash, Webcam Function
Item Weight	0.21 Kilograms

9. WARRANTY AND SUPPORT

Saneen provides a one-year satisfaction warranty for your Digital Camera X3. This includes a no-hassle replacement policy for any manufacturing defects or issues encountered during normal use. For technical assistance, troubleshooting, or warranty claims, please contact Saneen customer support through the retailer where you purchased the product or visit our official website.

Please retain your proof of purchase for warranty validation.