

Manuals.plus /

› AIDITIYMI /

› AIDITIYMI LR03 XL-6046 Replacement Remote Control Instruction Manual for ONN DVD Players

AIDITIYMI XL-6046

AIDITIYMI LR03 XL-6046 Replacement Remote Control Instruction Manual

Model: XL-6046 | Brand: AIDITIYMI

1. INTRODUCTION

This manual provides comprehensive instructions for the AIDITIYMI LR03 XL-6046 replacement remote control. This remote is designed to be compatible with ONN DVD player models ONA18DP001 and ONA19DP005. Please read this manual carefully before using the remote control to ensure proper operation and longevity.

2. PRODUCT FEATURES

- **Model Number:** LR03 100008761 100093892 XL-6046
- **Compatibility:** Specifically designed for ONN DVD models ONA18DP001 and ONA19DP005.
- **No Programming Required:** Ready to use immediately after battery insertion.
- **Material:** Constructed from high-quality ABS materials for durability.
- **Ergonomic Design:** Features an ergonomic shape for comfortable handling.
- **Connectivity:** Infrared (IR) technology.
- **Maximum Range:** Up to 10 meters (approximately 33 feet).

3. SETUP

3.1 Battery Installation

The remote control requires AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with

the markings inside the compartment.

4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Note: No programming is required. The remote is ready for use immediately after battery installation.



Image 1: Front view of the AIDITIYMI LR03 XL-6046 Replacement Remote Control. Shows the layout of buttons including power, numbers, navigation, playback controls, and volume.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

To operate your ONN DVD player with this remote control, point the remote directly at the infrared sensor on your DVD player. Ensure there are no obstacles between the remote and the DVD player's sensor.

- **Power Button:** Press the red power button (usually located at the top left) to turn the DVD player on or off.
- **Number Buttons (0-9):** Use these to select tracks, chapters, or input numerical values.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Use these to navigate menus and confirm selections.
- **Playback Controls (Play/Pause, Stop, Rewind, Fast Forward, Previous, Next):** Control media playback.
- **Volume Buttons (VOL+, VOL-):** Adjust the volume of your connected audio system (if controlled by the DVD player).
- **Mute Button:** Mute or unmute the audio.
- **Setup Button:** Access the DVD player's setup menu.
- **Menu/Title Button:** Access the disc menu or title menu.
- **Return Button:** Go back to the previous menu or screen.



Image 2: Angled view of the AIDITIYMI LR03 XL-6046 Replacement Remote Control, highlighting its ergonomic design and button layout.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in water.

5.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

5.3 Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage and potential damage to the remote control.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstacles between the remote control and the DVD player's infrared sensor.
 - Make sure you are within the maximum operating range (up to 10 meters).
- **Intermittent response:**
 - Batteries may be low; replace them.
 - Ensure a clear line of sight to the DVD player.
- **Remote works for some functions but not others:**
 - Verify that your DVD player model is listed as compatible (ONA18DP001, ONA19DP005).
 - Some functions might be specific to the original remote or not supported by your DVD player.

7. SPECIFICATIONS

Feature	Detail
Brand	AIDITIYMI
Model Number	LR03 100008761 100093892 XL-6046
Compatible Devices	ONN DVD ONA18DP001, ONA19DP005
Connectivity Technology	Infrared (IR)
Special Feature	Ergonomic Design
Color	Black
Battery Type	2 x AAA (not included)
Maximum Range	10 Meters (33 feet)
Item Weight	1.55 Ounces (approx. 44 grams)

8. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your AIDITIYMI LR03 XL-6046 replacement remote control, please contact the seller or manufacturer directly. Specific warranty details may vary by retailer or region. Please retain your proof of purchase for warranty claims.

While this remote is designed for broad compatibility with the specified ONN DVD models, performance

may vary slightly depending on the specific unit and its age.