



[Manuals.plus](#) /

› [FOTOSOK](#) /

› FOTOSOK 71" Pantry Cabinet Instruction Manual

## FOTOSOK FTSPB161US

# FOTOSOK 71" Pantry Cabinet Instruction Manual

Model: FTSPB161US

## INTRODUCTION

Thank you for choosing the FOTOSOK 71" Pantry Cabinet. This versatile storage solution is designed to enhance organization in various rooms, including kitchens, dining rooms, and living areas. Its classic black finish and adjustable shelving provide both aesthetic appeal and practical functionality.



Image: The FOTOSOK 71" Pantry Cabinet, a tall black storage unit with gold handles, positioned in a modern kitchen.

## SAFETY INFORMATION

To ensure safe use and prevent tipping, it is crucial to secure the pantry cabinet to a wall using the provided anti-tip kit. Always follow the installation instructions carefully.

- Do not allow children to climb on the cabinet.
- Distribute weight evenly on shelves to prevent imbalance.
- Ensure all connections are tightened securely during assembly.







Image: Detail showing the gold metal handle, a magic door lock mechanism, and the wall mount device for securing the cabinet.

## COMPONENTS AND PARTS LIST

---

Before beginning assembly, verify that all parts are present and undamaged. Refer to the included instructions for a detailed list of components and hardware.

- Cabinet panels (top, bottom, sides, back)
- Adjustable shelves (4 included)
- Doors (4 included)
- Gold metal handles
- Hinges and magnetic door locks
- Anti-tip kit
- Assembly hardware (screws, dowels, cam locks, etc.)

## SETUP AND ASSEMBLY

---

The FOTOSOK Pantry Cabinet is designed for straightforward assembly. Clear step-by-step illustrations and labeled parts are provided to guide you through the process. While one person can assemble most of the unit, it is recommended to have a second person assist when attaching the top and bottom sections for stability and ease.

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Identify each part using the labels and the provided diagram.
3. Follow the numerical sequence in the instruction manual for step-by-step assembly.
4. Attach hinges and handles securely to the doors and cabinet frame.
5. Install adjustable shelves at desired heights.
6. Once assembled, secure the cabinet to the wall using the anti-tip kit.



Image: A visual guide illustrating the adjustable shelf layers and various configuration options for the pantry cabinet.

## OPERATING THE PANTRY CABINET

This pantry cabinet offers versatile storage with its adjustable shelves and multiple compartments. The design allows for organized storage of kitchen appliances, cookbooks, pots, pans, and other items, keeping them dust-free behind closed doors.

- **Adjustable Shelves:** The cabinet features 4 adjustable shelves that can be moved up or down to accommodate items of varying heights. This flexibility allows for customized storage solutions.
- **Open Countertops:** Two open countertop areas provide convenient space for frequently used items or small appliances like microwaves.
- **Door Access:** The four doors ensure that stored items remain out of sight and protected from dust.







Image: An interior view of the FOTOSOK pantry cabinet, showcasing its various compartments and adjustable shelves filled with kitchen items like plates, bowls, and food containers.

## Official Product Video: FOTOSOK Kitchen Pantry Cabinet

Your browser does not support the video tag.

Video: An official product video from FantiYa Home (Seller) demonstrating the features and various uses of the FOTOSOK Kitchen Pantry Cabinet, including its storage capacity and design.

## MAINTENANCE

To maintain the appearance and longevity of your FOTOSOK Pantry Cabinet, follow these simple maintenance guidelines:

- Wipe surfaces regularly with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- Promptly clean up any spills to prevent moisture damage to the engineered wood.
- Periodically check all screws and connections to ensure they remain tight.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Cabinet feels wobbly or unstable.	Loose connections; not secured to wall.	Tighten all assembly screws. Ensure the anti-tip kit is properly installed and secured to a wall stud.
Doors do not close properly.	Misaligned hinges; obstruction.	Adjust hinges as per assembly instructions. Check for any items blocking the door closure.
Missing parts during assembly.	Packaging error.	Contact customer support with your purchase details and the specific missing parts.

## SPECIFICATIONS

- **Brand:** FOTOSOK
- **Model Number:** FTSPB161US
- **Color:** Black
- **Product Dimensions:** 15.8"D x 23.6"W x 71"H
- **Material:** Engineered Wood
- **Number of Shelves:** 4 (adjustable)
- **Number of Doors:** 4
- **Item Weight:** 90.3 Pounds
- **Weight Limit:** 90.3 Pounds (overall)
- **Mounting Type:** Floor Mount (with anti-tip kit for wall attachment)

- **Assembly Required:** Yes



Image: A detailed diagram illustrating the height, width, and depth measurements of the FOTOSOK 71" Pantry Cabinet, including internal shelf dimensions.

## WARRANTY AND SUPPORT

FOTOSOK is committed to providing quality products. For any issues, missing parts, or questions regarding your pantry cabinet, please contact our customer support team. We offer a 30-day easy return policy for eligible purchases. For assistance, please refer to the contact information provided with your purchase or visit the official FOTOSOK store on Amazon: [FOTOSOK Amazon Store](#).

