

## Replacement Remote Control

# User Manual

Replacement Remote Control for Pioneer Car Audio Receivers

## PRODUCT OVERVIEW

This manual provides instructions for the Generic Replacement Remote Control, designed for use with various Pioneer Car Bluetooth CD RDS AV Receivers. This remote is an infrared (IR) replacement and does not require any setup or code programming.



Figure 1: Front view of the remote control, displaying buttons for volume, mute, track/seek, audio, display, band/ESC, function, source, and navigation.



Figure 2: Back view of the remote control, featuring a smooth, ergonomic design.

## SETUP

This replacement remote control is designed for immediate use with compatible Pioneer car audio receivers. No programming or pairing is required.

## Battery Installation

The remote control requires **2 CR2 batteries** (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover by sliding it down or pressing the release tab.
3. Insert the 2 CR2 batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover until it clicks securely into place.



Figure 3: Detailed view of the remote's button layout for reference during operation.



Figure 4: Back view of the remote control, potentially showing the battery compartment area and an included clip.

## OPERATING INSTRUCTIONS

Point the remote control directly at the infrared sensor on your Pioneer car audio receiver. Ensure there are no obstructions between the remote and the receiver.

### Key Functions:

- **Volume +/-:** Adjusts the audio volume level.
- **MUTE:** Mutes or unmutes the audio output.
- **BAND/ESC:** Changes the radio band (FM1, FM2, AM, etc.) or acts as an escape/back button in menus.
- **TRACK/SEEK (<< / >>):** Skips to the previous/next track or seeks radio stations.
- **AUDIO:** Accesses audio settings (e.g., bass, treble, balance).
- **DISP:** Changes the display information on the receiver.
- **FUNCTION:** Cycles through various functions or modes.

- **SRC (Source):** Selects the audio source (e.g., Radio, CD, USB, Bluetooth, AUX).
- **Navigation Buttons (Up, Down, Left, Right, LIST/ENTER):** Used for menu navigation and selection.
- **Play/Pause (||):** Controls playback for media sources.
- **SCROLL (-SCROLL):** Used for scrolling through lists or options.

## MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's range decreases or it stops responding. Always replace both batteries at the same time.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Disposal:** Dispose of used batteries according to local regulations.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new CR2 batteries, ensuring correct polarity.
Remote has short range or intermittent response.	Low batteries; Obstruction between remote and receiver; Remote not pointed directly at receiver's IR sensor.	Replace batteries; Remove obstructions; Point remote directly at the receiver.
Some buttons do not work.	Remote not compatible with specific receiver function; Damaged remote.	Ensure your receiver model is listed as compatible. If issues persist, the remote may be faulty.
Remote works for some functions but not others.	Compatibility issue with specific receiver model or function.	Verify your specific Pioneer receiver model is fully compatible with this replacement remote. Refer to your receiver's original manual for remote control functions.

## SPECIFICATIONS

- **Product Type:** Infrared (IR) Replacement Remote Control
- **Brand:** Generic
- **Color:** Black
- **Power Source:** 2 x CR2 Batteries (not included)
- **Connectivity Technology:** Infrared (IR)
- **Compatible Pioneer Models:**
  - DEH-X1853UB
  - DXT-X1869UB
  - DEH-X2690UI
  - DEH-X3690UI
  - FH-X369UB
  - DEH-X4690BT

- MVH-X365BT
  - DEH-X8500BS
  - DEH-X8500BH
  - And other compatible Pioneer Car Bluetooth CD RDS AV Receivers as listed in the product title.
- **Manufacturer:** SZHKHXD
  - **ASIN:** B0C2Z3BGPK
  - **First Available:** April 19, 2023

## WARRANTY AND SUPPORT

---

As this is a generic replacement product, specific warranty details may vary. Please refer to the seller's return policy on the purchase platform for information regarding returns or replacements.

For any issues or inquiries, please contact the seller directly through the platform where the purchase was made. Ensure your current remote is the same as the one pictured in the product listing to confirm compatibility before contacting support.

*Note: "No instructions included" was stated in the product description. This manual provides general guidance for typical remote control operation.*