

CDA-7837, CDA-7837E, CDA-7838, CDA-7842, CDA-7842R, CDA-7965, CDA-D852, CDA-D855, CDA-D857, MDA-7755, MDA-W750

Generic Wireless Remote Control User Manual

For Alpine CD Car Stereo Systems

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Generic Wireless Remote Control. This remote is designed as a replacement for various Alpine CD Car Stereo System models. Please ensure your original remote or car stereo model is listed in the compatibility section to guarantee full functionality.

Compatible Alpine Models: CDA-7837, CDA-7837E, CDA-7838, CDA-7842, CDA-7842R, CDA-7965, CDA-D852, CDA-D855, CDA-D857, MDA-7755, MDA-W750.

2. PRODUCT OVERVIEW

The remote control features a standard layout for easy navigation and control of your Alpine car stereo. Familiarize yourself with the button functions described below.



Figure 2.1: Front View of the Remote Control. This image displays the front of the remote, highlighting its ergonomic design and the arrangement of its buttons, including power, band, setup, audio, mute, return, source, volume controls,

track navigation, numeric keypad, and menu options.



Figure 2.2: Replacement Functionality. This image illustrates that the Generic remote (left) is a functional replacement for similar remotes (right), offering all necessary functions for compatible Alpine car stereo systems.



Figure 2.3: Back View and Battery Compartment. The back of the remote control is shown, revealing the battery compartment cover and a small plastic clip, likely for mounting or storage.

3. SETUP

This remote control requires batteries for operation. No complex setup or programming is needed; simply insert the batteries, and the remote is ready for use with compatible Alpine car stereo systems.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control (refer to Figure 2.3).
2. Slide the battery compartment cover open.
3. Insert **two (2) CR2 batteries**, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Close the battery compartment cover securely.

Note: Batteries are not included with the remote control and must be purchased separately.

4. OPERATING INSTRUCTIONS

Point the remote control directly at the infrared receiver on your Alpine car stereo system. Ensure there are no obstructions between the remote and the stereo.

- **PWR (Power):** Turns the car stereo system on or off.
- **VOL+ / VOL-:** Increases or decreases the volume level.
- **BAND:** Switches between radio bands (e.g., FM1, FM2, AM).
- **SRC (Source):** Changes the audio source (e.g., CD, Radio, AUX).
- **MUTE:** Mutes or unmutes the audio output.
- **SETUP / MENU:** Accesses the system's setup or menu options.
- **Arrow Buttons (UP, DOWN, LEFT, RIGHT):** Navigates through menus and selections.
- **Numeric Keypad (0-9):** Directly selects tracks, radio presets, or enters numerical values.
- **Play/Pause, Skip (▶▶|), Reverse (|◀◀), Stop (■):** Controls playback for CD or other media sources.
- **RETURN:** Goes back to the previous menu or screen.
- **CLR (Clear):** Clears input or cancels a selection.

5. MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote's surface. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or buttons become unresponsive. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If not used for an extended period, remove the batteries to prevent leakage.

6. TROUBLESHOOTING

If you encounter issues with your remote control, try the following solutions:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote and the car stereo's IR receiver.
 - Make sure you are within the effective range of the remote control.
- **Specific Buttons Not Working:**
 - Clean the remote's surface, especially around the unresponsive buttons, to remove any dirt or

debris.

- If only certain buttons are affected, it might indicate internal damage. Consider replacing the remote.

- **Incorrect Functionality:**

- Verify that your car stereo model is listed as compatible with this remote control. This remote is a direct replacement and does not require programming. If your model is not listed, it may not be compatible.

7. SPECIFICATIONS

Product Type	Wireless IR Replacement Remote Control
Brand	Generic
Compatible Devices	Alpine CD Car Stereo Systems (models listed in Section 1)
Power Source	2 x CR2 Batteries (not included)
Color	Black
Special Feature	Ergonomic design

8. WARRANTY AND SUPPORT

As a generic replacement product, specific warranty details may vary depending on the retailer or seller. Please refer to your purchase documentation for warranty information.

For further assistance or inquiries, please contact the seller directly through the platform where the purchase was made. Ensure you have your order number and product details ready when contacting support.