

TEMI HFD002A-22

TEMI Indoor Basketball Hoop with Electronic Scoreboard (Model HFD002A-22)

User Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your TEMI Indoor Basketball Hoop with Electronic Scoreboard. This mini basketball hoop is designed for indoor use, offering an engaging and active play experience. It features an electronic scoreboard, a spring-action detachable rim, and includes four mini basketballs and a pump.



Figure 1: Overview of the TEMI Indoor Basketball Hoop with key dimensions. The backboard measures approximately 15.3 inches wide and 11 inches high. The rim extends about 6.3 inches from the backboard.

2. PACKAGE CONTENTS

Please verify that all components listed below are included in your package. If any parts are missing or damaged, please contact customer support.



Figure 2: All parts included in the package, laid out for identification.

- Backboard (Board) × 1
- Electronic Scoreboard × 1
- Mini Basketballs × 4
- Inflator (Pump) × 1
- Door Hooks (Pothook) × 2
- Basketball Rim (Basket) × 1
- Basketball Net (Ball net) × 1
- Shim × 1
- Wrench × 1
- Medium Screws × 3
- Foam Pads × 4
- Small Screws × 4
- Bolt Drivers × 3
- Screwdriver × 1

3. SETUP AND INSTALLATION

Follow these steps to assemble and install your basketball hoop. Ensure all parts are accounted for before beginning.

1. **Attach the Rim:** Secure the basketball rim to the backboard using the provided screws and tools. Ensure it is firmly attached.
2. **Install the Net:** Attach the basketball net to the rim.
3. **Prepare the Scoreboard:** Open the battery compartment on the electronic scoreboard. Insert 3 AA batteries (not included), ensuring correct polarity. Close the compartment securely.

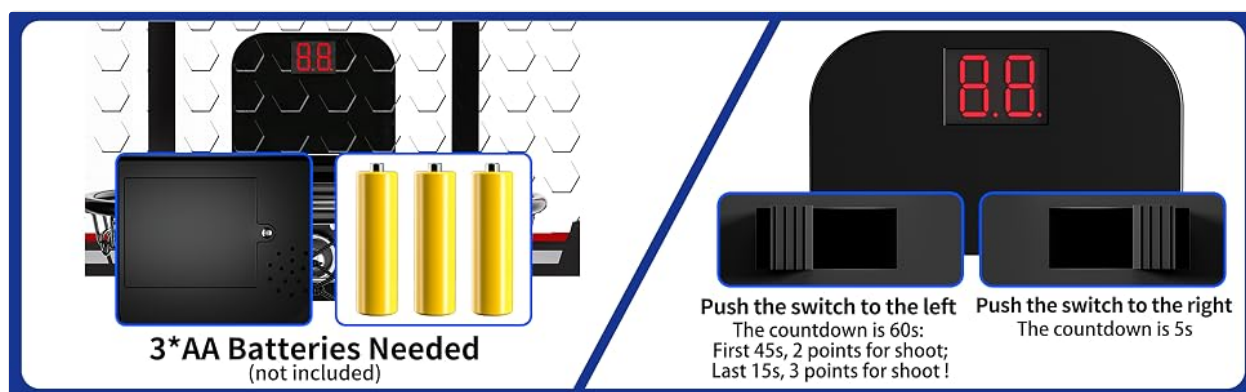


Figure 3: The electronic scoreboard requires 3 AA batteries (not included). The image also shows the two scoring mode switches.

4. **Attach Door Hooks:** Fasten the two door hooks to the top of the backboard using the designated screws.
5. **Apply Foam Pads:** Affix the four foam pads to the back of the backboard, particularly on the corners and edges that will contact the door. These pads help reduce noise and prevent scratches on your door.



Figure 4: Details of the crashproof backboard, the 2-inch door hooks designed to fit most doors, and the protective padded backboard.

6. **Mount the Hoop:** Hang the assembled basketball hoop over any standard-sized door in your home, dorm, or office. It can also be mounted on a yard railing. Ensure it is stable and secure before use.
7. **Inflate Basketballs:** Use the provided inflator to inflate the four mini basketballs to the desired firmness.

4. OPERATING INSTRUCTIONS

Your TEMI Indoor Basketball Hoop is ready for use after assembly. Here's how to operate its features:

4.1 Electronic Scoreboard

The electronic scoreboard automatically tracks scores and provides encouraging sounds. It offers two scoring modes:

- **Mode 1 (Left Switch Position):** A 60-second countdown. For the first 45 seconds, each shot is worth 2 points. During the last 15 seconds, each shot is worth 3 points.
- **Mode 2 (Right Switch Position):** A 5-second countdown for quick play.

To select a mode, push the switch on the scoreboard to the left or right as indicated in Figure 3.

4.2 Detachable Spring-Action Rim

The hoop features a detachable rim designed to simulate a real basketball experience. It can bend up to 60 degrees, allowing for dunking. After a dunk, the spring mechanism will return the rim to its original position.

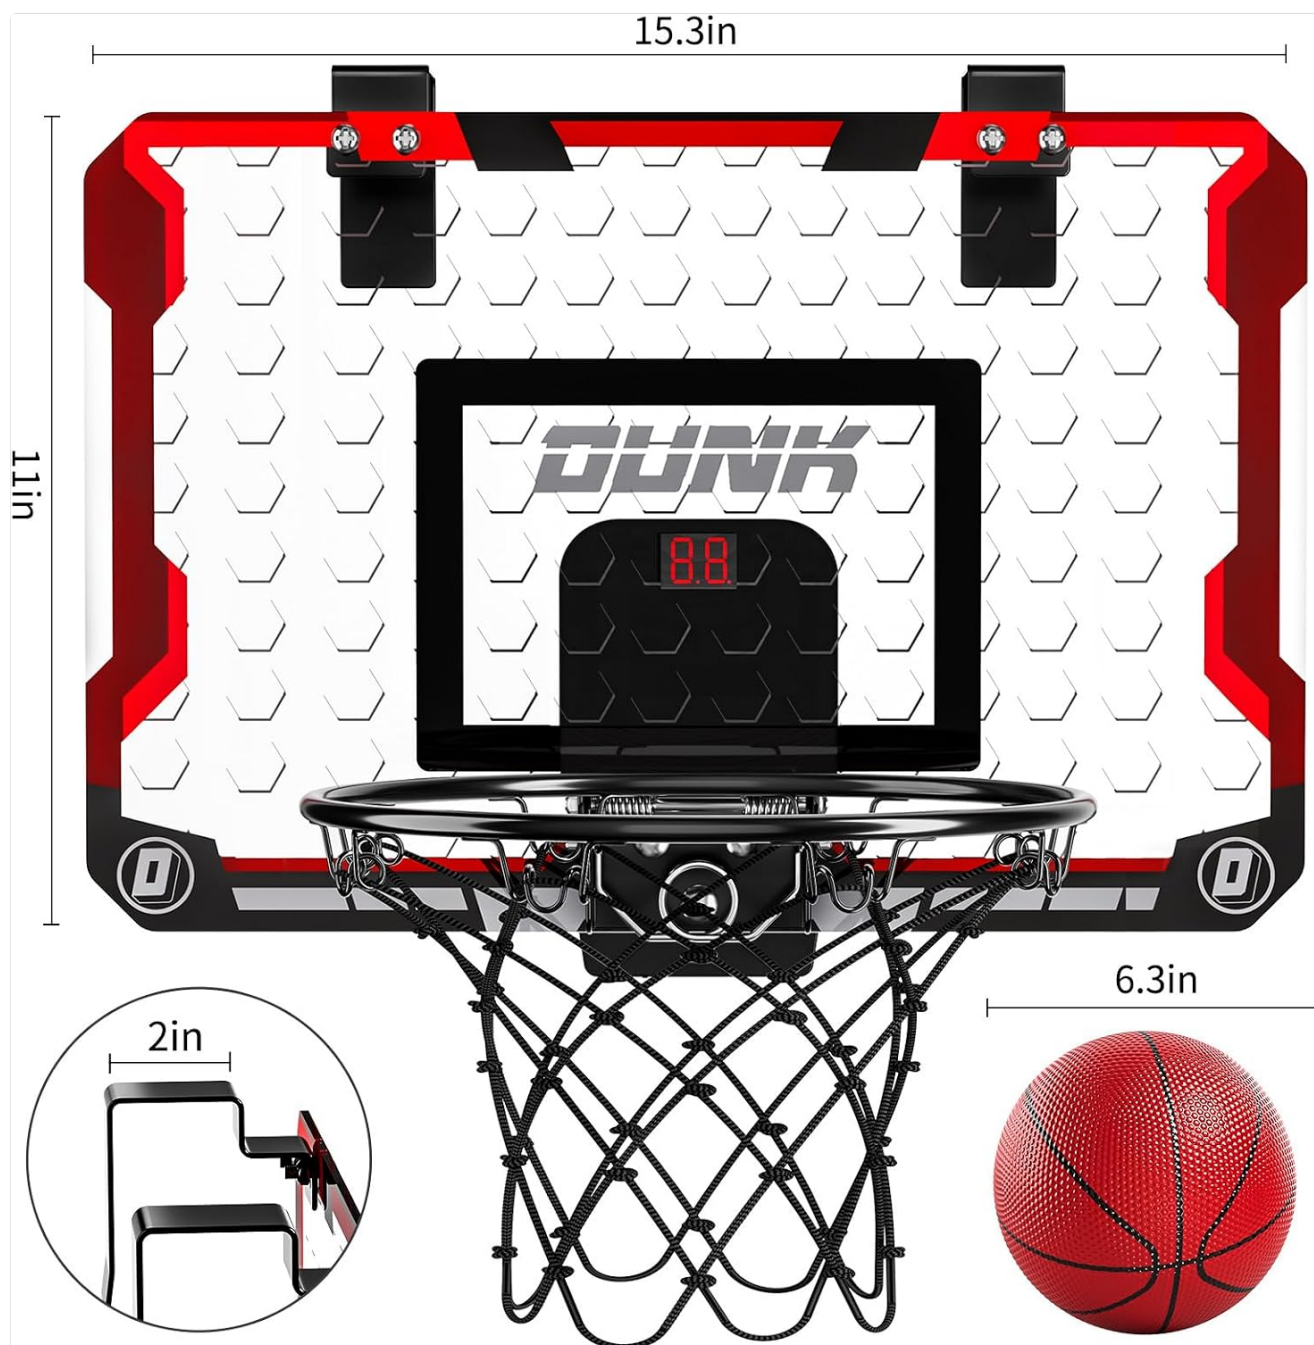


Figure 5: The spring-action rim allows for dunking, bending up to 60 degrees, and then returning to its original position.

5. MAINTENANCE

Proper care and maintenance will extend the life of your basketball hoop.

- **Cleaning:** Wipe the backboard and rim with a soft, damp cloth. Avoid abrasive cleaners that may damage the surface.
- **Storage:** When not in use, the steel rim can be folded up to save space. Store the hoop in a dry place away from direct sunlight.
- **Ball Care:** Keep the mini basketballs inflated to the recommended pressure for optimal performance.
- **Battery Replacement:** Replace the AA batteries in the scoreboard when the display dims or sounds become faint.

6. TROUBLESHOOTING

If you encounter any issues with your TEMI Indoor Basketball Hoop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Scoreboard not turning on or displaying correctly.	Dead or incorrectly installed batteries.	Check battery polarity and replace with fresh AA batteries.
Scoreboard resets during play or after a shot.	Loose batteries or poor contact due to impact.	Ensure batteries are securely seated in the compartment. If the issue persists, try adding a small piece of folded paper or foam behind the batteries to keep them snug.
Rim does not spring back after dunking.	Mechanism obstruction or damage.	Check for any debris or foreign objects obstructing the spring mechanism. Ensure the rim is not bent or damaged.
Hoop feels unstable on the door.	Improper installation or door hooks not fully engaged.	Re-check that the door hooks are securely fastened to the backboard and fully seated over the top of the door. Ensure foam pads are correctly positioned to prevent movement.

7. SPECIFICATIONS

Feature	Detail
Model Number	HFD002A-22
Brand	TEMI
Product Dimensions (L x W x H)	5.59 x 38.86 x 27.94 cm (2.2 x 15.3 x 11 inches)
Item Weight	644.1 grams (1.42 pounds)
Material	Acrylic, Metal, Aluminum
Color	Red Basketball Hoop with Scoreboard
Indoor/Outdoor Use	Indoor (can be used outdoors on a railing, but primarily designed for indoor door mounting)
Special Feature	Portable, Foldable Rim, Electronic Scoreboard
Mounting Type	Over-the-door (also referred to as Wall Mount in some specifications)
Target Audience	Children (Mixed gender)

Feature	Detail
Included Components	Backboard, Electronic Scoreboard, 4 Mini Basketballs, Pump, Door Hooks, Rim, Net, Assembly Tools

8. WARRANTY AND SUPPORT

Information regarding product warranty and customer support was not provided in the product data. Please refer to the retailer or your purchase documentation for details on warranty coverage and how to contact support for your TEMI Indoor Basketball Hoop.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question