

[Manuals.plus](#) /

› [Inspireyes](#) /

› Inspireyes Walkie Talkies for Kids Instruction Manual

Inspireyes GL-528

Inspireyes Walkie Talkies for Kids

Model GL-528 - User Instruction Manual

1. INTRODUCTION

The Inspireyes GL-528 Walkie Talkies are designed for clear, long-range communication, perfect for children aged 3-12. Featuring an upgraded built-in lithium polymer battery, these walkie talkies offer extended playtime and standby time without the need for frequent battery replacements. Their lightweight and ergonomic design makes them easy for small hands to hold and operate. With multiple channels and sub-codes, they ensure secure and private conversations, making them ideal for various indoor and outdoor activities.

2. WHAT'S IN THE BOX

- 2 x Walkie Talkies
- 2 x Type-C Charging Cables
- Lanyard
- User Manual

3. PRODUCT OVERVIEW



Figure 3.1: Inspireyes Walkie Talkies (Camouflage 2 Pack)

The Inspireyes walkie talkies feature a compact design with an ergonomic grip, making them comfortable for children to hold. Each unit includes a backlit LCD screen for clear visibility of channel and battery status, even in low light conditions. Key controls are intuitively placed for ease of use.

Key Components:

- **Antenna:** For signal transmission and reception.
- **LCD Screen:** Displays channel, battery level, and other indicators.
- **Power/Menu Button:** To turn the device on/off and access menu settings.
- **Up/Down Buttons:** To navigate menu options and change channels.
- **Push-to-Talk (PTT) Button:** Located on the side, press and hold to transmit voice.
- **Lamp Button:** Activates the built-in flashlight.
- **SOS Button:** Activates an emergency alarm.

- **Speaker/Microphone:** For audio output and input.
- **Type-C Charging Port:** For recharging the internal battery.
- **Belt Clip:** For attaching the walkie talkie to clothing.
- **Lanyard Loop:** For attaching the included lanyard.

4. SETUP

4.1 Charging the Walkie Talkies

USB Type-C Charging

7 Days
(Stand By)



48 Hours
(Continuous use)



**Type-C
Charging Cable**
(Included)



Figure 4.1: USB Type-C Charging in progress

Before first use, fully charge both walkie talkies. Connect the provided Type-C charging cable to the charging port on the walkie talkie and plug the other end into a USB power source (e.g., wall adapter, computer USB port). The battery indicator on the LCD screen will show charging status. A full charge provides up to 48 hours of continuous use and 7 days of standby time.

Your browser does not support the video tag.

Video 4.1: Official product video demonstrating the Inspireyes Walkie Talkies, including a brief view of the charging process and various features.

4.2 Power On/Off

To turn on the walkie talkie, press and hold the Power/Menu button until the LCD screen lights up. To turn off, press and hold the Power/Menu button again until the screen turns off.

4.3 Setting Channels and Sub-Codes

For communication, both walkie talkies must be set to the same channel and sub-code. These walkie talkies offer 22 channels and 99 sub-codes (CTCSS and DCS technology) for secure and private conversations.

1. Press the Menu button once to enter channel selection mode. The channel number will flash.
2. Use the Up/Down buttons to select your desired channel (1-22).
3. Press the Menu button again to enter sub-code selection mode. The sub-code will flash.
4. Use the Up/Down buttons to select your desired sub-code (0-99).
5. Press the Menu button to confirm your selection or wait a few seconds for it to automatically save.

5. OPERATING INSTRUCTIONS

5.1 Push-to-Talk (PTT) Communication

To speak, press and hold the PTT button on the side of the walkie talkie. Speak clearly into the microphone. Release the PTT button to listen for a response.

5.2 VOX Hands-Free Communication

A person wearing a backpack and a headlamp stands on a gravel path in a dark forest at night. A bright beam of light from a flashlight illuminates the path ahead. In the background, tall evergreen trees are silhouetted against a dark sky with a bright lightning bolt visible. The overall scene is dark and atmospheric, emphasizing the utility of the SOS Sirens device in outdoor settings.

SOS SIRENS

The SOS alarm and flashlight can be the helpful camping and survival accessory, alerting others of your location at any given time during hiking trips, camping, hunting, and other outdoor activities.

Figure 5.1: VOX Hands-Free Communication in action

The VOX (Voice Operated Exchange) function allows you to transmit without pressing the PTT button. This is useful when your hands are occupied.

1. Press the Menu button repeatedly until the VOX icon appears on the screen.
2. Use the Up/Down buttons to select the VOX sensitivity level (1-3, with 3 being the most sensitive).
3. Press the Menu button to confirm. The walkie talkie will now transmit automatically when it detects your voice.

Long Range Transmission and Crystal Clear Sound



Figure 5.2: Long Range Transmission illustration

These walkie talkies offer a long communication range:

- Up to 3 miles in open areas with no obstructions.
- Approximately 0.5 to 1 mile in typical environments with partial obstructions.

Note: Range may vary significantly depending on terrain, weather conditions, electromagnetic interference, and obstructions like buildings or dense foliage.

5.4 Flashlight & SOS Function

VOX HANDS-FREE Communication

Easier and more efficient way to communicate continuously.

Dad, come on! We're almost there!



Figure 5.3: SOS Sirens feature

The walkie talkie includes a built-in flashlight and an SOS alarm for emergency situations or low-light conditions.

- **Flashlight:** Press the 'LAMP' button to turn the flashlight on or off.
- **SOS Alarm:** Press the 'SOS' button to activate a loud emergency siren, alerting others to your location. Press again to deactivate.

5.5 Call Tone

Press the 'Call' button (often indicated by a musical note icon) to send an audible call tone to other walkie talkies on the same channel, signaling that you wish to communicate.

6. MAINTENANCE

- **Battery Care:** To prolong battery life, avoid fully discharging the walkie talkies frequently. Recharge them regularly, especially if they will not be used for an extended period.
- **Cleaning:** Use a soft, damp cloth to clean the exterior of the walkie talkies. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the walkie talkies in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** These walkie talkies are NOT water resistant. Avoid exposure to water or high humidity.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Low battery	Recharge the walkie talkie.
Cannot communicate with other units	Different channels/sub-codes	Ensure all units are on the same channel and sub-code.
Short communication range	Obstructions or interference	Move to an open area. Avoid large obstructions like buildings or hills.
Static or unclear audio	Out of range or interference	Move closer to the other unit. Change channels to avoid interference.
Buttons not responding	Keypad lock activated	Deactivate keypad lock (refer to user manual for specific button combination).

8. SPECIFICATIONS

Feature	Detail
Model Number	GL-528
Item Weight	3.07 ounces
Product Dimensions	1.29 x 2.16 x 5.9 inches
Batteries	1 Lithium Polymer battery (included)
Display Type	LCD
Number of Channels	8 (US) / 22 (EU)
Frequency Range	462.5625-462.7125 MHz

Feature	Detail
Talking Range Maximum	3 Kilometers (open area)
Voltage	3.7 Volts
Water Resistance Level	Not Water Resistant
Country of Origin	China

9. WARRANTY & SUPPORT

Warranty: This product comes with a 1-Year Warranty from the manufacturer, Inspireyes. Please retain your proof of purchase for warranty claims.

Support: For any questions, technical assistance, or warranty inquiries, please contact Inspireyes customer support through the retailer's platform or visit the official Inspireyes brand store.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question