

[Manuals.plus](#) /

> [TEMI](#) /

> [TEMI Indoor Basketball Hoop with LED Scoreboard and 4 Balls - User Manual](#)

## TEMI HFD002A-23

# TEMI Indoor Basketball Hoop with LED & Scoreboard - Instruction Manual

Model: HFD002A-23 | Brand: TEMI

## INTRODUCTION

---

This instruction manual provides detailed guidance for the assembly, operation, and maintenance of your TEMI Indoor Basketball Hoop. Designed for both kids and adults, this mini basketball hoop features an electronic scoreboard, LED lights, a breakaway rim, and comes with four mini basketballs and a pump. Please read this manual thoroughly before use to ensure safe and optimal performance.

## WHAT'S INCLUDED

---

Your TEMI Indoor Basketball Hoop package includes the following components:

- 1x Backboard with integrated LED scoreboard
- 1x Steel Rim with net
- 4x Mini Basketballs
- 1x Air Pump for basketballs
- 2x Door Hooks
- 4x Shock-proof sponge corner pads
- Necessary screws, nuts, and tools (wrench, screwdriver) for assembly



**Figure 1:** All components included in the TEMI Indoor Basketball Hoop package, including the backboard, rim, net, mini basketballs, pump, and assembly hardware.

## SETUP INSTRUCTIONS


- 1. Assemble the Rim and Scoreboard:** Attach the steel rim to the designated area on the backboard using the provided screws and nuts. Ensure all connections are secure.

Your browser does not support the video tag.

**Video 1:** Demonstration of assembling the rim and scoreboard to the backboard. This video shows the process of attaching the rim and connecting the electronic scoreboard unit.

- 2. Attach the Net:** Securely attach the basketball net to the hooks on the steel rim.
- 3. Install Door Hooks:** Attach the two door hooks to the top of the backboard using the provided screws. These hooks are designed to fit most standard doors.
- 4. Apply Corner Pads:** Place the four shock-proof sponge corner pads on the back of the backboard's corners.

These pads protect your door from scratches and reduce noise during play.

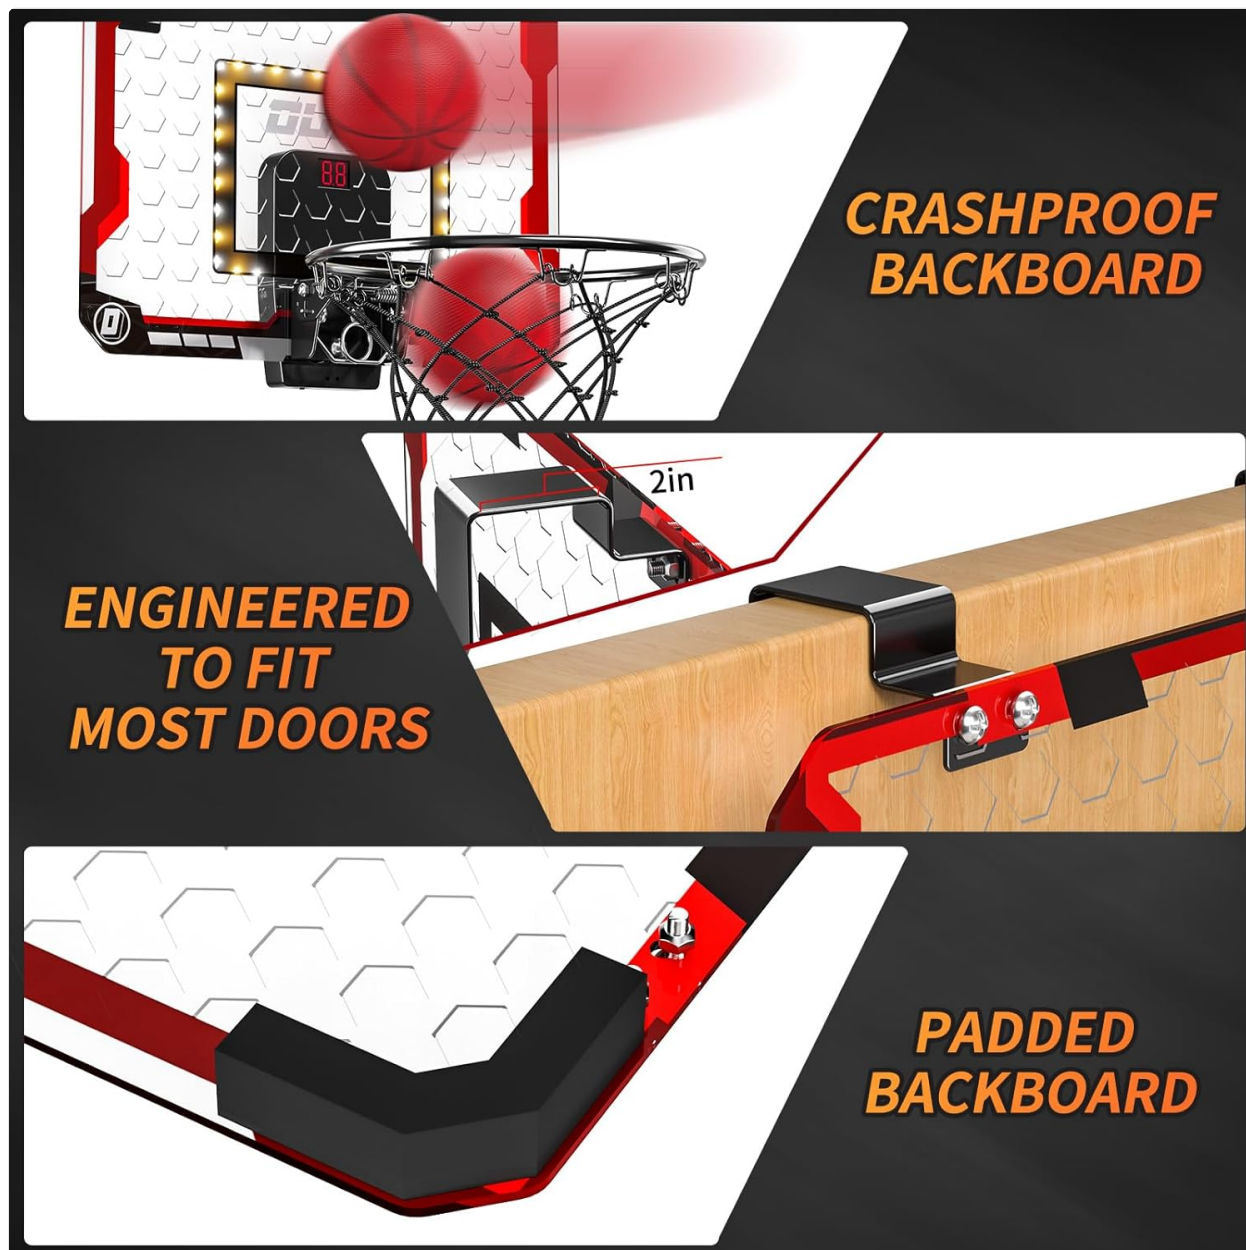

**Figure 2:** Detailed view of the crashproof backboard, engineered door hooks, and padded backboard corners designed to protect your door.

5. **Hang on Door:** Carefully hang the assembled basketball hoop over the top of any standard door. Ensure it is stable and securely positioned.
6. **Inflate Basketballs:** Use the included air pump to inflate the four mini basketballs to the recommended pressure.

## OPERATING INSTRUCTIONS

---

### Electronic Scoreboard and LED Lights

The integrated electronic scoreboard automatically tracks your score and features LED lights that illuminate upon scoring. It requires 3x AA batteries (not included).

- **Power On/Off:** Locate the power switch on the scoreboard unit to turn it on or off.

- **Scoring Modes:** The scoreboard offers two scoring modes:
  - Push the switch to the left for a 60-second countdown: 2 points for the first 45 seconds, 3 points for the last 15 seconds.
  - Push the switch to the right for a 5-second countdown.
- **Automatic Scoring:** Each successful shot through the hoop will be digitally calculated and displayed automatically, accompanied by cheering sounds.



**Figure 3:** The electronic scoreboard with LED lights, showing the digital score display and the sturdy steel rim.

### **Breakaway Rim Feature**

The hoop features a breakaway rim design, allowing it to flex up to 60 degrees. This provides a realistic basketball experience and helps prevent damage during enthusiastic play. The spring mechanism will automatically return the rim to its original position after a dunk.



**Figure 4:** The breakaway rim in action, demonstrating its flexibility and spring-back mechanism for realistic dunking.

## MAINTENANCE

- **Cleaning:** Wipe the backboard and rim with a soft, damp cloth. Avoid abrasive cleaners that may scratch the surface.
- **Ball Inflation:** Periodically check the inflation of the mini basketballs and re-inflate using the provided pump as needed.
- **Battery Replacement:** Replace the AA batteries in the scoreboard unit when the LED lights dim or the scoring function becomes inconsistent.
- **Storage:** The steel rim has a foldable design. When not in use, the rim can be folded up to save space.

Your browser does not support the video tag.

**Video 2:** A demonstration of the foldable rim feature for convenient storage when the hoop is not in use.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Scoreboard not turning on.	Batteries are dead or incorrectly installed.	Check battery orientation and replace with new AA batteries.
Scoreboard not registering shots.	Sensor obstruction or malfunction.	Ensure nothing is blocking the sensor near the rim. Check battery level.
Hoop feels unstable on the door.	Improper installation of door hooks or pads.	Re-check that door hooks are securely fastened and corner pads are correctly positioned.
Basketballs are soft.	Under-inflated.	Use the provided pump to inflate the balls to the desired firmness.

## SPECIFICATIONS

---

Feature	Detail
Brand	TEMI
Model Name	HFD002A-23
Material	Alloy Steel (Rim, Frame), Acrylic (Backboard)
Color	Red
Product Dimensions	2.2"D x 15.3"W x 11"H
Item Weight	3.8 Pounds
Indoor/Outdoor Usage	Indoor, Outdoor
Special Features	Breakaway Rim, Foldable, Shatterproof Backboard, LED & Electronic Scoreboard
Mounting Type	Door Mount
Included Components	Backboard, Rim, Net, 4 Balls, Pump, Assembly Tools

## SAFETY INFORMATION

---

- Adult supervision is recommended for young children during play.

- Do not hang or swing from the rim, as this may cause injury or damage to the product/door.
- Ensure the hoop is securely mounted before play.
- Keep small parts away from children under 3 years of age to prevent choking hazards.

## WARRANTY & SUPPORT

---

This product comes with a 1-year warranty from the date of purchase, covering manufacturing defects. For warranty claims, technical support, or any inquiries, please contact TEMI customer service through the retailer's platform or visit the official TEMI website.

*Warranty Description: 1*