

[Manuals.plus](#) /

› [datonten](#) /

› datonten Garage Door Opener Remote 3B893MAX Instruction Manual

datonten 3B893MAX

datonten Garage Door Opener Remote 3B893MAX Instruction Manual

Model: 3B893MAX

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your datonten 3B893MAX Garage Door Opener Remote. This remote is designed to offer convenient and secure access to your garage.



Image 1: datonten 3B893MAX Garage Door Opener Remote with three buttons and a visor clip.

Garage Door Opener Remote

Compatible with **LiftMaster, Chamberlain and Sears Craftsman** garage door openers manufactured from 1993
[**Not** Compatible Dip Switch Garage Door Opener]



Image 2: Overview of the remote's key features, including quick setup, multi-channel capability, reliability, and wide range, shown with a house and car.

2. COMPATIBILITY

The datonten 3B893MAX remote is compatible with LiftMaster, Chamberlain, and Sears Craftsman garage door openers manufactured from 1993 to the current year. It is essential that your garage door opener has a learn button of one of the following colors: Green, Orange, Red, Purple, or Yellow.

This remote is NOT compatible with garage door openers that use DIP switches.

Compatibility

Your opener must meet **BOTH** criteria 1 & 2 below:

Work for **1993-current** LiftMaster, Chamberlain, and Sears Craftsman brand door openers.

And opener with **purple, red, orange, yellow,** and green learn buttons

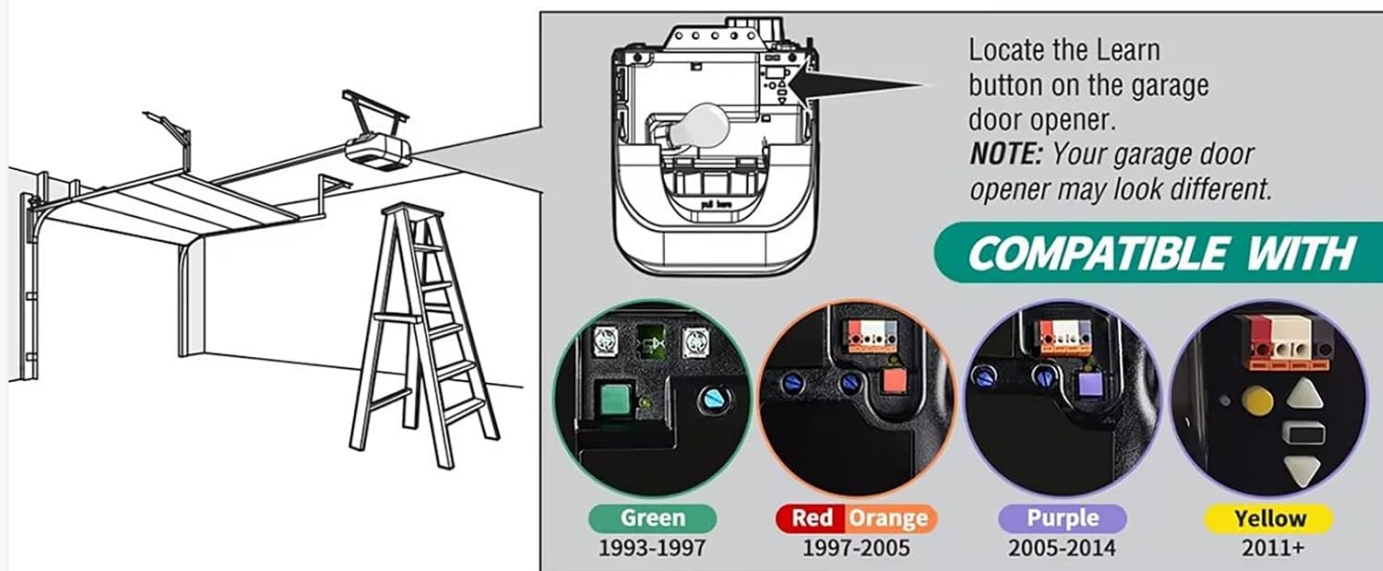


Image 3: Visual guide illustrating the location of the learn button on a garage door opener and the compatible learn button colors with their corresponding manufacturing years.

Compatibility Table

Refer to the table below to confirm your opener's compatibility based on its brand, learn button color, and manufacturing year.

Garage Door Remote Control Compatibility Guide

Garage Door Opener Brand	Color of Program/learn Button	Year	Frequency	Model
LiftMaster Chamberlain Craftsman	● ■ Green	1993-1996	390MHz	81LM 61LM KLIK1U 139.53879
LiftMaster Chamberlain Craftsman	■ Orange ■ Red	1997-2003	390MHz	91LM 92LM 94LM 96LM 971LM 972LM 973LM 973W 974LM 950CB 953CB 956CB KLIK1U HBW1255 139.53680/B 139.53681 00953680000 0095 3681000
LiftMaster Chamberlain Craftsman	■ Purple	2005-2014	315MHz	371LM 373LM 375LM 950CD 953D 956D KLIK1U 139.53753 139.18191
LiftMaster Chamberlain Craftsman	● ■ Yellow	2011-Current	310/315/390MHz	891LM 893LM 81LM 61LM 82LM 83LM 84LM 950ESTD 953EV 850CB 853CB 856CB 850CB 853CB 856CB KLIK1U 139.5370 139.53870 139.5379 139.53879 139.53800 139.53637SRT HBW1136


Image 4: Detailed compatibility table for various garage door opener models, categorized by brand, learn button color, year of manufacture, and frequency.

3. SETUP AND PROGRAMMING

Follow these steps to program your datonten 3B893MAX remote to your garage door opener. Ensure you have identified the color of your opener's learn button before starting.

Easy to set up and use

1

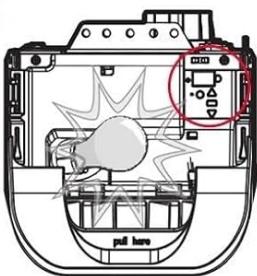

Confirm color of learn button on opener

2



Press and hold the **program button** at the **same time** the remote control until the LED on the front of the remote control turns on, then flash 4 times and off. Now turn to step 3 quick

3



Learn button color					
press times	1	2	3	3	4


Press and release the remote control button you wish to use the number of times that corresponds with the garage door opener type

4



Note : Don't miss this step !
To exit programming mode, press any remote control button **except** the button that was just programmed


5

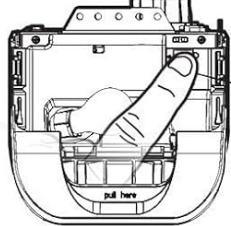

Learn Button
The Learn LED will light Within 30 seconds

Press and release the learn button on the garage door opener

6

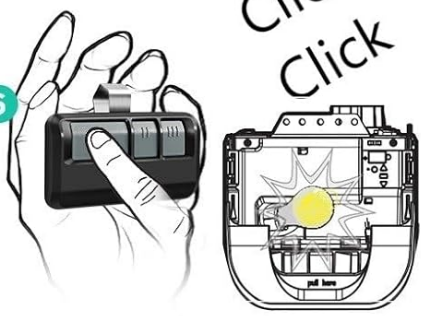

Click
Click

Press the remote control button programmed in step 3 until the garage door opener lights flash or two clicks are heard

Image 5: Step-by-step visual instructions for programming the remote control.

1. **Identify Learn Button:** Locate and confirm the color of the learn button on your garage door opener. Do not press it yet.
2. **Enter Programming Mode on Remote:** Simultaneously press and hold the two outer buttons (buttons I and III) on your datonten remote. Continue holding until the red LED on the front of the remote turns on, then flashes four times, and finally turns off. This indicates the remote is ready for programming.
3. **Select Remote Button and Opener Type:** Press and release the specific button on the remote you wish to program a number of times corresponding to your garage door opener's learn button color:
 - For **Purple** learn button: Press 1 time.
 - For **Red** learn button: Press 2 times.
 - For **Orange** learn button: Press 3 times.
 - For **Yellow** learn button: Press 4 times.
 - For **Green** learn button: Press 4 times.
4. **Exit Remote Programming Mode:** Press any button on the remote control **except** the one you just programmed. This action saves the programming and exits the remote's programming mode.

5. **Activate Opener's Learn Mode:** Press and immediately release the learn button on your garage door opener. The learn LED on the opener will light up for approximately 30 seconds, indicating it is in learn mode.
6. **Final Pairing:** Within 30 seconds of activating the opener's learn mode, press and hold the button on your datonten remote that you programmed in step 3. Release the button when the garage door opener lights flash or you hear two clicks. This confirms successful pairing.

4. OPERATING INSTRUCTIONS

Once programmed, operating your datonten 3B893MAX remote is straightforward:

- **Opening/Closing the Garage Door:** Press the programmed button on your remote once. The garage door will begin to open or close. Pressing it again during operation will stop the door.
- **Multi-Door Control:** This remote can control up to three different garage door openers. Program each button (I, II, III) to a separate opener following the setup instructions.
- **Range:** The remote offers an operating range of up to 150 feet, allowing you to open your garage door from a distance.



Image 6: Illustration of Security+ 2.0 technology, which generates a new security code each time the remote is used for enhanced security.



Image 7: Depiction of the remote's 150-foot operating range, allowing control of the garage door from a significant distance.

5. MAINTENANCE

Battery Replacement

The datonten 3B893MAX remote uses one CR2032 Lithium Manganese Dioxide battery. A battery is included with your purchase. When the remote's LED indicator light dims or fails to illuminate during use, it is time to replace the battery.

- **Access Battery Compartment:** Locate the small notch on the side or back of the remote. Use a small flathead screwdriver or coin to gently pry open the remote casing.
- **Replace Battery:** Carefully remove the old CR2032 battery. Insert a new CR2032 battery with the positive (+) side facing up.
- **Close Remote:** Align the two halves of the remote casing and press them firmly together until they snap securely into place.

Dispose of old batteries according to local regulations.

Rugged and complete with accessories

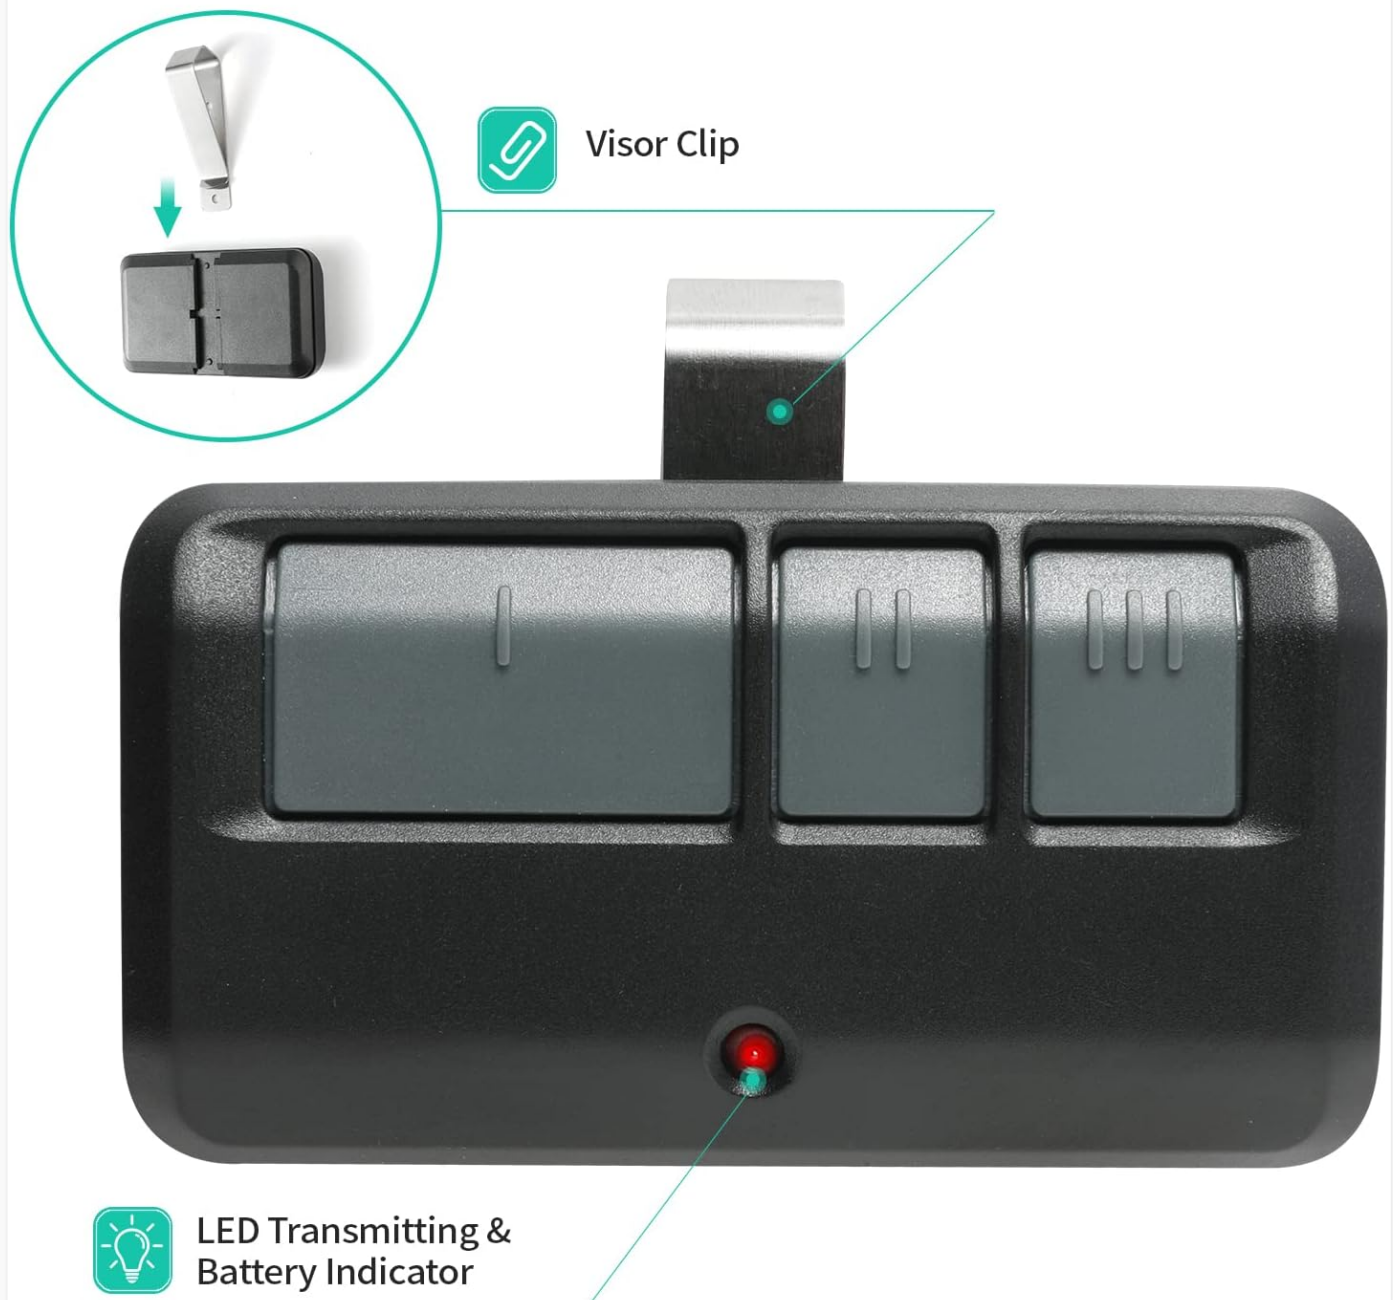


Image 8: The remote control showing its visor clip and the LED transmitting and battery indicator light.

6. TROUBLESHOOTING

If you encounter issues with your datonten 3B893MAX remote, consider the following common solutions:

- **Remote Not Programming:**
 - Ensure your garage door opener's learn button color is compatible (Green, Orange, Red, Purple, Yellow).
 - Verify you are pressing the correct number of times for your learn button color during Step 3 of programming.
 - Confirm the remote is not a DIP switch model.
 - Make sure the remote's battery is not depleted.
- **Limited Range:**
 - Replace the remote's battery if it is old or weak.
 - Ensure there are no significant obstructions between the remote and the garage door opener.
 - Check for sources of radio interference in the area.
- **Garage Door Not Responding:**
 - Re-attempt the programming steps carefully.
 - Check if the garage door opener itself is receiving power and functioning correctly with its original remote or wall control.

7. SPECIFICATIONS

Feature	Detail
Manufacturer	datonten
Model Number	3B893MAX
Item Weight	1.41 ounces
Product Dimensions	3.14 x 1.77 x 0.6 inches
Battery Type	1 x CR2032 Lithium Manganese Dioxide (included)
Special Features	Universal compatibility with specified openers
Max Supported Devices	3
Compatible Devices	Garage Door Openers (LiftMaster, Chamberlain, Craftsman with Green, Orange, Red, Purple, Yellow learn buttons)

8. WARRANTY AND SUPPORT

Warranty Information

The datonten 3B893MAX Garage Door Opener Remote comes with a 12-month warranty from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For further assistance, troubleshooting, or warranty inquiries, please contact datonten customer support through the retailer where the product was purchased or visit the official datonten store page:

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C2ZBVSZKZ>

More documents and user manuals: <https://manuals.plus/>