

[Manuals.plus](#) /

› [FOSA](#) /

› FOSA 1080P HD Camera Camcorder Instruction Manual - Model fosa1xsqrg7y3v-11

FOSA fosa1xsqrg7y3v-11

FOSA 1080P HD Camera Camcorder Instruction Manual

Model: fosa1xsqrg7y3v-11

INTRODUCTION

Thank you for purchasing the FOSA 1080P HD Camera Camcorder. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure optimal performance and longevity of your camcorder.

This compact and versatile camcorder is designed to capture your precious moments in high definition. Featuring a 2.7-inch rotatable TFT screen, 16x digital zoom, and 16MP photo resolution, it's suitable for various recording scenarios.

PACKAGE CONTENTS

Please check the box for the following items:

- FOSA 1080P HD Camera Camcorder
- User Manual
- Battery (x2)
- USB Cable
- Remote Control
- USB Charger Brick
- Carrying Case
- SD Card (32GB)

If any items are missing or damaged, please contact customer support.



Image: The FOSA 1080P HD Camera Camcorder displayed with its accessories, including two batteries, a USB cable, and a wrist strap.

PRODUCT OVERVIEW

Familiarize yourself with the camcorder's components:



Image: Front-side view of the camcorder with the rotatable screen open, showing the lens and main body.

Suitable for various scenarios:

For baby growth records, travel, marriage, campus records, etc.
 Lightweight and multifunctional
 Convenient for use in various scenarios.



Image: The camcorder with its screen open, displaying icons for CMOS sensor, 32GB support, Full HD 1080P, and 16.0 Mega Pixels.



Support for selfies:

There is a fill light on the front of the camera, which can be used for fill light when taking photos
 Timer shooting for 2 seconds or 10 seconds
 Automatically take HD beautiful photos and videos.

Image: The camcorder's screen showing a menu with options like Resolution, Quality, Metering, White Balance, and Exposure.



Image: A close-up view of the camcorder's video lens, showing details like L=9.88mm and Aperture 5.0.

SETUP

1. Battery Installation

1. Open the battery compartment cover located on the bottom of the camcorder.
2. Insert the provided battery, ensuring correct polarity.
3. Close the battery compartment cover securely.

2. Memory Card Installation

The camcorder supports SD cards up to 32GB. A 32GB SD card is included in the package.

1. Locate the SD card slot, usually behind the rotatable screen or on the side.
2. Insert the SD card with the metal contacts facing down until it clicks into place.
3. To remove, gently push the card until it pops out.

3. Charging the Camcorder

Use the provided USB cable and charger brick to charge the camcorder.

1. Connect the USB cable to the camcorder's USB port.
2. Plug the other end of the USB cable into the USB charger brick, then into a power outlet.
3. The charging indicator light will illuminate. Charging is complete when the light turns off.

BASIC OPERATION

1. Power On/Off

To power on the camcorder, simply open the rotatable TFT screen. The camcorder will automatically power on. To power off, close the screen.

2. Recording Video

1. Ensure the camcorder is in video mode (indicated by an icon on the screen).
2. Press the **REC/STOP** button (usually located on the top or back) to start recording. A red indicator light will typically show that recording is in progress.
3. Press the **REC/STOP** button again to stop recording.

3. Taking Photos

1. Switch the camcorder to photo mode using the **MODE** button.
2. Frame your shot using the screen.
3. Press the **PHOTO** button (usually a dedicated button or the REC/STOP button in photo mode) to take a picture.

4. Zoom Function

Use the **W (Wide)** and **T (Telephoto)** buttons/slider to adjust the 16x digital zoom. The zoom controls are typically located on the top of the camcorder.

5. Selfie Mode

The camcorder features a front fill light and a rotatable screen for convenient selfies.

1. Rotate the screen 180 degrees to face forward.
2. Activate the fill light if needed (refer to the menu for light settings).
3. Use the self-timer function (2 or 10 seconds) to automatically capture photos or videos.



Image: The camcorder held by a child, with the screen rotated for selfie mode, showing the child's reflection.

ADVANCED FEATURES

1. Webcam Mode

The camcorder can be used as a webcam for your computer.

1. Connect the camcorder to your computer using the USB cable.
2. On the camcorder screen, select

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question