

TYMO HC507P

TYMO ROVY Beach Waves Curling Wand Instruction Manual

Model: HC507P | Brand: TYMO

IMPORTANT SAFETY INFORMATION

WARNING: Keep out of reach of children.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

This appliance is designed for hair styling purposes only. Do not use for any other purpose. Ensure hands are dry before plugging in or unplugging the device. Always unplug the device when not in use and before cleaning.

PRODUCT OVERVIEW

The TYMO ROVY Beach Waves Curling Wand is an ionic deep waver hair curler tool designed to create stunning, voluminous beach waves with ease. Featuring a ceramic 3-barrel design, dual voltage capability, and anti-scald features, it ensures a safe and effective styling experience.

Key Features:

- **Easy Clamp, Instant Curls:** Designed for effortless daily beachy waves with a single clamp.
- **No Exposed Barrel, No Burns:** Full-wrap insulation design protects fingers and neck from heat.
- **Voluminous All Day:** 1.25-inch barrels and dual-sided heating technology ensure long-lasting curls.
- **Fast & Stable Heating:** Equipped with 4 built-in PTC heating elements for 30-second heat-up and consistent temperature.
- **Damage Worry-Free:** 40 million negative ions reduce static and frizz, while the T-GLOSS tourmaline ceramic coating infused with nourishing essence promotes healthy hair.
- **User Thinking Design:** Internal buttons prevent accidental touches, and temperature memory function.
- **Dual Voltage 100-240V:** Ideal for travel, compatible worldwide.
- **30 Mins Auto-off:** Enhances safety and energy efficiency.
- **Handle Lock:** Effectively prevents accidental switch activation and reduces burn risk.
- **80-Inch Swivel Cord:** Convenient and flexible design for ease of use.



Figure 1: TYMO ROVY Beach Waves Curling Wand.

SETUP

1. **Unboxing:** Carefully remove the curling wand and all accessories from the packaging. Inspect the device for any signs of damage.
2. **Placement:** Place the curling wand on a heat-resistant, flat surface away from water.
3. **Power Connection:** Plug the 80-inch swivel cord into a suitable electrical outlet (100-240V compatible).
4. **Power On:** Long press the power button to turn on the device. The LED display will illuminate, showing "OFF" initially, then

the temperature will begin to rise.

5. **Temperature Selection:** Use the temperature control buttons to select your desired heat setting. The device offers 9 heating settings from 280°F to 430°F. Refer to the "Operating Instructions" for recommended temperatures.
6. **Timer Setting:** Optionally, set the styling timer (4, 6, 8, or 10 seconds) using the timer button. This feature helps ensure consistent results and prevents overheating.

BUILT-IN STYLING TIMER

- Consistent Results
- Avoid Overheating



4 Styling timer settings for all hair types

Timer can be turned off with a long press

Figure 2: Digital display and control buttons.

OPERATING INSTRUCTIONS

1. **Prepare Hair:** Ensure your hair is clean, dry, and detangled. For best results and heat protection, apply a heat protectant spray.
2. **Section Hair:** Divide your hair into manageable sections, typically 1-2 inches wide, depending on your hair thickness and desired wave size.

3. **Position the Wand:** Open the clamp and place a section of hair between the barrels, starting from the roots or mid-length, depending on where you want the wave to begin.
4. **Clamp and Hold:** Close the clamp firmly, ensuring the hair is evenly distributed across the barrels. Hold for the duration of your selected timer setting (e.g., 4-10 seconds). The device will beep when the time is up.
5. **Release and Repeat:** Release the clamp and gently slide the wand down the hair section, repositioning it just below the previously waved area. Clamp and hold again. Repeat this process until the entire section of hair is waved.
6. **Continue Styling:** Move to the next section of hair and repeat steps 3-5 until all desired sections are styled.
7. **Cool Down:** Allow the waves to cool completely before touching or brushing them to ensure they set properly and last longer.

Recommended Temperature & Timer Settings:

- **Relax Waves:** Approximately 230°F with a 4-second timer.
- **Bouncy Volume:** Approximately 350°F with a 6-second timer.
- Adjust settings based on your hair type and desired results. For finer hair, use lower temperatures and shorter times. For thicker hair, higher temperatures and longer times may be needed.

EASY WAVES

Clamp and release
Forget complex curling skill



Figure 3: Creating easy waves with the TYMO ROVY.

UNLOCK MULTI VIBES

Find the timer & temps fits your style



 Relax Waves
230°F x 4s Timer



 Bouncy Volume
350°F x 6s Timer

Figure 4: Examples of different wave styles.

MAINTENANCE

- **Cleaning:** Ensure the device is unplugged and completely cool before cleaning. Wipe the ceramic barrels and exterior with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- **Storage:** Store the curling wand in a cool, dry place. Use the handle lock feature to keep the barrels closed for compact storage and to prevent damage.
- **Cord Care:** Do not wrap the power cord around the device tightly, as this can damage the cord. Store the cord loosely.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Hair appears burnt/damaged.	The crimper has a larger heating surface area compared to traditional curling irons, resulting in slightly more heat exposure. 1. Use shampoo powder to ensure 100% hair cleanliness. 2. Use temperatures 20-80°F lower than your regular setting. 3. Apply a heat protectant spray before styling.
Smoke comes out while in use.	When using the crimper, the moisture in your hair is trapped inside and when you open it, it is instantly released, creating the appearance of 'smoke'. 1. Use a lower heat setting and timer. 2. Make sure hair is clean and dry.
Timer doesn't beep.	The crimper needs to be fully closed for the timer to start counting. Ensure that the crimper is completely closed during use.
Crimper doesn't work after plugging it in.	After plugging in, the display will show "OFF." Long press the power button to turn it on.

SPECIFICATIONS

- **Model Number:** HC507P
- **Product Dimensions:** 12.56 x 2.83 x 2.83 inches
- **Item Weight:** 1.48 Pounds
- **Material:** Ceramic
- **Wattage:** 132 watts
- **Voltage:** Dual Voltage 100-240V
- **Temperature Range:** 280°F - 430°F
- **Heat-up Time:** 30 seconds
- **Auto-off:** 30 minutes
- **Cord Length:** 80-inch Swivel Cord

WARRANTY AND SUPPORT

TYMO is committed to providing excellent customer service and product support.

- **Service:** 24 hours x 7 days customer service.

- **Return Window:** Enjoy a 60-day extended return window for your convenience.
- For any inquiries or support, please contact TYMO customer service.

© 2023 TYMO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question