

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [GOWENIC](#) /

> [GOWENIC 16MP Digital Video Camera Camcorder \(Model GOWENIC3eghsufbpz-12\) User Manual](#)

GOWENIC GOWENIC3eghsufbpz-12

GOWENIC 16MP Digital Video Camera Camcorder User Manual

Model: GOWENIC3eghsufbpz-12

INTRODUCTION

Thank you for purchasing the GOWENIC Digital Video Camera Camcorder. This manual provides essential information for setting up, operating, and maintaining your new device. Please read this manual thoroughly before use to ensure optimal performance and longevity of your camera.

PRODUCT OVERVIEW

The GOWENIC Digital Video Camera is a compact and versatile device designed for capturing high-quality videos and photos. Key features include:

- **2.7-inch TFT Rotatable Screen:** For flexible viewing and framing.
- **1080P Video Resolution:** Records clear and detailed videos.
- **16MP Still Image Pixels:** Captures high-resolution photographs.
- **16x Digital Zoom:** Allows for closer shots of distant subjects.
- **Built-in Speakers:** For audio playback.
- **Selfie Fill Light:** Integrated front light for improved self-portraits.
- **USB Connectivity:** For easy data transfer and use as a PC camera.



HD

2.7in TFT rotatable screen

1080P video resolution

16x digital zoom

16MP pixels

Supports recording while charging, with built-in speakers and high-definition output.

Figure 1: GOWENIC Digital Video Camera highlighting its main features and rotatable screen.



Figure 2: Front view of the camera, showing the lens and overall design.

SETUP

1. Battery Installation and Charging

1. Locate the battery compartment on the camera.
2. Insert the provided lithium battery (1020 mAh) into the compartment, ensuring correct polarity.
3. Close the battery compartment cover securely.
4. Connect the camera to a power source using the supplied USB cable to fully charge the battery before first use. The camera supports recording while charging.

2. Memory Card Installation

The camera requires a memory card (not included) for storing photos and videos. It supports memory cards up to 32GB.

1. Locate the memory card slot, typically near the battery compartment or on the side of the camera.
2. Insert a compatible memory card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.
3. To remove the memory card, gently push it in until it springs out.



Figure 3: Camera components including battery and USB cable for setup.

OPERATING INSTRUCTIONS

1. Power On/Off

- To power on the camera, press and hold the power button.
- To power off, press and hold the power button again.

2. Recording Videos

- After powering on, the camera typically defaults to video recording mode.
- Press the **Record** button to start recording.
- Press the **Record** button again to stop recording.

3. Taking Photos

- From video recording mode, press the **Mode** button to switch to photography mode.
- Press the **Photo** button to take a picture.

4. Using Digital Zoom

- While in recording or photography mode, press the **T** button to zoom in (telephoto).
- Press the **W** button to zoom out (wide-angle).

5. LED Fill Light

- Press the **OK** button to toggle the LED fill light on or off.
- *Note: The fill light cannot be used in playback mode.*

6. Self-Timer Function

The camera features a self-timer for delayed shots, with options for 2 or 10 seconds.

- Access the self-timer settings through the camera's menu.
- Select your desired delay (2 or 10 seconds).
- Press the **Photo** button to activate the self-timer and take a picture after the countdown.



Support for selfies:

There is a fill light on the front of the camera, which can be used for fill light when taking photos

Timer shooting for 2 seconds or 10 seconds

Automatically take HD beautiful photos and videos.

Figure 4: Camera demonstrating selfie support with its front fill light.

7. Connecting to a Computer

You can connect the camera to a computer using the USB cable for file transfer or to use it as a PC camera.

- Connect one end of the USB cable to the camera and the other end to your computer's USB port.
- The camera will prompt you to select a mode (e.g., Mass Storage for file transfer or PC Camera).
- Select the appropriate mode for your intended use.

Suitable for various scenarios:

For baby growth records, travel, marriage, campus records, etc.

Lightweight and multifunctional

Convenient for use in various scenarios.



Figure 5: Examples of suitable scenarios for using the camera, such as travel, events, and outdoor activities.

MAINTENANCE

- **Cleaning the Lens and Screen:** Use a soft, lint-free cloth specifically designed for optical surfaces. Avoid abrasive materials or harsh chemicals.
- **Battery Care:** Store the battery in a cool, dry place when not in use. Avoid extreme temperatures. If the camera will not be used for an extended period, remove the battery.
- **Storage:** Store the camera in a dry, dust-free environment, away from direct sunlight and extreme temperatures.
- **Avoid Moisture:** This camera is not waterproof. Keep it away from water and high humidity.

TROUBLESHOOTING

Camera Does Not Turn On

- Ensure the battery is correctly inserted and fully charged.
- Try connecting the camera to a power source with the USB cable to see if it powers on.

Cannot Record or Take Photos

- Check if a memory card is inserted and has sufficient free space.
- Ensure the memory card is formatted correctly (refer to camera settings for formatting options).
- Verify that the camera is in the correct mode (video or photo).

Poor Image/Video Quality

- Clean the camera lens with a soft, lint-free cloth.
- Ensure adequate lighting conditions.
- Avoid excessive use of digital zoom, which can reduce image quality.

Camera Not Recognized by Computer

- Ensure the USB cable is securely connected to both the camera and the computer.
- Select the "Mass Storage" or "File Transfer" mode on the camera when prompted.
- Try a different USB port on your computer.

SPECIFICATIONS

Feature	Specification
Image Resolution	VGA, 1M, 5M, 12M, 16M
Image Format	JPG
Video Resolution	FHD (1920 x 1080), HD (1280 x 720), 640 x 480
Video Format	AVI
Screen Size	2.7 inches TFT (Rotatable)
Digital Zoom	16x
Shutter	Electronic
Self-Timer	2 seconds, 10 seconds
TV OUT Output	NTSC 30fps, PAL 25fps
Storage	Supports up to 32GB memory card (not included)
Battery	1020 mAh Lithium Battery (built-in)
Connectivity	USB
Manufacturer	GOWENIC
Model Number	GOWENIC3eghsufbpz-12



Figure 6: Detail of the camera screen indicating HD 1080P video and 16MP photo capabilities.



Figure 7: Close-up view of the camera's video lens.

PACKAGE CONTENTS

The package includes the following items:

- 1 x GOWENIC Digital Video Camera
- 1 x USB Cable
- 1 x User Manual

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or contact the seller/manufacturer directly. Keep your purchase receipt as proof of purchase.

