

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Greenworks](#) /

› [Greenworks Pro 60V 22" Cordless Snow Blower Instruction Manual](#)

Greenworks SN60L522

Greenworks Pro 60V 22" Cordless Snow Blower Instruction Manual

Model: SN60L522 | Brand: Greenworks

IMPORTANT SAFETY INFORMATION

Always wear appropriate safety gear, including gloves and eye protection, when operating this snow blower. Keep hands and other body parts away from moving parts. Store the snow blower in a dry, well-ventilated area when not in use. Always follow the manufacturer's instructions for safe operation and maintenance.

PRODUCT OVERVIEW

The Greenworks Pro 60V 22" Brushless Cordless Snow Blower is designed for efficient snow removal. It features a high-efficiency brushless motor, a 22-inch clearing width, and a 13-inch clearing depth. The dual battery port with automatic switchover extends runtime, and the 180-degree rotating chute with a 45-degree deflector allows for precise snow displacement up to 30 feet. Bright LED headlights enhance visibility during early morning or nighttime operation. The robust steel chassis ensures durability in demanding conditions.

greenworks[®] **ULTRAPOWER[™]** **60V**

22" Snow Thrower

Two 5.0 Ah Batteries & Dual-Port Charger



Figure 1: Front view of the Greenworks Pro 60V 22" Cordless Snow Blower, highlighting features such as the adjustable deflector, push button start, dual battery port, rotating chute, max discharge, brushless motor, LED headlights, clearing width/depth, and folding handles.

Life. Powered.TM
by **greenworks**

22" Snow Thrower

NO GAS, NO PULLING, NO EMISSION



Figure 2: The Greenworks 22" Snow Thrower in operation, demonstrating its snow clearing capability.

SETUP

1. Unpacking and Assembly

Carefully remove all components from the packaging. Ensure all parts listed in the packing list are present. Refer to the included assembly guide for detailed instructions on attaching the handles, chute, and other components. Tools required for assembly are typically included or standard household tools.

2. Battery Installation and Charging

The snow blower operates on two 60V 5.0Ah lithium-ion batteries. Before first use, fully charge both batteries using the included dual-port charger. Insert the charged batteries into the dual battery ports located under the battery cover. Ensure they click securely into place. The automatic switchover feature allows the snow blower to draw power from both batteries for extended runtime.



**(2) 5.0 AH BATTERIES
AND DUAL PORT CHARGER INCLUDED**

Figure 3: The two 5.0 Ah batteries and dual port charger included with the snow blower.

45° DEFLECTOR

30-FT. MAX THROWING DISTANCE



Figure 4: The dual battery ports with automatic switchover for continuous power.

OPERATING INSTRUCTIONS

1. Starting the Snow Blower

1. Ensure batteries are fully charged and properly installed.
2. Press and hold the safety button.
3. While holding the safety button, pull the auger engagement lever towards the handle. The auger will begin to rotate, and the snow blower will start.
4. Release the safety button once the auger is engaged.

2. Clearing Snow

Push the snow blower forward at a steady pace. Avoid forcing the unit through heavy snow, as this can reduce performance and battery life. For optimal performance, clear snow in overlapping passes. The 22-inch clearing width and 13-inch clearing depth are designed for efficient removal of moderate snowfalls.



Figure 5: A person operating the Greenworks snow blower to clear a snowy driveway.

3. Chute and Deflector Adjustment

Use the handle-mounted chute adjustment lever to rotate the discharge chute up to 180 degrees, directing snow away from

cleared areas. The 45-degree adjustable deflector allows you to control the height and distance of the snow discharge, up to 30 feet.



Figure 6: The 45° deflector allows for precise control over snow throwing distance, up to 30 feet.

4. LED Headlights

The integrated dual LED headlights provide illumination for operating the snow blower in low-light conditions, such as early mornings or evenings.

MAINTENANCE

1. Cleaning

After each use, disconnect the batteries and remove any snow, ice, or debris from the auger housing, chute, and exterior surfaces. Use a damp cloth for cleaning. Do not use high-pressure water or solvents.

2. Storage

Store the snow blower in a dry, well-ventilated area, away from direct sunlight and moisture. For compact storage, the handles can be folded. Remove batteries before storing for extended periods and store them in a cool, dry place.



Figure 7: The snow blower features easy folding handles for compact storage, reducing space by 70%.

3. Battery Care

Keep batteries charged, especially during off-season storage. Avoid fully discharging batteries before recharging. Store batteries between 32°F (0°C) and 104°F (40°C).

TROUBLESHOOTING

Problem	Possible Cause	Solution
Snow blower does not start.	Batteries not charged or improperly installed. Safety button not pressed before engaging lever.	Ensure batteries are fully charged and securely inserted. Press safety button, then pull auger engagement lever.
Reduced snow throwing distance.	Wet, heavy snow. Chute or auger clogged. Low battery charge.	Clear snow at a slower pace. Turn off unit, remove batteries, and clear any clogs from the auger or chute. Recharge batteries.
Unit stops during operation.	Overload protection activated (too much snow). Low battery charge.	Reduce the amount of snow being cleared per pass. Recharge or replace batteries.

SPECIFICATIONS

- Brand:** Greenworks
- Model Number:** SN60L522
- Power Source:** Battery Powered (60 Volts)
- Clearing Width:** 22 Inches
- Ideal Snow Depth:** 13 Inches
- Product Dimensions:** 52.36"D x 40.16"W x 10.63"H
- Item Weight:** 56.9 Pounds
- Engine Type:** Electric Brushless Motor
- Number of Speeds:** 1
- Batteries:** 2 x 5.0Ah Lithium Ion (included)
- UPC:** 841821046453

WARRANTY AND SUPPORT

The Greenworks Pro 60V 22" Cordless Snow Blower comes with a **4-year tool and battery warranty**. For warranty claims, technical support, or replacement parts, please contact Greenworks customer service. Refer to the product packaging or the official Greenworks website for the most current contact information.

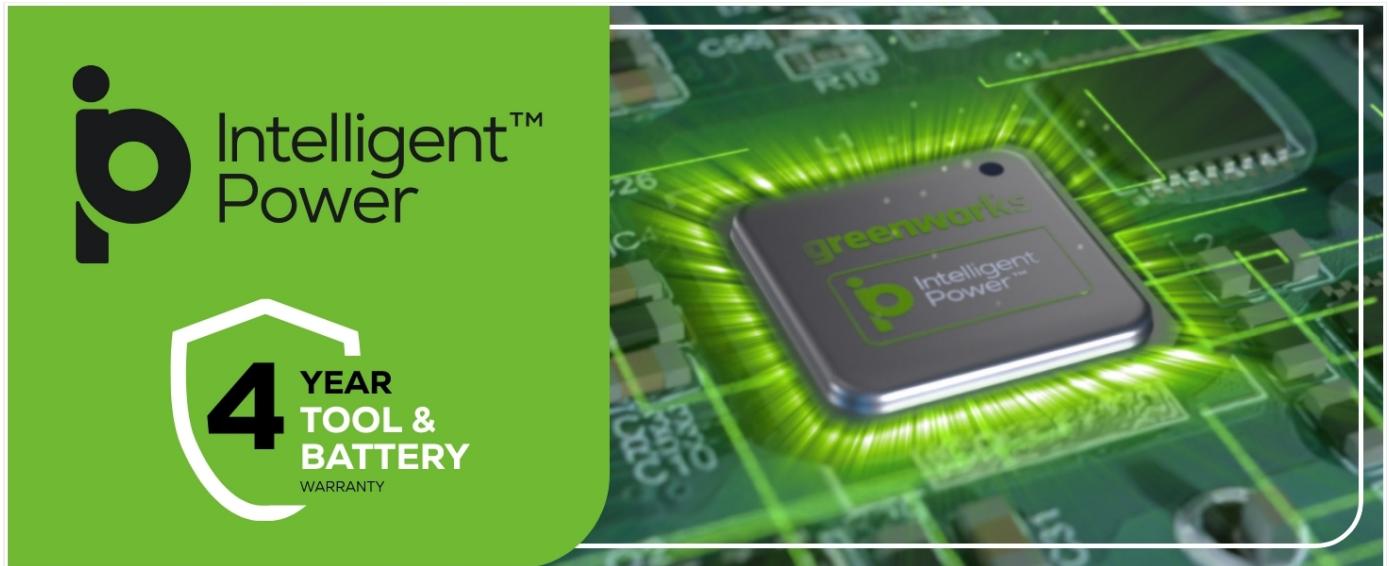


Figure 8: Greenworks offers a 4-year warranty on both the tool and battery.