

[Manuals.plus](#) /

› [SENCKIT](#) /

› SENCKIT Bluetooth Tracker and Item Locator User Manual

SENCKIT Black - 3 pack

SENCKIT Bluetooth Tracker and Item Locator User Manual

Model: Black - 3 pack

INTRODUCTION

The SENCKIT Bluetooth Tracker and Item Locator is a compact and efficient device designed to help you keep track of your valuable belongings. Utilizing Apple's Find My network, this tracker allows you to locate items whether they are nearby or far away. Its user-friendly design and robust features make it an ideal solution for preventing loss and quickly recovering misplaced items.

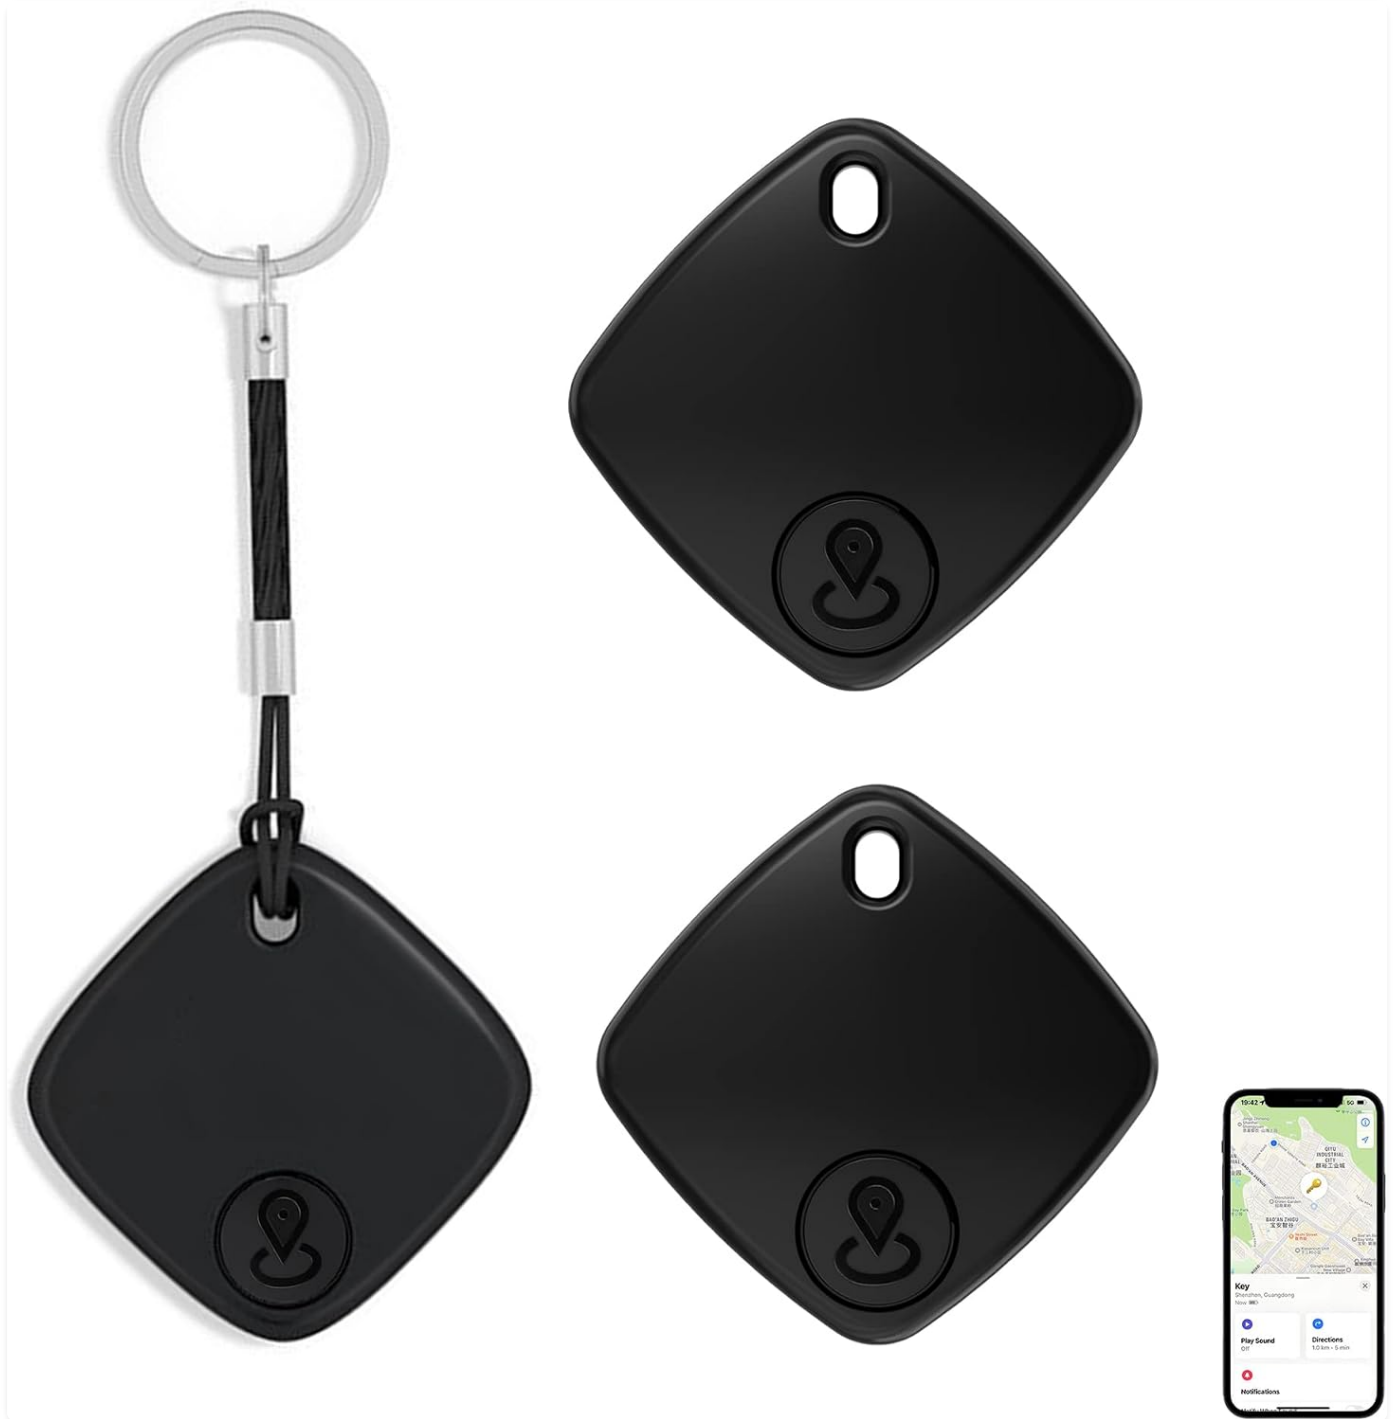 


Image: The SENCKIT Bluetooth Tracker and Item Locator in a 3-pack, showcasing its compact design and integration with the Apple Find My app.

WHAT'S IN THE BOX


Your SENCKIT Bluetooth Tracker package includes the following items:

- 3* Luggage tags for suitcases (SENCKIT Bluetooth Trackers)
- Instruction manual

SETUP GUIDE

Battery Installation

The SENCKIT tracker comes with one CR2032 battery pre-installed and an additional battery for replacement. To access or replace the battery, gently open the tracker's casing. Ensure the battery is inserted with the correct polarity.

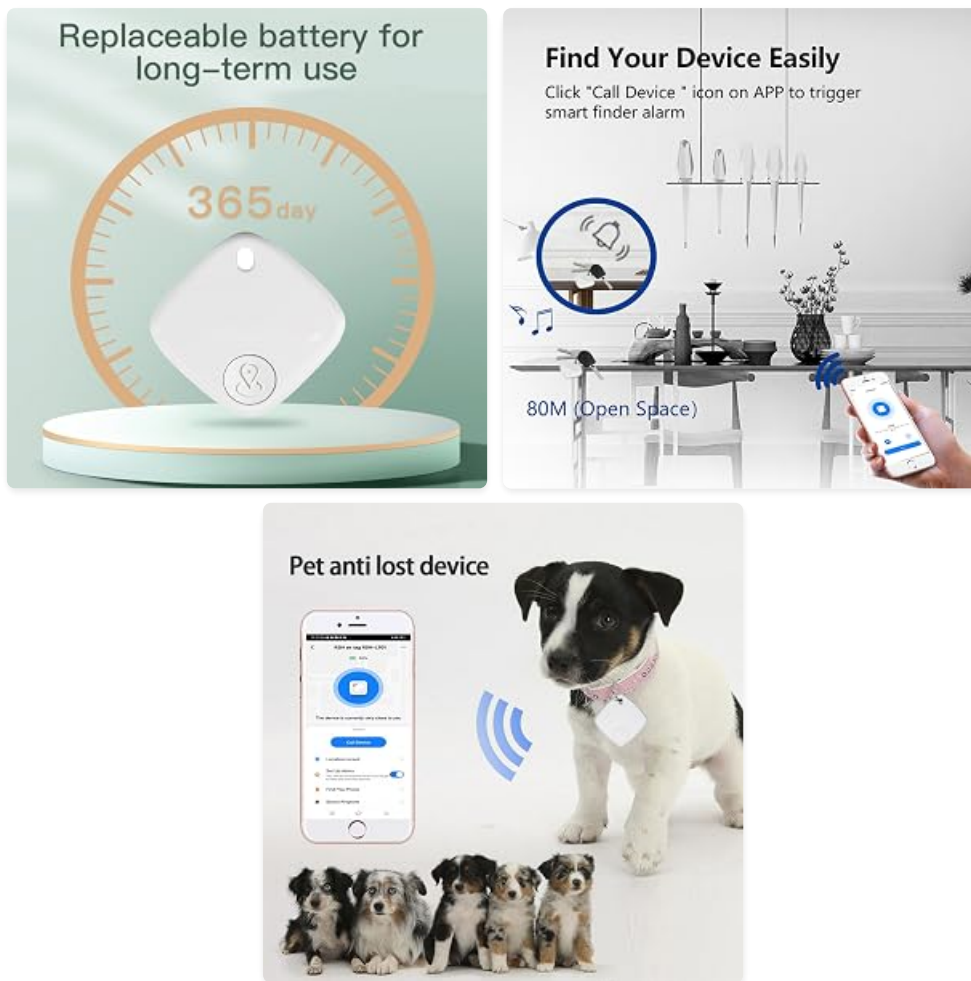

Images: Views of the SENCKIT tracker with its back open, illustrating the CR2032 replaceable battery.

Pairing with Apple Find My App

Follow these steps to pair your SENCKIT tracker with your iOS device:

1. Open the pre-installed **Find My** app on your Apple device.
2. Tap on the "Items" tab at the bottom of the screen.
3. Tap "Add Item" and then select "Other Supported Item".
4. Press and hold the button on your SENCKIT tracker for a few seconds until it emits a sound, indicating it's in pairing mode.
5. Your device will detect the tracker. Follow the on-screen prompts to connect and name your item.
6. Once connected, the tracker will appear in your Find My app, ready for use.

Smart Item Finer


Find Things Easily




Image: Visual guide for the first three steps of pairing the SENCKIT tracker with the Apple Find My app.



 1. Open "Find My" App

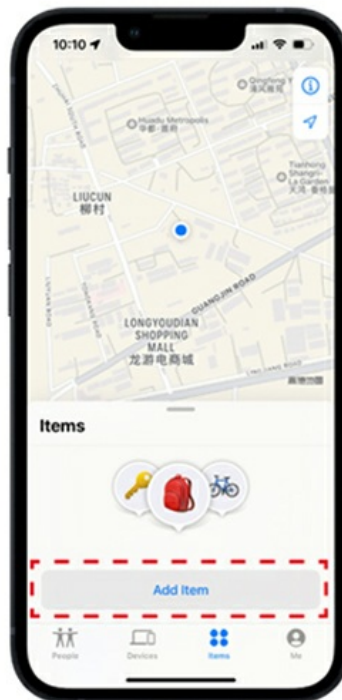

 2. Tap "Add Item"

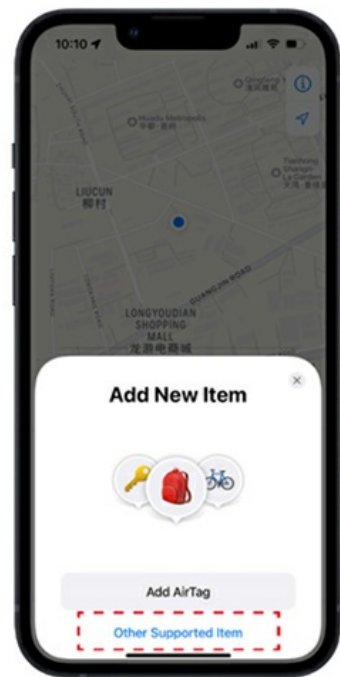

3. Select
"Other Supported Item"

Image: Visual guide for the last three steps of pairing the SENCKIT tracker with the Apple Find My app.

OPERATING INSTRUCTIONS

Finding Nearby and Far Away Items

When your item is lost, use the Find My app to ring your smart tracker if it's within Bluetooth range. The app will guide you directly to its location. For items further away, the vast Apple Find My network, comprising hundreds of millions of Apple devices, helps you locate them by relaying their newest location.



GPS BT Tracking Not Afraid Of Losing Items

When you can't find it,
open the APP and enter the map to view the location



Image: The Find My app interface showing the location of tracked items on a map.

Smart Item Finer

Find Things Easily



Image: The Find My app showing the location of items, emphasizing GPS and Bluetooth tracking capabilities.

Left-Behind Alerts

To receive notifications when you leave your item behind, enable the "Notify when Left Behind" toggle in the Apple Find My app. You will get an alert if the tracker is no longer in range of your device, without any additional fees.

Lost Mode and Privacy Protection

If an item is lost, you can activate "Lost Mode" in the Find My app. If an Apple mobile phone is nearby, the tracker can display your contact number to help facilitate its return. All communication within the Find My network is anonymous and encrypted, ensuring your location data and history are never stored on the key tracker.

Voice Prompt

When near the tracker, click "play sound",
the tracker will beep



Image: The 'Lost Mode' feature in the Find My app, allowing owners to display contact information if their lost item is found.

Image: The 'Lost Mode' feature, which automatically contacts the owner if an Apple device is nearby.

Playing a Sound (Voice Prompt)

When you are near your tracker, you can click "Play Sound" in the Find My app. The tracker will emit a loud ring (up to 90dB) to help you pinpoint its exact location.

Power Display

Check the power at any time,
detachable and install the battery



Power Display


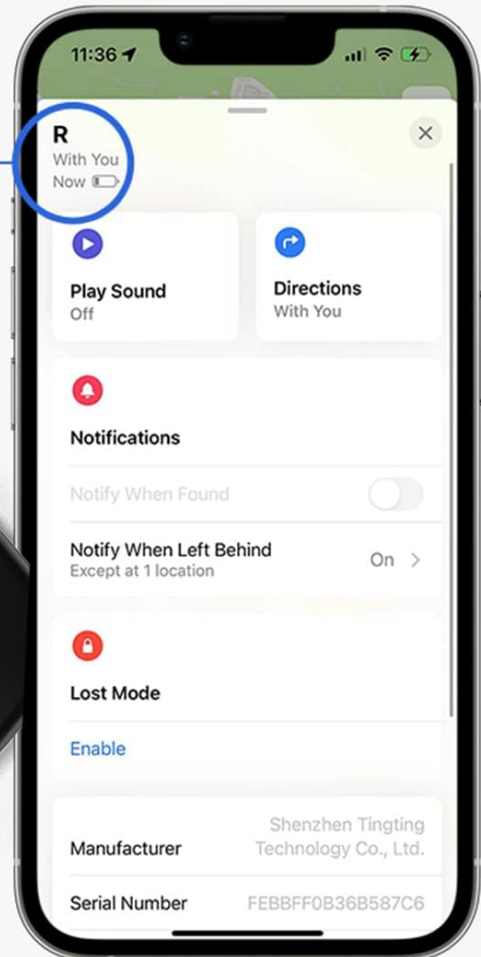 



Image: The 'Play Sound' feature in the Find My app, which causes the tracker to beep when nearby.

 

4. Tap “Connect”

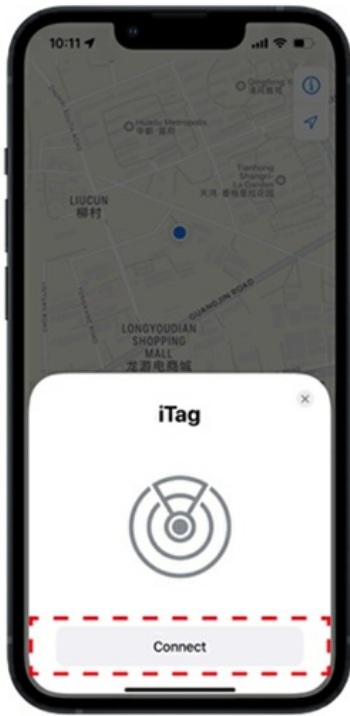

 5. Link to your Apple ID

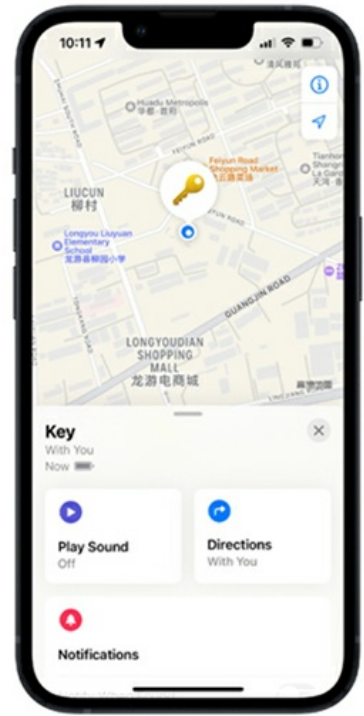

6. Finish

Image: The 'Voice Prompt' feature, allowing the tracker to beep when activated from the app.

Checking Power Display

You can check the battery level of your tracker at any time through the Find My app. The app will notify you when the battery is low, prompting you to replace it.

Wearable

Wearable on kids/pets/items



Can't find pet



Key not found



Can't find wallet



Can't find backpack

Image: The Find My app displaying the power level of the tracker, with an image of the tracker's internal battery.

Pet



Bag



Luggage



Keys



Wallet



Backpack



Image: The 'Power Display' feature in the Find My app, showing the tracker's battery status.

Versatile Use

The SENCKIT tracker is designed to be wearable and attachable to various items, including keys, wallets, bags, luggage, and even pets, providing versatile tracking solutions.

Product Size



Model: iTag

Product Size: 38*38*7mm

Product Weight: 8.7g

Battery: CR2032 Replaceable

Buzzer: 90Db≤

Standby: Up to 1 year

Wireless Range: 10–20M(Indoor) 20–30(Out door)

Supports: To use the Apple Find My app to locate your Item Locator, the latest version of iOS, iPadOS, or macOS is recommended.

Image: Examples of how the SENCKIT tracker can be attached to various items like pets, keys, wallets, and backpacks.





Image: The SENCKIT tracker used as a pet anti-lost device, shown on a dog's collar.

MAINTENANCE

Battery Replacement

The SENCKIT tracker uses a replaceable CR2032 battery, offering up to 1 year of battery life. When the Find My app indicates a low battery, replace it with a new CR2032 coin cell battery. Refer to the 'Battery Installation' section under 'Setup Guide' for instructions on how to open the tracker and replace the battery.



Image: The tracker highlighting its replaceable battery for long-term use, with an estimated 365-day lifespan.

Water Resistance

The luggage finder is IP65 water resistant, meaning it is protected from dust ingress and low-pressure water jets from any direction. While it can withstand splashes, it is not designed for submersion in water.

TROUBLESHOOTING

- **Tracker not connecting:** Ensure the tracker's battery is not depleted. Press and hold the button on the tracker to put it into pairing mode. Make sure your iOS device's Bluetooth is enabled and you are within range. If issues persist, try restarting your iOS device.
- **Tracker not ringing:** Check the volume settings on your iOS device. Ensure the tracker is within Bluetooth range. If the battery is low, the ring volume might be reduced.
- **Inaccurate location:** Ensure your iOS device has a stable internet connection (Wi-Fi or cellular data) and location services are enabled for the Find My app. Location accuracy can vary based on environmental factors and network coverage.
- **Left-behind alerts not working:** Verify that the "Notify when Left Behind" feature is enabled for the specific tracker in the Find My app settings. Ensure the app has necessary permissions to send notifications.

SPECIFICATIONS

Automatically Contact The Owner

Turn on "Lost Mode",
and if there is an Apple mobile phone nearby,
the tracker will display your contact number

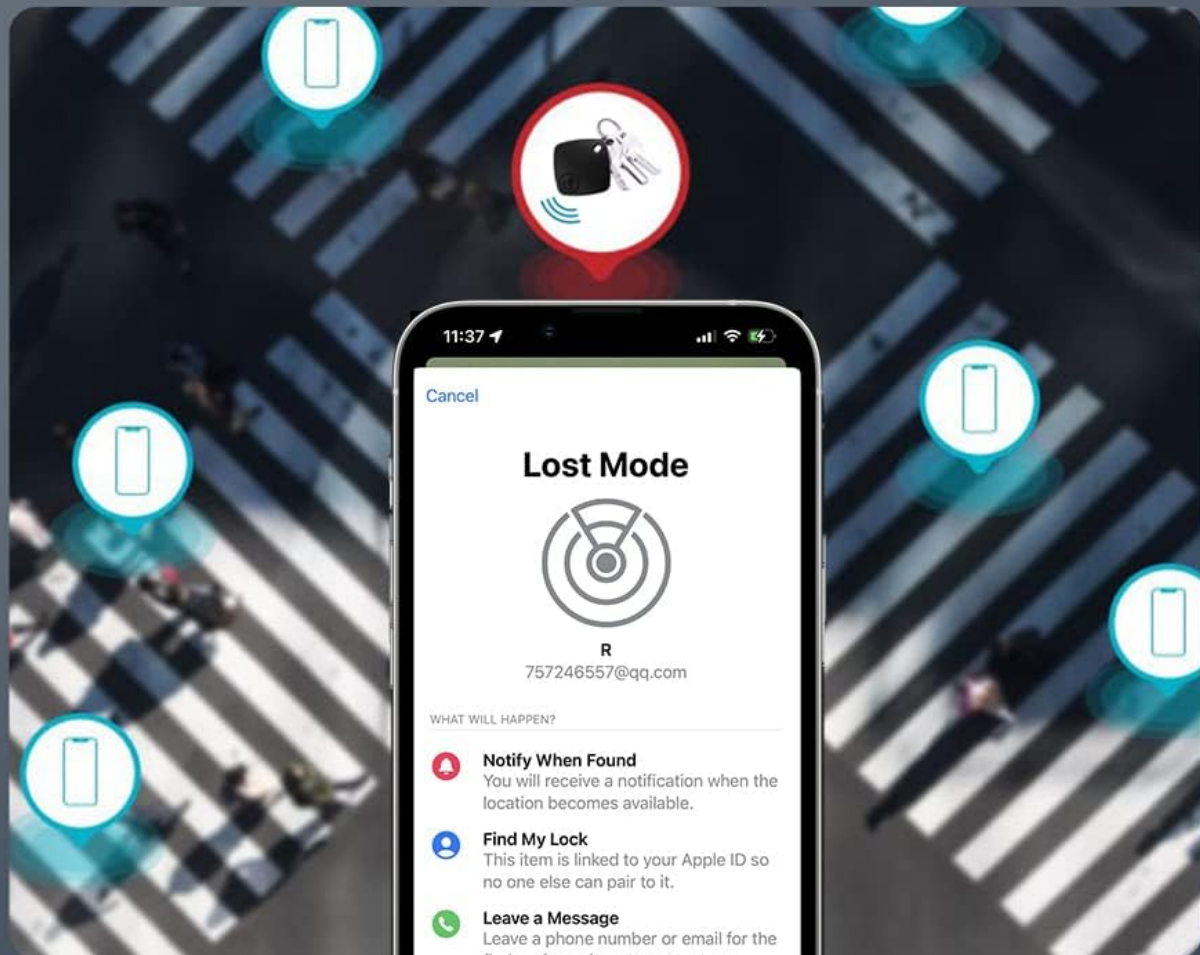 


Image: Product size diagram of the SENCKIT tracker.

Feature	Detail
Product Dimensions	1.49 x 1.49 x 0.27 inches (38 x 38 x 7 mm)
Item Weight	1.06 ounces (30 Grams)
Model Number	Black - 3 pack (iTag)
Battery Type	1 x CR2032 (included, replaceable)
Battery Life	Up to 1 year
Buzzer Volume	Up to 90dB
Wireless Range	10-20M (Indoor), 20-30M (Outdoor)
Connectivity	Bluetooth

Water Resistance	IP65
Compatible Devices	Apple Find My (latest iOS, iPadOS, or macOS recommended)

WARRANTY AND SUPPORT

SENCKIT products are manufactured with high quality standards. For any product inquiries, technical support, or warranty claims, please refer to the contact information provided on the product packaging or visit the official SENCKIT website. Please retain your proof of purchase for warranty purposes.

© 2024 SENCKIT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question