

[manuals.plus](#) /

› [KEMEI](#) /

› [KEMEI KM-2481 Cordless Hair Clipper User Manual](#)

KEMEI KM-2481

KEMEI KM-2481 Cordless Hair Clipper User Manual

Model: KM-2481

1. INTRODUCTION

Thank you for choosing the KEMEI KM-2481 Cordless Hair Clipper. This manual provides essential information for the safe and effective use, maintenance, and care of your new hair clipper. Please read these instructions thoroughly before first use and keep them for future reference.

2. SAFETY INFORMATION

Caution:

- Keep blades away from eyes and face.
- Do not use on infants or children.
- Keep the clipper away from water sources.
- Always unplug the clipper before cleaning or performing maintenance.
- Allow the clipper to cool before handling after use.
- In case of skin irritation, discontinue use and consult a doctor.

3. WHAT'S IN THE BOX

Your KEMEI KM-2481 Hair Clipper package includes the following items:

- 1 x Hair Clipper (Battery Included)
- 6 x Comb Attachments (4-6mm, 7-9mm, 10-12mm, 16-18mm, 22-24mm, 28-30mm)
- 1 x Universal USB Cable
- 1 x Cleaning Brush
- 1 x Blade Oil
- 1 x User Manual

7 Types of Limit Combs

SEVEN LENGTH LIMIT COMBS DESIGN YOUR HAIR IN ALL DIRECTIONS



Image: Contents of the KEMEI KM-2481 package, including the clipper, various comb attachments, USB cable, cleaning brush, and blade oil.

4. PRODUCT OVERVIEW

Familiarize yourself with the different parts of your KEMEI KM-2481 Hair Clipper:

Part name



Image: Diagram illustrating the main components of the KEMEI KM-2481 hair clipper, including the cutter head, power switch, acceleration indicator, use indicator, and charging interface.

- **Cutter Head:** Stainless steel precision blades for cutting hair.
- **Adjustable Taper Lever:** Located on the side, allows fine-tuning of cutting lengths from 0.8mm to 1.2mm without a comb attachment.
- **Power Switch:** Turns the clipper ON/OFF.
- **Acceleration Indicator:** Displays the current speed setting.
- **Use Indicator:** Shows operational status.
- **Charging Interface:** USB port for charging the device.

5. CHARGING THE CLIPPER

The KEMEI KM-2481 features a built-in rechargeable battery. Before first use, ensure the clipper is fully charged.

LARGE CAPACITY BATTERY & USB CHARGING




Laptop




Power bank



Car charger

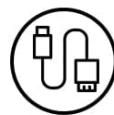

USB Charge

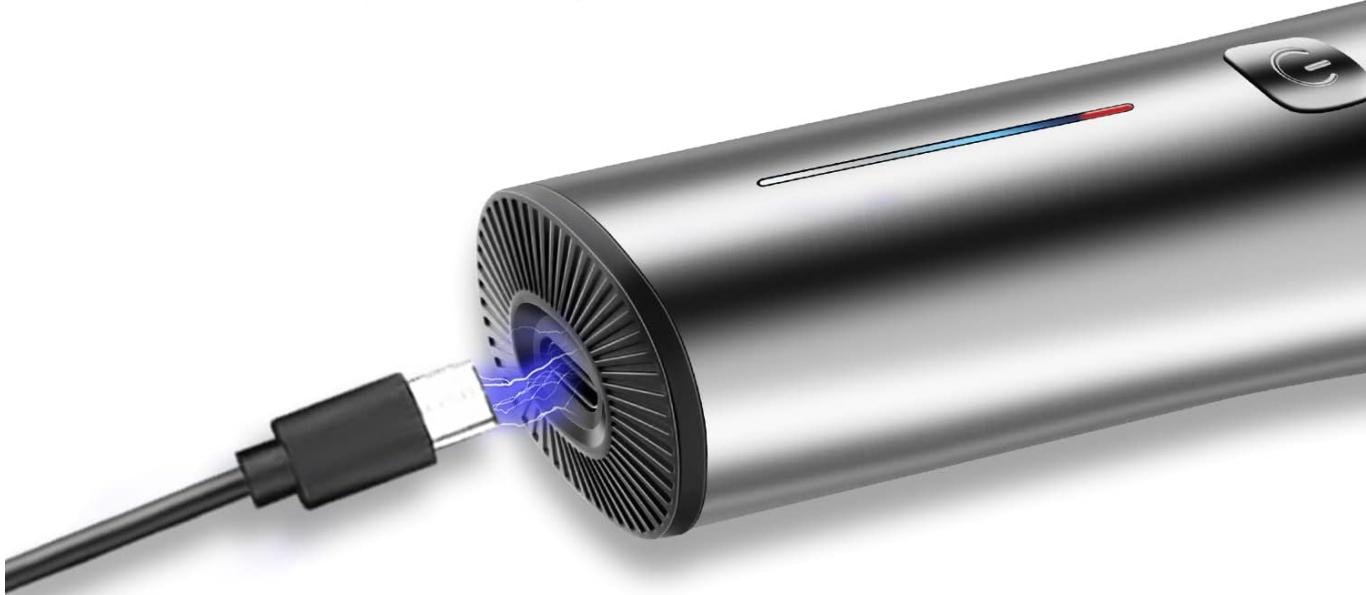

3 hours
Full Charging Time



180 min
Cordless Running Time



2000 mAh
Super Battery

Image: The KEMEI KM-2481 hair clipper connected to a USB charging cable, illustrating its compatibility with various USB power sources like laptops, power banks, and car chargers.

1. Insert the universal USB cable into the charging interface at the bottom of the clipper.
2. Connect the other end of the USB cable to a suitable USB power source (e.g., laptop, power bank, USB wall adapter).
3. The LED display will indicate the battery level during charging.
4. A full charge takes approximately 3 hours and provides up to 180 minutes of cordless running time.

Note: Do not operate the clipper while it is charging.

6. SETUP AND OPERATION

6.1 Attaching Comb Attachments

To achieve desired hair lengths, use the provided comb attachments:

7 Types of Limit Combs

SEVEN LENGTH LIMIT COMBS DESIGN YOUR HAIR IN ALL DIRECTIONS



Image: The KEMEI KM-2481 hair clipper displayed alongside its six comb attachments, ranging from 4-6mm to 28-30mm, for different cutting lengths.

1. Ensure the clipper is turned OFF.
2. Select the desired comb attachment (e.g., 4-6mm, 7-9mm, 10-12mm, 16-18mm, 22-24mm, 28-30mm).
3. Align the comb attachment with the clipper head and slide it on until it clicks securely into place.
4. To remove, gently push the comb attachment upwards and off the clipper head.

6.2 Adjusting the Taper Lever

The adjustable taper lever allows for precise cutting length adjustments without changing comb attachments, ideal for blending and fading.

Stainless Steel Cutter Head

Steel precision hair clipper & Adjustable knife head



Image: Close-up of the KEMEI KM-2481 hair clipper's stainless steel cutter head and the adjustable taper lever, showing settings for 0.8mm, 1.0mm, and 1.2mm cutting lengths.

- Move the lever up or down to select cutting lengths between 0.8mm and 1.2mm.
- A higher position results in a shorter cut, and a lower position results in a longer cut.

6.3 Operating the Clipper

Once charged and set up with the desired comb attachment or blade length:

1. Press the Power Switch to turn the clipper ON.
2. The powerful 5W motor provides consistent performance.

3. Begin cutting hair, moving the clipper against the direction of hair growth for an even cut.
4. Use the clipper for various hair cutting needs, including beard trimming and general haircuts.
5. After use, press the Power Switch to turn the clipper OFF.



Image: Four panels showing the KEMEI KM-2481 hair clipper being used for different grooming tasks, including beard trimming, sideburn shaping, and children's haircuts.

7. MAINTENANCE

Regular cleaning and oiling will ensure optimal performance and extend the life of your clipper.

7.1 Cleaning the Blades

1. Ensure the clipper is turned OFF and unplugged from any power source.
2. Use the provided cleaning brush to remove loose hairs from the blades and the area around the cutter head.
3. For a more thorough cleaning, you may carefully detach the cutter head (refer to product overview for guidance if needed).

7.2 Oiling the Blades

1. After cleaning, apply a few drops of the included blade oil to the teeth of the blades.
2. Turn the clipper ON for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.

Note: Oil blades regularly, especially after each use, to maintain sharpness and smooth operation.

8. TROUBLESHOOTING

If you encounter any issues with your KEMEI KM-2481 Hair Clipper, please refer to the following common solutions:

Problem	Possible Cause	Solution
Clipper does not turn on.	Low battery or not charged.	Charge the clipper fully for 3 hours.
Clipper pulls hair or cuts unevenly.	Blades are dull, dirty, or not oiled.	Clean and oil the blades. Ensure blades are free of debris.
Reduced motor speed.	Low battery.	Recharge the clipper.

If the issue persists after trying these solutions, please contact customer support.

9. SPECIFICATIONS

- **Model Number:** KM-2481
- **Power Source:** Battery Powered (USB Rechargeable)
- **Motor Power:** 5W
- **Battery Type:** Built-in rechargeable premium battery cell
- **Charging Time:** Approximately 3 hours
- **Running Time:** Up to 180 minutes
- **Adjustable Blade Lengths:** 0.8mm, 1.0mm, 1.2mm
- **Comb Attachments:** 4-6mm, 7-9mm, 10-12mm, 16-18mm, 22-24mm, 28-30mm
- **Product Dimensions:** 3.15 x 1.97 x 1.38 inches
- **Item Weight:** 653 Grams (1.44 Pounds)
- **Color:** Silver

10. WARRANTY AND SUPPORT

KEMEI offers a 100% satisfaction guarantee. If you experience any problems with your KEMEI KM-2481 Hair Clipper set within 1 year of purchase, please contact us. We are committed to providing a satisfactory solution. For customer support, please refer to the contact information provided with your purchase or visit the official KEMEI website.

11. PRODUCT VIDEO

Watch the official product video for a visual guide on the KEMEI KM-2481 Hair Clipper's features and usage.

Your browser does not support the video tag.

Video: KEMEI Professional Hair Clipper for Men Show Video. This video demonstrates the product's design, included accessories, and key

features such as adjustable blade, comb attachments, and USB charging.

© 2023 KEMEI. All rights reserved.