

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Indesit](#) /

› [Indesit BWSA 61051 W EU N Washing Machine User Manual](#)

## Indesit BWSA 61051 W EU N

# Indesit BWSA 61051 W EU N Washing Machine User Manual

Model: BWSA 61051 W EU N

## INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Indesit BWSA 61051 W EU N washing machine. Please read these instructions carefully before using the appliance and retain them for future reference.

## SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the appliance.
- Unplug the appliance before performing any maintenance or cleaning.
- Do not operate the appliance if it is damaged or malfunctioning.
- Keep packaging materials away from children.

## SETUP AND INSTALLATION

### Unpacking

Carefully remove all packaging materials, including the polystyrene base and any protective films. Ensure all transit bolts are removed from the rear of the machine before use. Failure to remove transit bolts will cause damage during operation.

### Positioning

Place the washing machine on a flat, stable floor. Adjust the feet to ensure the appliance is level. Proper leveling prevents vibrations and excessive noise during operation.

### Water Connection

Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the hose is securely tightened to prevent

leaks. The drain hose should be placed into a standpipe or hooked over the edge of a sink, ensuring it is not kinked.

## Electrical Connection

Plug the appliance into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating plate of the washing machine. Do not use extension cords or multiple adapters.



Figure 1: Front view of the Indesit BWSA 61051 W EU N Washing Machine. This image shows the control panel, detergent dispenser, and front-loading door.

## OPERATING INSTRUCTIONS

---

### Control Panel Overview

The control panel features a program selector knob, function buttons, and an LED Plus display. Refer to the diagram below for specific button functions.



Figure 2: Close-up of the control panel, showing the program selector, display, and function buttons.

### Loading Laundry

Open the door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. Close the door firmly.

### Adding Detergent

Pull out the detergent dispenser drawer. Add detergent to the main wash compartment and fabric softener to the designated compartment. Do not exceed the maximum fill lines.

## Selecting a Program

Turn the program selector knob to choose the desired wash program (e.g., Cotton, Synthetics, Delicates). The LED Plus display will show the program duration and other relevant information.

## Starting a Wash Cycle

Press the Start/Pause button to begin the wash cycle. The door will lock, and the machine will start filling with water.

## MAINTENANCE AND CLEANING

### Cleaning the Detergent Dispenser

Regularly remove and clean the detergent dispenser drawer under running water to prevent detergent residue buildup.

### Cleaning the Door Seal

Wipe the door seal after each wash to remove any lint or debris. This helps prevent mold and unpleasant odors.

### Cleaning the Pump Filter

Periodically clean the pump filter, located at the bottom front of the machine. Refer to the diagram for access. This prevents blockages and ensures proper drainage.



Figure 3: Illustration showing the typical location of the pump filter on a front-loading washing machine.

## Descaling

Use a suitable descaling product every few months, especially in hard water areas, to maintain appliance performance.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press Start.
Water not filling	Water tap closed, inlet hose kinked, water pressure too low.	Open water tap, straighten hose, check household water supply.
Excessive vibration/noise	Transit bolts not removed, machine not level, uneven load.	Remove transit bolts, adjust leveling feet, redistribute laundry.

Problem	Possible Cause	Solution
Water not draining	Drain hose kinked, pump filter blocked.	Straighten drain hose, clean pump filter.

If the problem persists after attempting these solutions, please contact customer support.

## SPECIFICATIONS

**Model:** BWSA 61051 W EU N

**Capacity:** 6 kg

**Maximum Spin Speed:** 1000 RPM

**Loading Type:** Front loading

**Dimensions (H x W x D):** Approximately 85 cm x 59.5 cm x 42.5 cm

**Energy Efficiency Class:** F

**Display:** LED Plus

**Power Supply:** Refer to rating plate on appliance

*Note: Specifications are subject to change without notice for product improvement.*

## WARRANTY AND SUPPORT

### Warranty Information

This Indesit appliance comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects and faulty materials. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by improper installation, misuse, or normal wear and tear.

### Customer Support

For technical assistance, spare parts, or to schedule a service appointment, please contact Indesit customer support. Contact details can typically be found on the official Indesit website or in the documentation supplied with your appliance. When contacting support, please have your appliance's model number (BWSA 61051 W EU N) and serial number ready. The serial number is usually located on a sticker inside the door frame or on the back of the appliance.

© 2024 Indesit. All rights reserved.

This manual is for informational purposes only. Indesit is not responsible for any damages or injuries resulting from improper use of the appliance.