

[Manuals.plus](#) /

› [Ultima Cosa](#) /

› Ultima Cosa 1.5L Digital Touch Panel Air Fryer Instruction Manual

Ultima Cosa 1.5L Digital Touch Panel Air Fryer

Ultima Cosa 1.5L Digital Touch Panel Air Fryer User Manual

Model: 1.5L Digital Touch Panel Air Fryer

INTRODUCTION

Thank you for choosing the Ultima Cosa 1.5L Digital Touch Panel Air Fryer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Ultima Cosa Air Fryer.



Image: The Ultima Cosa 1.5L Digital Touch Panel Air Fryer, showcasing its compact design and the removable frying basket filled with fries.

Main Components:

- **Digital Touch Panel:** For setting time, temperature, and selecting preset modes.
- **Air Inlet:** Located at the top of the unit.
- **Air Outlet:** Located at the back of the unit.
- **Frying Basket:** Non-stick and dishwasher-safe for easy cleaning.
- **Basket Handle:** For safe removal and insertion of the frying basket.

Easy To Use With Preset Cook Modes



7 Preset Cook Modes : Preheat, fries, steak, chicken, fish, veg, bacon. You just need set the time for your food, leave other things to the air fryer.



Easy To Control

Adjust the time, mode & temperature with the built-in LED screen.



Image: A detailed view of the digital touch panel, highlighting the temperature and time display, along with various preset cooking icons.

SETUP AND FIRST USE

Unpacking:

1. Remove all packaging materials from the air fryer.
2. Check that all parts are present and undamaged.

Before First Use:

1. Wipe the exterior of the air fryer with a damp cloth.
2. Clean the frying basket and any removable accessories with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. Place the air fryer on a stable, level, heat-resistant surface, ensuring adequate space (at least 10 cm / 4 inches) around the back and sides for proper air circulation.
4. Plug the power cord into a grounded wall outlet.

OPERATING INSTRUCTIONS

General Operation:

1. Pull the frying basket out of the air fryer.
2. Place ingredients into the frying basket. Do not exceed the MAX fill line.
3. Slide the frying basket back into the air fryer. Ensure it is fully closed.
4. Press the Power button to turn on the appliance.
5. Select a preset cooking mode or manually set the temperature and time.
6. Press the Start/Pause button to begin cooking.
7. Some foods may require shaking halfway through the cooking process. Pull out the basket, shake, and reinsert. The air fryer will resume cooking automatically.
8. When cooking is complete, the timer will sound. Carefully pull out the basket and remove the food.



Image: A user removing cooked food from the air fryer basket using tongs, illustrating the ease of access and the variety of foods that can be prepared.

Preset Cook Modes:

The air fryer features 8 preset cooking modes for common dishes:

- **Preheat:** Prepares the air fryer for cooking.
- **Fries:** Optimized for crispy French fries.
- **Steak:** Ideal for cooking various cuts of steak.
- **Chicken:** Suitable for chicken pieces or small whole chickens.
- **Fish:** Perfect for fish fillets.
- **Veg:** For a variety of vegetables.
- **Bacon:** For perfectly crispy bacon.
- **Shrimp:** For quick and even cooking of shrimp.

To use a preset mode, simply press the corresponding icon on the digital touch panel. The air fryer will automatically set

the recommended time and temperature. You can adjust these settings manually if desired.

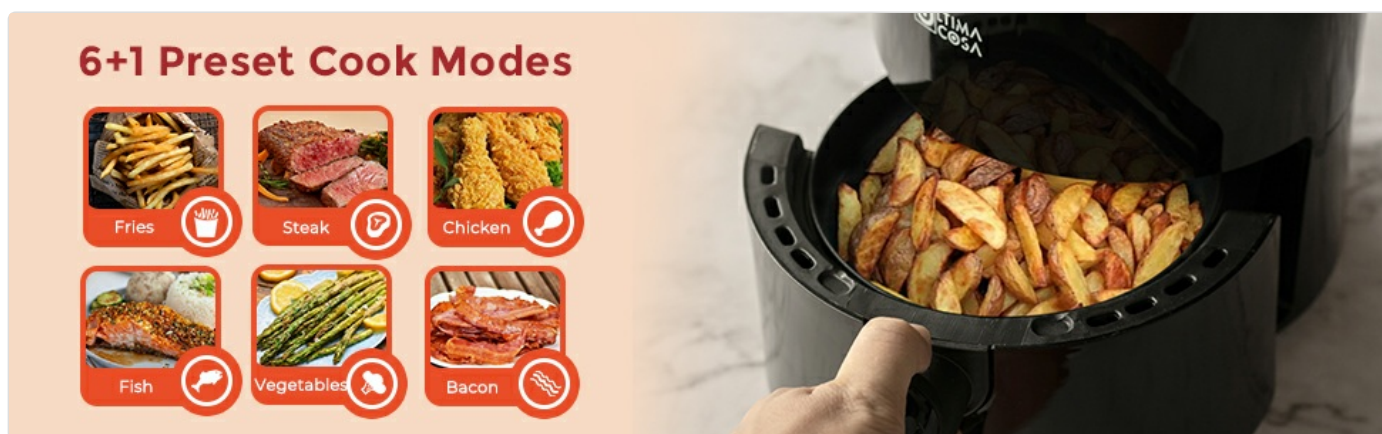


Image: An illustration of the 6+1 preset cooking modes available on the air fryer, including Fries, Steak, Chicken, Fish, Vegetables, and Bacon, with an image of fries in the basket.

Manual Settings:

To manually set the cooking time and temperature:

1. Press the Temperature control button (usually indicated by a thermometer icon) and use the '+' and '-' buttons to adjust the temperature.
2. Press the Time control button (usually indicated by a clock icon) and use the '+' and '-' buttons to adjust the cooking time.
3. Press the Start/Pause button to begin cooking.

CARE AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your air fryer.

Cleaning:

1. Always unplug the air fryer and allow it to cool completely before cleaning.
2. Wipe the exterior with a damp cloth. Do not use abrasive cleaners.
3. The frying basket and removable accessories are dishwasher-safe. For hand washing, use hot water, dish soap, and a non-abrasive sponge.
4. Clean the interior of the appliance with a damp cloth. If necessary, use a mild detergent.
5. Ensure all parts are thoroughly dry before reassembling or storing.



Image: Demonstrates the cleaning process, showing both hand-washing and dishwasher compatibility for the air fryer basket.

Storage:

Store the air fryer in a cool, dry place. Ensure the power cord is neatly wrapped and secured.

TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
Food is not cooked evenly.	Basket is overloaded; food not shaken.	Do not overload the basket. Shake smaller ingredients halfway through cooking.

Problem	Possible Cause	Solution
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and interior thoroughly. For fatty foods, absorb excess oil before cooking.
Food is not crispy.	Not enough oil (for some foods); temperature too low; cooking time too short.	Lightly brush or spray food with oil. Increase temperature or cooking time.

SPECIFICATIONS

Feature	Detail
Model	1.5L Digital Touch Panel Air Fryer
Capacity	1.5 Liters (approx. 2 Pounds)
Material	Aluminum
Dimensions (D x W x H)	30D x 23.6W x 31.8H Centimetres
Output Wattage	1500 Watts
Rated Wattage	1230 Watts
Voltage	120 Volts
Control Method	Touch Panel
Special Features	Programmable, Temperature Control, Nonstick Coating
UPC	700445630915

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Ultima Cosa customer service. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C32WC2VG>

More documents and user manuals: <https://manuals.plus/>