



Manuals.plus /

› oneisall /

› oneisall Replacement Metal Blades for RK-034 Model Instruction Manual

oneisall RK-034

oneisall Replacement Metal Blades for RK-034 Model

Instruction Manual

INTRODUCTION

This manual provides instructions for the proper installation and maintenance of your oneisall Replacement Metal Blades, designed specifically for the oneisall RK-034 clipper model. Adhering to these guidelines will ensure the longevity and optimal performance of your blades.

SETUP: BLADE INSTALLATION

The replacement process for these blades is designed for simplicity, involving a quick pop-out and pop-in mechanism. Ensure the clipper is turned off and unplugged before beginning the installation.

1. **Remove Old Blade:** Gently press the old blade assembly to detach it from the clipper body. It should 'pop out' with minimal force.
2. **Align New Blade:** Take the new replacement blade. Align the small tabs on the back of the blade with the corresponding slots on the clipper head.
3. **Secure New Blade:** Press the new blade firmly into place until you hear a 'click' or feel it securely seated. Ensure it is flush with the clipper body.



Image: The oneisall replacement metal blade shown alongside the compatible oneisall RK-034 clipper, illustrating how the blade fits onto the device.

The entire process typically takes less than one minute.

OPERATING THE BLADES

These replacement blades are designed for use with the oneisall RK-034 pet clipper. Once installed, operate the clipper according to its original instruction manual. The blades are suitable for trimming various hair types, making them ideal for dog owners and caretakers.

MAINTENANCE

Proper maintenance is crucial for extending the life and performance of your blades:

- **Cleaning:** After each use, remove hair and debris from the blades using a brush.
- **Drying:** Ensure the blades are completely clean and dry to prevent rust.
- **Oiling:** Regularly apply clipper oil to the blades to reduce friction and maintain sharpness.
- **Storage:** Store the blades in a clean, dry place when not in use.

Always unplug the clipper device when not in use or when performing blade changes or maintenance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blades not cutting effectively	Dull blades, hair buildup, lack of oil, incorrect installation	Clean and oil blades. Reinstall blades correctly. If dull, replace with new blades.
Blades pulling hair	Dull blades, insufficient oiling	Ensure blades are sharp and well-oiled. Consider replacement if blades are old.
Excessive heat from blades	Lack of lubrication, prolonged use	Apply clipper oil. Allow clipper to cool down during extended grooming sessions.

SPECIFICATIONS

- **Model:** RK-034 (Replacement Blade)
- **Material Type:** Metal
- **Blade Material:** Metal
- **Item Weight:** 0.06 Kilograms (approximately 2.12 ounces)
- **Package Dimensions:** 2.95 x 2.44 x 1.1 inches
- **Recommended Uses:** Trimming
- **Target Audience:** Dog owners or caretakers

SAFETY INFORMATION

- Always keep the blade away from your eyes and skin.
- Do not use on infants or children.
- Keep the blade clean and dry to prevent rust and maintain optimal performance.
- Always unplug the device when not in use or when changing blades.

WARRANTY AND SUPPORT

oneisall products are typically backed by a **2-Year Warranty**. For any questions, technical assistance, or warranty claims, please contact oneisall customer support. **24/7 Support** is available to assist you. For further information, please visit the official oneisall store or contact their customer service directly.