

[Manuals.plus](#) /

› [TOKASS](#) /

› TOKASS Electric Multi-purpose Slicer SL4383 User Manual

TOKASS SL4383

TOKASS Electric Multi-purpose Slicer SL4383 User Manual

Model: SL4383

INTRODUCTION

Thank you for purchasing the TOKASS Electric Multi-purpose Slicer. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions thoroughly before first use and keep them for future reference.



Image: The TOKASS Electric Multi-purpose Slicer, showcasing its stainless steel body and serrated blade.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- **Read All Instructions:** Before operating the slicer, read and understand all instructions in this manual.
- **Blade Safety:** The blade is extremely sharp. Handle with extreme care. Never touch the blade directly with your hands.
- **Safety Lock & Power Button:** To operate the slicer, you must press the SAFETY LOCK and POWER button simultaneously. This prevents accidental activation.
- **Stable Placement:** Ensure the slicer is placed on a stable, flat, and dry surface. The non-slip suction feet must be securely attached to prevent movement during operation.
- **Supervision:** Close supervision is necessary when any appliance is used by or near children.
- **Power Supply:** Connect the appliance only to a grounded power outlet with the correct voltage.
- **Unplug When Not In Use:** Always unplug the slicer from the power outlet before assembling, disassembling, cleaning, or when not in use.
- **Avoid Contact with Moving Parts:** Keep hands, hair, clothing, and utensils away from the moving blade during operation.
- **Do Not Force Food:** Never force food into the slicer. Use the food pusher provided.
- **Damaged Cord/Plug:** Do not operate any appliance with a damaged cord or plug, or after the appliance

malfunctions or has been damaged in any manner.

- **Indoor Use Only:** This appliance is intended for household indoor use only.



Image: Visual representation of safe slicing practices, emphasizing the use of the electric slicer over manual cutting for safety.

PRODUCT COMPONENTS

Familiarize yourself with the main parts of your TOKASS Electric Multi-purpose Slicer:

- **Serrated Stainless Steel Blade:** 7.5-inch diameter, designed for efficient slicing.
- **Food Carriage:** Holds food securely during slicing.
- **Food Pusher:** Keeps hands away from the blade and helps guide food.
- **Thickness Adjustment Knob:** Allows precise control over slice thickness (0-15mm).
- **Safety Lock & Power Button:** Dual activation for safe operation.
- **Non-slip Suction Feet:** Provides stability during use.
- **Motor Housing:** Contains the 150-watt motor.




01

**MOTOR
OPERATED**

02

**BPA-FREE
FOOD PUSHER**

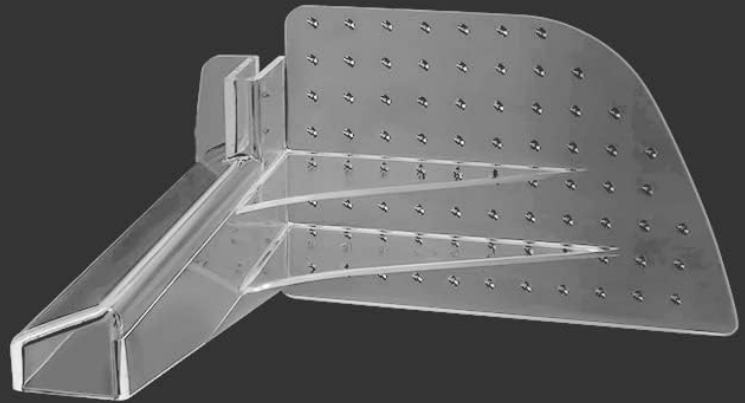

03

**CHILD LOCK
PROTECTION**



04

**STRONG
SUCTION FEET**



Image: An illustration highlighting the internal motor, BPA-free food pusher, safety lock button, and strong suction feet of the slicer.

SETUP AND ASSEMBLY

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Clean:** Before first use, clean all removable parts (blade, food carriage, food pusher) according to the "Cleaning and

Maintenance" section.

3. **Placement:** Place the slicer on a clean, dry, and stable countertop. Press down firmly on the top of the slicer to engage the suction feet, ensuring it is securely fixed.
4. **Assemble Food Carriage:** Slide the food carriage onto its rail until it clicks into place.
5. **Attach Food Pusher:** Place the food pusher onto the food carriage.
6. **Blade Installation (if removed):** Ensure the blade is correctly seated and secured. Refer to the "Cleaning and Maintenance" section for blade removal/installation details.

OPERATING INSTRUCTIONS

Follow these steps for safe and effective slicing:

1. **Prepare Food:** Ensure the food item is suitable for slicing and fits comfortably on the food carriage. For best results, chill meats and cheeses before slicing.
2. **Adjust Thickness:** Use the thickness adjustment knob to select your desired slice thickness, ranging from approximately 0mm to 15mm. Turn the knob clockwise for thicker slices and counter-clockwise for thinner slices.
3. **Place Food:** Place the food item onto the food carriage and secure it against the food guide plate. Use the food pusher to hold the food firmly in place.
4. **Power On:** Plug the slicer into a grounded electrical outlet. To start the slicer, simultaneously press and hold the **SAFETY LOCK** button and the **POWER** button. Release the buttons once the motor starts.
5. **Slice:** Gently push the food carriage forward and backward, guiding the food towards the rotating blade with the food pusher. Apply even, steady pressure.
6. **Collect Slices:** Sliced food will fall onto the tray or surface beneath the blade.
7. **Power Off:** Once slicing is complete, press the **POWER** button to turn off the slicer. Unplug the appliance from the wall outlet.

Adjustable Thickness

The slicer allows for precise thickness adjustment from 0mm (paper-thin) to 15mm (thick cuts). Experiment with different settings to achieve your desired slice consistency for various foods like meat, cheese, bread, and vegetables.

CUSTOMIZE THICKNESS

0-15mm Adjustable Thickness



5mm



10mm



15mm

Image: Detail of the thickness adjustment knob, illustrating how to set slice thickness and showing examples of meat sliced at 5mm, 10mm, and 15mm.

Versatile Slicing

This electric slicer is designed to handle a variety of foods, including:

- **Meats:** Roast beef, turkey breast, ham, sausages, cold cuts.

- **Cheeses:** Various types of cheese.
- **Breads:** Loaves of bread.
- **Vegetables & Fruits:** Potatoes, onions, firm fruits.



Image: A detailed view of the 7.5-inch stainless steel serrated blade, demonstrating its capability to slice various foods like meat and bread.

CLEANING AND MAINTENANCE

Always unplug the slicer before cleaning or performing any maintenance.

Disassembly for Cleaning

The TOKASS slicer is designed for easy cleaning with several removable parts:

1. **Remove Blade:** Carefully turn the blade locking mechanism (usually a central knob) to unlock and remove the serrated blade. Handle the blade by its center hub only.
2. **Remove Food Carriage:** Slide the food carriage off its rail.
3. **Remove Food Pusher:** Detach the food pusher from the food carriage.
4. **Remove Sliding Bar Extension:** If applicable, remove the extension of the sliding bar.

Cleaning Instructions

- **Removable Parts:** Wash the blade, food carriage, food pusher, and sliding bar extension by hand using warm, soapy water. Rinse thoroughly and dry immediately to prevent rust.
- **Slicer Body:** Wipe the main body of the slicer with a damp cloth. Do not immerse the motor housing in water.
- **Blade Ring Cover:** The removable protective ring cover prevents food accumulation behind the blade. Clean this area regularly.
- **Drying:** Ensure all parts are completely dry before reassembling or storing the slicer.
- **Care Instruction:** Hand wash only for all removable parts.

EASY TO CLEAN

Detachable accessories



1 Removable Blade



2 Removable Sliding Bar



3 Detachable Food Carriage

Image: An illustration demonstrating the easy removal of the blade, sliding bar, and food carriage for thorough cleaning.



Image: Instructions on removing the serrated blade and cleaning it under running water, highlighting the stainless steel material.

TROUBLESHOOTING

If you encounter issues with your slicer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Slicer does not turn on.	Not plugged in; Safety Lock & Power button not pressed simultaneously; Power outage.	Ensure the slicer is securely plugged in. Press both the SAFETY LOCK and POWER buttons at the same time. Check your power supply.
Slices are uneven or ragged.	Blade is dull or dirty; Food not properly chilled; Incorrect thickness setting; Food not held firmly.	Clean the blade thoroughly. Ensure food is firm and chilled. Adjust thickness setting. Use the food pusher to hold food firmly against the guide.
Slicer moves during operation.	Suction feet not engaged; Surface is wet or uneven.	Ensure the slicer is on a dry, flat surface and press down to engage the suction feet.
Motor sounds strained.	Overloading the motor; Food is too hard or frozen.	Do not overload the slicer. Ensure food is not frozen. Slice softer items or reduce pressure.

If the problem persists after trying these solutions, please contact customer support.

PRODUCT SPECIFICATIONS

Feature	Specification
Brand	TOKASS
Model	SL4383
Color	Silver
Material	Metal
Blade Material	Stainless Steel
Blade Length	7.5 inches
Power	150 Watts
Adjustable Thickness	0 - 15 mm
Product Dimensions	39 x 26.9 x 27 cm (15.35 x 10.59 x 10.63 inches)
Item Weight	4.43 kg (9.77 lbs)
Care Instructions	Hand wash only (for removable parts)

COMPACT AND CAPABLE

Satisfaction with chunks of food



Image: A visual representation of the slicer's dimensions, indicating its compact size.

WARRANTY AND CUSTOMER SUPPORT

TOKASS products are designed for durability and safety. If you have any questions or require assistance with your TOKASS Electric Multi-purpose Slicer, please do not hesitate to contact our customer service team. While specific

warranty details are not provided in this manual, we are committed to providing quality service and support for our products.

For support, please refer to the contact information provided at the point of purchase or on the official TOKASS website.

© 2024 TOKASS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question