

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ROBUD](#) /

› [ROBUD Kids & Toddlers Kitchen Playset User Manual](#)

ROBUD Kids & Toddlers Kitchen Playset

ROBUD Kids & Toddlers Kitchen Playset User Manual

Model: Kids & Toddlers Kitchen Playset

Brand: ROBUD

INTRODUCTION

Thank you for choosing the ROBUD Kids & Toddlers Kitchen Playset. This wooden pretend play kitchen set is designed to encourage imaginative play, develop fine motor skills, and enhance social interaction for children aged 3 years and up. Crafted from solid wood, this playset offers a sturdy and durable construction, ensuring long-lasting fun. Please read this manual carefully before assembly and use to ensure safe and proper operation.

Safety Information

CHOKING HAZARD — Small parts. Not for children under 3 years. Adult supervision is recommended during play. Ensure all parts are securely fastened after assembly.

COMPONENTS LIST

Before beginning assembly, please verify that all components listed below are present in your package.

- Toy Body (main kitchen structure)
- Installation Instruction Manual
- Assorted Play Cookware (e.g., pot, pan, lid)
- Play Utensils (e.g., spatula, spoon)
- Play Food Accessories (e.g., carrot, eggplant, garlic, tomato)
- Salt and Pepper Shakers
- Assembly Hardware (screws, pegs, etc.)



Image: Included play food and accessories. This image displays a selection of the wooden play food items and kitchen utensils that come with the playset, such as a carrot, eggplant, garlic, tomato, a pot, a pan, and various cooking tools.

SETUP AND ASSEMBLY

Assembly of the ROBUD Kids & Toddlers Kitchen Playset requires adult supervision and basic tools (not included, typically a screwdriver). Follow the step-by-step instructions provided in the included Installation Instruction Manual.

1. Unpack all components and lay them out on a clean, flat surface.
2. Identify each part by referring to the diagrams in the instruction manual.
3. Begin by attaching the side panels to the base, ensuring all screws and pegs are securely tightened.
4. Proceed with assembling the main kitchen structure, including the oven and storage compartments.
5. Install the countertop, sink, and faucet components.
6. Attach the back panel, including the utensil hooks and shelf.
7. Finally, secure any remaining decorative elements and ensure the playset is stable before use.



Image: Detail of the playset during use. This image provides a close-up view of the playset's stovetop area, featuring a pot and a pan filled with wooden play vegetables, demonstrating interactive play.

OPERATING INSTRUCTIONS

The ROBUD Kitchen Playset is designed for imaginative role-playing. There are no electronic components requiring power.

- **Stovetop and Knobs:** The playset features a stovetop with two burners and three rotatable knobs. Children can turn the knobs to simulate adjusting heat, encouraging fine motor skills.
- **Sink and Faucet:** The sink basin can be used for pretend washing of dishes or food. The faucet and handles are fixed and designed for imaginative play.
- **Oven and Storage:** The oven door opens to reveal storage space, allowing children to "bake" pretend food or store accessories. Additional storage hooks are provided for hanging utensils.
- **Play Food and Utensils:** Use the included wooden play food and utensils to simulate cooking, chopping, and serving meals. Some play food items are designed to be "cut" apart with the included wooden knife, held together by hook-and-loop fasteners.

Exercise hands-on skills and Stimulate Imagination



Image: Key features of the playset. This composite image highlights several interactive features of the kitchen playset, including the ability to "cut" play food, ample storage, convenient hanging hooks for utensils, and a realistic simulated oven.

MAINTENANCE

To ensure the longevity and cleanliness of your ROBUD Kitchen Playset, follow these maintenance guidelines:

- **Cleaning:** Wipe down all wooden surfaces with a soft, damp cloth. For stubborn marks, a mild soap solution can be used, followed by wiping with a clean, dry cloth. Avoid abrasive cleaners or excessive moisture.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten any loose fasteners to maintain stability and safety.
- **Storage:** Store the playset in a dry environment, away from direct sunlight or extreme temperatures, to prevent warping or damage to the wood.

TROUBLESHOOTING

This playset is designed for simplicity and durability. Most issues can be resolved with basic checks.

Problem	Possible Cause	Solution
Playset feels wobbly or unstable.	Loose assembly screws or connections.	Carefully re-tighten all visible screws and check all connections according to the assembly manual.
Wooden parts appear discolored or warped.	Exposure to excessive moisture or direct sunlight.	Ensure the playset is stored in a dry, temperature-stable environment. Minor discoloration may fade over time.
Missing or damaged parts upon unboxing.	Manufacturing or shipping error.	Contact ROBUD customer support immediately with proof of purchase and details of the missing/damaged parts.

SPECIFICATIONS

- **Material:** Wood
- **Product Dimensions:** 11.61 x 20.86 x 29.13 inches (L x W x H)
- **Item Weight:** 20.5 pounds
- **Recommended Age:** 3 years and up
- **Model Number:** Kids & Toddlers Kitchen Playset
- **Manufacturer:** ROBUD
- **Release Date:** January 20, 2021

Specification

Material

Wood

Size

20.86x11.61x29.13inches

Recommended Age

3+

Item Weight

22 pounds



Image: Product dimensions and scale. This image shows the ROBUD Kids & Toddlers Kitchen Playset with its key dimensions (width, depth, height) clearly marked, providing a visual reference for its size.

WARRANTY AND SUPPORT

For specific warranty details and terms, please refer to the product packaging or contact ROBUD customer service directly.

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact ROBUD customer support.

You can visit the official ROBUD Store for more information and contact options [ROBUD Store on Amazon](#)