

PERFASCIN CXE9605

PERFASCIN CXE9605 Remote Control User Manual

For Pioneer Digital Media Receivers

1. INTRODUCTION

This manual provides instructions for the PERFASCIN CXE9605 replacement remote control. This remote is designed to operate various Pioneer Digital Media Receivers without the need for programming or pairing. Please read this manual thoroughly before use to ensure proper operation and to maximize your experience.

2. PRODUCT OVERVIEW

The PERFASCIN CXE9605 is an infrared replacement remote control compatible with a range of Pioneer Digital Media Receivers. It offers direct functionality for common audio and media playback controls.

Compatible Models:

- Pioneer MVH-X175UI
- Pioneer MVH-X390BT
- Pioneer DEH-X3900BT
- Pioneer MVH-X360BT
- Pioneer MVH-X385BT
- Pioneer MVH-285BT
- Pioneer MVH-X370BT
- Pioneer MVH-X375BT
- Pioneer DEH-X4900BT
- Pioneer DEH-X3910BT
- Pioneer MVH-X185UI
- Pioneer DEH-S4000BT
- Pioneer MVH-S300BT
- Pioneer MVH-S030BT
- Pioneer MVH-S301BT

- Pioneer MVH-S600BS
- Pioneer DEH-S5010BT
- Pioneer DEH-S6000BS
- Pioneer DEH-S6010BS
- Pioneer DEH-X6900BT
- Pioneer FH-S500BT
- Pioneer FH-S501BT
- Pioneer FH-S700BS
- Pioneer FH-S701BS
- Pioneer FXT-X7269BT
- Pioneer MVH-S400BT
- Pioneer MVH-S501BS
- Pioneer MVH-X690BS
- Pioneer MVH-X691BS





Image 1: Front view of the PERFASCIN CXE9605 Remote Control. This image displays the overall design and layout of the remote, featuring its black casing and gray buttons.

3. SETUP

Battery Installation

The PERFASCIN CXE9605 remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: No programming or pairing is required for this remote control. Once batteries are installed, it is ready for use with compatible Pioneer Digital Media Receivers.

4. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your PERFASCIN CXE9605 remote control.



Image 2: Top-down view of the PERFASCIN CXE9605 Remote Control, highlighting the button layout. This image provides a clear view of each button and its label for easy identification.

- **VOLUME + / -**: Increases or decreases the audio volume.
- **MUTE**: Silences the audio output. Press again to restore volume.
- **BAND/ESC**: Switches between radio bands (e.g., FM1, FM2, AM) or acts as an 'Escape' function in menus.
- **DISC/P.CH**: Selects disc playback or changes preset channels in radio mode.
- **TRACK/SEEK (◀▶)**: Skips to the previous or next track/chapter during media playback. In radio mode, it seeks for stations.
- **LIST/ENTER**: Navigates through lists or confirms selections in menus.
- **Directional Arrows (Up, Down, Left, Right)**: Used for menu navigation and selection.
- **SRC (Source)**: Cycles through available audio sources (e.g., Radio, USB, Bluetooth, AUX).
- **DISP (Display)**: Changes the information shown on the receiver's display.
- **SCROLL (SCRL)**: Activates scrolling function for long text displays.
- **Call Buttons (Answer/End)**: Manages phone calls when connected via Bluetooth.
- **Play/Pause (⏮⏭)**: Pauses or resumes media playback.

5. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning**: Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they

may damage the surface or internal components.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

6. TROUBLESHOOTING

If you experience issues with your PERFASCIN CXE9605 remote control, please refer to the following common solutions:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the Pioneer Digital Media Receiver's infrared sensor.
 - Make sure you are within the effective operating range and pointing the remote directly at the receiver.
- **Remote functions are incorrect:**
 - Verify that your Pioneer Digital Media Receiver model is listed in the compatible models section of this manual.
 - This remote does not require programming; if functions are incorrect, ensure no other remote signals are interfering.

If the problem persists after trying these steps, please refer to the support information in Section 8.

7. SPECIFICATIONS

Feature	Detail
Model	CXE9605
Brand	PERFASCIN
Product Dimensions	6 x 5 x 0.55 inches
Item Weight	1.4 ounces
Color	Black
Special Feature	Ergonomic, No Programming Required
Compatible Devices	Pioneer Digital Media Receivers (as listed in Section 2)
Power Source	2 x AAA Batteries (not included)

8. SUPPORT

For any questions or further assistance regarding your PERFASCIN CXE9605 remote control, please contact the seller directly. They can provide specific support and guidance for your product.
Please have your product model (CXE9605) and any relevant purchase information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question