

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SPORTNOW](#) /

› [SPORTNOW Electronic Dartboard A70-067V00BK User Manual](#)

SPORTNOW A70-067V00BK

SPORTNOW Electronic Dartboard A70-067V00BK User Manual

Model: A70-067V00BK

1. INTRODUCTION

Thank you for choosing the SPORTNOW Electronic Dartboard. This manual provides essential information for the safe and efficient use of your new dartboard. Please read it thoroughly before installation and operation, and retain it for future reference. This electronic dartboard is designed for up to 8 players, featuring an easy-to-read LCD screen and offering 31 games with 285 program variations. Its durable construction ensures years of enjoyment for family and friends.

2. PACKAGE CONTENTS


Before assembly, please verify that all components listed below are present and in good condition.

- 1 x Electronic Dartboard
- 6 x Soft-tip Darts (9g each)
- 6 x Replacement Soft Tips
- 1 x User Manual

ELEKTRONISCHE DARTSCHEIBE



Bis zu 8 Spieler

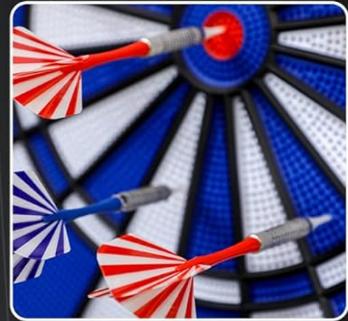

6 Dartpfeile mit
weicher Spitze



6 Ersatzspitzen

Image: The image displays the electronic dartboard along with six soft-tip darts and six replacement tips, illustrating the complete package contents.

3. SAFETY INSTRUCTIONS

- This product is intended for indoor use only.
- Use only soft-tip darts with this electronic dartboard. Hard-tip darts can damage the board and pose a safety risk.
- Ensure the dartboard is securely mounted before use to prevent it from falling.
- Keep children and pets away from the throwing area during play.
- Do not throw darts at people or animals.
- Do not expose the dartboard to water or excessive moisture.
- Do not attempt to disassemble or repair the dartboard yourself. Contact customer support if issues arise.
- Remove batteries if the dartboard will not be used for an extended period to prevent leakage.

4. SETUP

4.1 Battery Installation

The dartboard requires 3 x AAA batteries (not included) for operation. Locate the battery compartment on the back of the dartboard. Insert the batteries, ensuring correct polarity (+/-). Close the battery compartment cover securely.

Note: If the dartboard does not power on, check battery orientation and ensure they are fresh.

4.2 Mounting the Dartboard

The dartboard is designed for wall mounting. Choose a suitable location with enough clear space for throwing darts safely. The standard height for the center of the dartboard (bullseye) is 1.73 meters (5 feet 8 inches) from the floor.

1. Identify the mounting hole on the back of the dartboard.
2. Mark the desired mounting spot on your wall.
3. Install a suitable screw or hook into the wall, ensuring it can support the weight of the dartboard (approximately 1.2 kg).
4. Carefully hang the dartboard onto the installed screw/hook, ensuring it is stable and level.



Image: This image shows a close-up of the keyhole-shaped mounting bracket located on the back of the dartboard, used for wall installation.



40 cm



Image: A diagram illustrating the dimensions of the dartboard. When open, it measures 83 cm wide and 45 cm high. When closed, it measures 40 cm wide, 45 cm high, and 4 cm deep.

5. OPERATING INSTRUCTIONS

The dartboard features an intuitive control panel with an LCD screen to manage game settings and display scores.

5.1 Control Panel Overview



Image: A detailed view of the dartboard's LCD screen and control buttons. The screen displays scores and game information, while buttons allow for game selection, player management, and sound control.

Control Panel Buttons

Button	Function
GAME/POWER	Press to turn the dartboard ON/OFF. Press repeatedly to select different games.
OPTION	Select game options (e.g., number of rounds, difficulty).
PLAYER	Select the number of players (up to 8).
DOUBLE	Activate or deactivate double-in/double-out options for certain games.
SOUND	Adjust or mute the volume of the voice prompts and sound effects.
START/NEXT	Start the selected game or proceed to the next player's turn.

5.2 Basic Operation

1. **Power On:** Press the **GAME/POWER** button to turn on the dartboard.
2. **Select Game:** Press the **GAME/POWER** button repeatedly to cycle through the available games. The game number will be displayed on the LCD screen.
3. **Select Players:** Press the **PLAYER** button to choose the number of participants (1-8 players).
4. **Adjust Options (if applicable):** Use the **OPTION** button to modify game-specific settings like difficulty or number of rounds.
5. **Adjust Sound:** Press the **SOUND** button to cycle through volume levels or mute the sound.
6. **Start Game:** Once all settings are configured, press the **START/NEXT** button to begin the game.
7. **Playing:** Throw your darts. The dartboard will automatically register scores and announce turns.
8. **Next Player:** After a player completes their turn, press **START/NEXT** to advance to the next player.
9. **Power Off:** Press and hold the **GAME/POWER** button to turn off the dartboard.

6. Game Modes

The SPORTNOW Electronic Dartboard offers a wide variety of games to keep players entertained. It includes 31 distinct games with 285 program variations, catering to different skill levels and preferences. Refer to the game list provided in the full manual (if available) for detailed rules and variations of each game.

Common game types include:

- **'01 Games (e.g., 301, 501):** Players start with a set score and aim to reduce it to exactly zero, often with a double-out requirement.
- **Cricket:** A strategic game where players aim to "close" specific numbers (15-20 and bullseye) by hitting them three times.
- **Count-Up:** Players aim to achieve the highest score possible within a set number of rounds.
- **Shanghai:** A challenging game combining single, double, and triple segments.

7. Maintenance

7.1 Cleaning

- Wipe the dartboard surface and cabinet with a soft, dry cloth.
- For stubborn marks, use a slightly damp cloth with mild soap, then wipe dry immediately.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish and electronic components.

7.2 Dart Storage and Protection

The dartboard features integrated storage slots for darts within its cabinet doors.



DOPPELTÜR

- ① Dartpfeile aufbewahren
- ② Geöffnet schützt es vor Schäden durch verfehlte Pfeile

- ③ Im geschlossenen Zustand vor Staub geschützt

Image: The dartboard is shown with its side doors open. These doors serve two purposes: they provide convenient storage for darts and act as protective barriers for the wall against stray throws during play.

- **During Play:** Keep the cabinet doors open. This provides additional protection for your walls against missed throws and allows easy access to stored darts.
- **When Not in Use:** Close the cabinet doors to protect the dartboard surface from dust and potential damage. This also keeps darts neatly stored.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dartboard does not power on.	<ul style="list-style-type: none"> ◦ Batteries are dead or incorrectly installed. ◦ Battery compartment cover is loose. 	<ul style="list-style-type: none"> ◦ Replace with fresh AAA batteries, ensuring correct polarity. ◦ Ensure the battery compartment cover is securely closed.

Problem	Possible Cause	Solution
Darts are not registering scores.	<ul style="list-style-type: none">Dart tips are bent or broken.Dart did not fully penetrate the segment hole.Electronic sensor malfunction.	<ul style="list-style-type: none">Replace damaged dart tips with new ones.Ensure darts are thrown with sufficient force to fully enter the segment.If problem persists, contact customer support.
Sound is not working or too low/high.	<ul style="list-style-type: none">Volume is muted or set too low/high.	<ul style="list-style-type: none">Press the SOUND button to adjust the volume level.
Dartboard turns off during play.	<ul style="list-style-type: none">Batteries are loose or low.Automatic power-off feature activated (if no activity for a period).	<ul style="list-style-type: none">Check battery compartment for secure fit; replace batteries if low.Press any button to reactivate the dartboard.

9. SPECIFICATIONS

Feature	Detail
Model Number	A70-067V00BK
Brand	SPORTNOW
Material	Durable Plastic
Color	Black
Dimensions (Open)	83 cm (Width) x 45 cm (Height)
Dimensions (Closed)	40 cm (Width) x 45 cm (Height) x 4 cm (Depth)
Item Weight	1.2 Kilograms
Power Source	3 x AAA Batteries (not included)
Max Players	8
Number of Games	31 Games, 285 Variations
Display	LCD Screen
Included Components	1 Electronic Dartboard, 6 Soft-tip Darts, 6 Replacement Tips

10. WARRANTY AND SUPPORT

Specific warranty information for the SPORTNOW Electronic Dartboard A70-067V00BK is not provided in this document. For details regarding warranty coverage, returns, or technical support, please refer to the purchase documentation or contact the retailer/manufacturer directly.

For further assistance, please visit the official SPORTNOW website or contact their customer service department.

