

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Synergy Digital](#) /

› Synergy Digital Vacuum Cleaner Battery User Manual for Ecovacs DVX45 and RC01-LI-1440-5200

Synergy Digital RC01-LI-1440-5200

Synergy Digital Vacuum Cleaner Battery User Manual

Model: RC01-LI-1440-5200 (Compatible with Ecovacs DVX45)

1. INTRODUCTION AND OVERVIEW

This manual provides essential instructions for the safe and effective use of your Synergy Digital Li-ion 14.4V, 5200mAh replacement battery. This battery is designed to be compatible with Ecovacs DVX45 vacuum cleaners and replaces the Ecovacs RC01-LI-1440-5200 battery model. Please read this manual thoroughly before installation and operation to ensure optimal performance and safety.

2. PRODUCT FEATURES

- Rechargeable Li-ion battery, 14.4V, 5200mAh capacity.
- Designed for compatibility with Ecovacs RC01-LI-1440-5200 battery.
- Works with Ecovacs DVX45 Vacuum Cleaner and other compatible models.
- Constructed with high-quality Japanese cells for reliable performance.
- Ultra high capacity for extended run times.

3. SETUP AND INSTALLATION

Safety First: Before attempting to replace the battery, ensure your vacuum cleaner is powered off and unplugged from any charging source. Refer to your vacuum cleaner's original manual for specific battery compartment access instructions.

1. **Locate Battery Compartment:** Identify the battery compartment on your Ecovacs DVX45 vacuum cleaner. This is typically on the underside or rear of the unit.
2. **Remove Old Battery:** Carefully open the compartment cover. Disconnect the existing battery's connector from the vacuum cleaner's port. Remove the old battery.
3. **Insert New Battery:** Align the Synergy Digital replacement battery with the compartment. Ensure the connector is oriented correctly.

4. **Connect Battery:** Firmly plug the battery's connector into the vacuum cleaner's port until it clicks into place.
5. **Secure Compartment:** Close the battery compartment cover securely.



Image 1: The Synergy Digital replacement battery, showing its two cell packs connected by wires.



Image 2: Top view of the battery, highlighting the product label with specifications and safety warnings.



Image 3: Close-up view of the multi-pin connector, showing the colored wires for proper connection.

4. OPERATING INSTRUCTIONS

Initial Charging

After installing the new battery, it is recommended to fully charge the vacuum cleaner for at least 6-8 hours before its first use, even if the battery indicator shows some charge. This helps to calibrate the battery and ensure maximum performance.

Regular Use and Charging

- Always use the original charger provided with your Ecovacs vacuum cleaner.
- Avoid completely draining the battery before recharging. Frequent deep discharges can reduce battery lifespan.
- Charge the battery when the vacuum cleaner's indicator suggests low power.
- Do not leave the battery on charge for excessively long periods after it is full, though modern chargers typically prevent overcharging.

Safety Precautions for Li-ion Batteries

- Do not attempt to disassemble, open, or service the battery pack.
- Do not crush, puncture, short circuit, or dispose of in fire or water.
- Keep the battery away from extreme heat sources and direct sunlight.
- If the battery shows signs of damage, swelling, or leakage, discontinue use immediately and dispose of it properly.

5. MAINTENANCE

- **Cleaning:** Keep the battery and its contacts clean and free from dust or debris. Use a dry, soft cloth for cleaning.
- **Storage:** If storing the vacuum cleaner or battery for an extended period (more than one month), charge the battery to approximately 50-60% capacity. Store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Extreme Temperatures:** Operating or storing the battery in very hot or very cold conditions can negatively impact its performance and lifespan.

6. TROUBLESHOOTING

Battery Not Charging

- Ensure the charger is properly connected to both the wall outlet and the vacuum cleaner.
- Verify that the battery connector is securely plugged into the vacuum cleaner's port.
- Check if the charging indicator light on your vacuum cleaner is functioning as expected.
- Try using a different power outlet.

Short Run Time

- Ensure the battery has been fully charged before use.
- Over time, all rechargeable batteries experience a decrease in capacity. If the battery is old, it may be reaching the end of its lifespan.
- Check for blockages in the vacuum cleaner's filters or hoses, as this can cause the motor to work harder and consume more power.

Vacuum Cleaner Not Turning On

- Confirm the battery is correctly installed and fully charged.
- Ensure the vacuum cleaner's power switch is in the 'On' position.
- If the issue persists, consult your vacuum cleaner's original manual for further troubleshooting steps or contact customer support.

7. SPECIFICATIONS

Specification	Detail
Battery Chemistry	Lithium-ion (Li-ion)

Voltage	14.4V
Capacity	5200mAh
Compatible with	Ecovacs RC01-LI-1440-5200 Battery
Works for	Ecovacs DVX45 Vacuum Cleaner
Product Dimensions	2.87 x 1.47 x 1.47 inches
Item Weight	13.7 ounces
Manufacturer	Synergy Digital
Unit Count	1 Count

8. WARRANTY AND SUPPORT

Your Synergy Digital battery comes with a Limited 3-Year Warranty, covering manufacturing defects and ensuring performance under normal use conditions. For warranty claims or technical support, please refer to the contact information provided with your purchase or visit the Synergy Digital official website.

When contacting support, please have your product model (RC01-LI-1440-5200) and purchase details readily available.