



[Manuals.plus](#) /

› [Play-Doh](#) /

› Play-Doh Hair Stylin' Salon Playset Instruction Manual

Play-Doh F8807

Play-Doh Hair Stylin' Salon Playset Instruction Manual

Model: F8807

1. SAFETY INFORMATION

WARNING: Small parts may be generated. Not for children under 3 years.

Play-Doh compound contains wheat. Not intended for consumption.

2. PRODUCT OVERVIEW AND CONTENTS

The Play-Doh Hair Stylin' Salon Playset allows users to create and style Play-Doh hair using various tools and molds.



Image: Front of the Play-Doh Hair Stylin' Salon Playset box, displaying the playset and its features.

3. SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all items from the packaging.
2. **Assemble Playset:** Ensure the main character unit is securely placed on its base.
3. **Attach Crank Handle:** Insert the orange crank handle into the designated slot on the side of the playset.
4. **Select Hair Plate:** Choose one of the two hair texture plates and place it into the top opening of the character's head.



Image: A hand placing Play-Doh compound into the top chamber of the character unit, illustrating the first step of hair creation.



Image: A hand closing the top lid of the character unit after Play-Doh has been loaded, securing the compound for extrusion.

4. OPERATING INSTRUCTIONS

4.1 Growing Play-Doh Hair

1. **Load Compound:** Open the top of the character's head and place a desired amount of Play-Doh compound into the chamber.
2. **Close Lid:** Securely close the top lid.
3. **Crank Handle:** Turn the orange crank handle clockwise to push the Play-Doh compound through the selected hair plate. Observe as the Play-Doh extrudes from the top, forming hair.
4. **Extend Hair:** For longer hair, add more Play-Doh compound into the chamber and continue cranking.



Image: A child's hand turning the orange crank handle on the playset, causing Play-Doh hair to grow from the character's head.

3



Image: Play-Doh compound extruding from the character's head, forming colorful strands of hair as the handle is cranked.

4.2 Styling Play-Doh Hair

- **Cutting:** Use the provided scissors to trim the Play-Doh hair to any desired length.



Image: A child's hand using pink Play-Doh scissors to cut the extruded Play-Doh hair from the character's head.

- **Curling:** Load Play-Doh into the hair dryer extruder and press to create curly strands.



Image: A child's hand using the yellow hair dryer tool to extrude Play-Doh, creating curly hair strands on the character's head.

- **Crimping:** Use the crimper tool to add textured patterns to the Play-Doh hair.



Image: A child's hand using the blue crimper tool to add texture to the Play-Doh hair on the character's head.

- **Molding Accessories:** Utilize the bun and mohawk book-molds, as well as the half-molds located on the playset base, to create various hair accessories and styles.



Image: Close-up of the playset base showing various molds for creating shapes like hearts, stars, and bows from Play-Doh.



Image: A pair of hands holding several small, colorful Play-Doh shapes, including bows, stars, and rainbows, created using the playset's molds.

5. MAINTENANCE

- **Cleaning:** To clean the playset and tools, allow any stuck Play-Doh compound to dry completely, then scrape it off. For stubborn pieces, use a stiff brush or toothpick. Do not use water or cleaning solutions on the Play-Doh compound itself.
- **Storing Play-Doh:** Always return Play-Doh compound to its airtight containers after use to prevent it from drying out. If Play-Doh becomes dry, a few drops of water can sometimes help restore its pliability.
- **Storage:** Store all playset components and Play-Doh cans in a cool, dry place. The playset features compartments for storing tools and accessories.

6. TROUBLESHOOTING

- **Play-Doh not extruding:** Ensure the Play-Doh compound is soft and pliable. If it's too dry, add a few drops of water and knead it. Also, check that the hair plate is correctly inserted and the lid is fully closed.

- **Playset tipping over:** Ensure the playset is placed on a stable, flat surface during use.
- **Hair not growing long enough:** The length of the extruded hair depends on the amount of Play-Doh loaded. For longer styles, load more compound and continue cranking.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	8.5 x 10.98 x 2.64 inches
Item Weight	1.68 pounds
Item Model Number	F8807
Manufacturer Recommended Age	3 years and up
Batteries	AA batteries required (not included, for illustrative purposes only if product had electronic features)
Manufacturer	Hasbro
Release Date	July 24, 2023

8. WARRANTY AND SUPPORT

For information regarding product warranty or customer support, please refer to the contact information provided on the product packaging or visit the official Hasbro website.

Official Play-Doh Website: www.playdoh.com

