

AEG LFR6114O2B

AEG LFR6114O2B Washing Machine User Manual

Model: LFR6114O2B (Internal Model: S7606043)

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new AEG LFR6114O2B washing machine. Please read these instructions carefully before using the appliance and keep them for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons. This appliance is intended for household use only.

- Ensure the appliance is properly earthed.
- Do not allow children to play with the appliance.
- Do not open the door forcefully during operation.
- Unplug the appliance before cleaning or maintenance.
- Do not install the appliance in areas exposed to freezing temperatures.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials and transport bolts from the rear of the machine. Keep packaging materials out of reach of children. The transport bolts must be removed before use to prevent damage to the appliance.

3.2 Location and Leveling

Place the washing machine on a firm, flat floor. Adjust the leveling feet to ensure the appliance is stable and perfectly level. An unbalanced machine can cause excessive vibration and noise.

3.3 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure all connections are tight to prevent leaks. Do not use old hoses; always use the new hoses supplied with the appliance.

3.4 Drainage Connection

Securely attach the drain hose to a standpipe or over the edge of a sink, ensuring it is properly fixed to prevent displacement during draining. The height of the drain hose should be between 60 cm and 100 cm from the floor.

3.5 Electrical Connection

Plug the power cable into a grounded electrical outlet. Ensure the voltage and frequency match the specifications of your appliance. The appliance comes with an EU plug.



This image shows the front of the AEG LFR6114O2B washing machine. It features a white exterior, a large central door with a transparent window revealing a red cloth inside the drum, a control panel with a rotary dial, and a digital display at the top right.

3.6 Initial Use

Before washing laundry for the first time, run an empty wash cycle at 60°C with a small amount of detergent to clean

the drum and remove any manufacturing residues.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel typically includes a program selector dial, a digital display, and various buttons for options such as temperature, spin speed, delay start, and extra rinse.

4.2 Loading Laundry

Open the door and load the laundry into the drum. Do not overload the machine; ensure there is enough space for the laundry to move freely. Close the door firmly.

4.3 Adding Detergent

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent and fabric softener to the designated compartments. Refer to the detergent manufacturer's instructions for dosage.

4.4 Selecting a Program

Turn the program selector dial to choose the desired wash program (e.g., Cotton, Synthetics, Delicates, Wool, Eco). The digital display will show the default settings for the selected program.

4.5 Adjusting Settings

Use the option buttons to modify the temperature, spin speed, or add extra functions like pre-wash or extra rinse, if available for the selected program.

4.6 Starting a Wash Cycle

Press the Start/Pause button to begin the wash cycle. The door will lock, and the machine will start filling with water.

4.7 Interrupting or Changing a Program

To interrupt a cycle, press the Start/Pause button. If the water level and temperature allow, the door may unlock. To change the program, turn the selector dial to OFF, then select a new program and press Start/Pause.

4.8 End of Cycle

At the end of the cycle, the machine will signal with an audible alert, and the display will show 'End' or similar. The door will unlock. Remove the laundry promptly to prevent creasing.

5. MAINTENANCE AND CLEANING

5.1 Cleaning the Detergent Dispenser

Regularly remove and clean the detergent dispenser drawer under running water to prevent detergent residue buildup.

5.2 Cleaning the Drum

Run a maintenance wash cycle (e.g., at 90°C with no laundry and a descaling agent) periodically to clean the drum and prevent odors.

5.3 Cleaning the Door Seal

Wipe the door seal after each wash to remove lint and moisture, preventing mold and unpleasant odors.

5.4 Cleaning the Drain Filter

Locate the drain filter, usually at the bottom front of the machine. Open the cover, place a shallow container underneath to catch water, and carefully unscrew the filter. Clean it thoroughly and reinsert.

5.5 Cleaning the Water Inlet Filter

Periodically check and clean the filter in the water inlet hose connection to prevent blockages.

5.6 Winter Storage

If the appliance is to be stored in an area where it might freeze, drain all water from the hoses and pump to prevent damage.

6. TROUBLESHOOTING

Before contacting service, check the following common issues:

- **Machine does not start:** Ensure the power cable is plugged in, the door is closed, and the Start/Pause button has been pressed. Check the circuit breaker.
- **No water filling:** Check if the water tap is open and the water inlet hose is not kinked or blocked.
- **Water not draining:** Clean the drain filter and ensure the drain hose is not kinked or blocked.
- **Excessive vibration/noise:** Check if the transport bolts have been removed and if the machine is level. Ensure laundry is evenly distributed.
- **Error codes:** Refer to the specific error code displayed on the screen. Consult the full manual or manufacturer's website for detailed explanations.

7. SPECIFICATIONS

Model	AEG LFR6114O2B
Internal Model Number	S7606043
Capacity	10 kg
Maximum Spin Speed	1400 rpm
Dimensions (H x W x D)	107 cm x 60 cm x 80 cm
Weight	65 kg
Energy Efficiency Class	A
Included Accessories	Power cable

8. WARRANTY AND SUPPORT

Your AEG LFR6114O2B washing machine comes with a manufacturer’s warranty. Please refer to the warranty card provided with your appliance for specific terms and conditions. For technical assistance, spare parts, or service requests, please contact AEG customer support or visit the official AEG website. Keep your purchase receipt as proof of purchase for warranty claims.

