



[Manuals.plus](#) /

› [ForeverPRO](#) /

› ForeverPRO W11168387 Dryer Cover Instruction Manual

ForeverPRO W11168387

ForeverPRO W11168387 Dryer Cover Instruction Manual

Model: W11168387

INTRODUCTION

This manual provides essential information for the installation, function, and maintenance of the ForeverPRO W11168387 Dryer Cover. This replacement part is designed to be compatible with various Whirlpool dryer models, replacing original part numbers W10647677 and W10739598. Please read these instructions carefully before proceeding with installation or maintenance to ensure proper function and safety.

PRODUCT OVERVIEW



Figure 1: ForeverPRO W11168387 Dryer Cover. This image displays the light gray plastic cover, featuring two clips along one long edge and a small alignment peg on the opposite short edge.

The ForeverPRO W11168387 Dryer Cover is a crucial component designed to protect internal dryer mechanisms or provide access points, depending on its specific location within the appliance. It is manufactured to meet or exceed OEM specifications, ensuring a reliable fit and durable performance for compatible Whirlpool dryer models.

INSTALLATION INSTRUCTIONS

Safety Precautions:

- **Always disconnect power to the dryer** before attempting any installation or repair. Failure to do so can result in electric shock or injury.
- Wear appropriate personal protective equipment, such as gloves, if necessary.
- Refer to your specific dryer model's service manual for detailed disassembly and reassembly procedures.

General Installation Steps:

1. **Identify the old cover:** Locate the existing dryer cover that needs replacement. This part typically covers an access opening or a specific internal component.
2. **Remove the old cover:** Carefully detach the old cover. This may involve unscrewing fasteners, prying clips, or sliding it out of position. Note how the old cover was secured.

3. **Clean the area:** Before installing the new cover, clean any dust or debris from the surrounding area to ensure a proper fit.
4. **Position the new cover:** Align the ForeverPRO W11168387 cover with the opening or mounting points. Ensure the clips and any alignment pegs (as shown in Figure 1) are correctly oriented.
5. **Secure the new cover:** Gently press the cover into place until the clips engage, or reattach any fasteners that were removed. Ensure it is securely seated and does not wobble.
6. **Verify installation:** Once installed, gently test the cover to ensure it is firmly attached and provides adequate protection.
7. **Reconnect power:** After confirming the cover is properly installed, reconnect power to the dryer.

FUNCTION AND PURPOSE

The W11168387 Dryer Cover serves to enclose and protect specific areas within your dryer, preventing foreign objects from entering sensitive components and maintaining the dryer's operational integrity. Its proper installation ensures that the dryer functions as intended, contributing to both safety and efficiency.

MAINTENANCE

The dryer cover itself requires minimal maintenance. Periodically inspect the cover for any signs of damage, cracks, or loose fittings. If the cover appears damaged or is no longer securely attached, it should be replaced to maintain the dryer's protective enclosure. Clean the cover with a soft, damp cloth as needed to remove dust or lint buildup.

TROUBLESHOOTING

- **Cover does not fit:** Double-check the model compatibility list. Ensure you have the correct part number (W11168387) for your specific dryer model. Verify that the old cover's part number matches one of the replaced numbers (W10647677, W10739598).
- **Cover is loose after installation:** Ensure all clips are fully engaged and any fasteners are tightened. If the cover still feels loose, inspect for any obstructions or manufacturing defects.
- **Cover is damaged:** If the cover is cracked, broken, or otherwise compromised, it should be replaced immediately to prevent potential issues with the dryer's internal components.

SPECIFICATIONS

| | |
|---|---|
| Part Number | W11168387 |
| Replaces Part Numbers | W10647677, W10739598 |
| Included Components | 1 x Dryer Cover |
| Manufacturer | ForeverPRO |
| Compatible Dryer Models (Partial List) | WED7990FW0, WED9290FC0, WED9290FW0, WED99HEDC0, WED99HEDW0, YWED7990FW0, YWED9290FC0, YWED9290FW0, YWED99HEDC0, YWED99HEDW0 <i>(Refer to product description for a comprehensive list and to verify compatibility with your specific model.)</i> |

WARRANTY AND SUPPORT

ForeverPRO is a USA-based company committed to providing high-quality, durable replacement parts. For specific warranty information, technical support, or assistance with your ForeverPRO W11168387 Dryer Cover, please contact the manufacturer directly through their official channels. Always retain your proof of purchase for warranty claims.