

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Vowleike](#) /

› [Vowleike Eye Lift Wand Instruction Manual](#)

Vowleike

Vowleike Eye Lift Wand

INSTRUCTION MANUAL

1. Product Overview

The Vowleike Eye Lift Wand is a versatile 3-in-1 device designed to address various skincare concerns around the eyes and face. It combines vibration, adjustable heating, and red light therapy to promote skin rejuvenation, reduce puffiness, diminish dark circles, and minimize the appearance of fine lines and wrinkles. Its compact design ensures convenience for use anywhere, anytime.



Figure 1: The Vowleike Eye Lift Wand, a compact and ergonomic device designed for eye and facial skincare.

2. Safety Information

Please read and understand all safety instructions before using the device.

- For external use only. Do not use on broken or irritated skin.
- Keep out of reach of children.
- Consult a healthcare professional before use if you have any pre-existing medical conditions, especially eye-related conditions, or if you are pregnant or breastfeeding.
- Do not immerse the device in water or any other liquid.
- Avoid direct eye contact with the red light.
- If you experience any discomfort or adverse reactions, discontinue use immediately and consult a doctor.

3. Product Features

- **All-in-One Eye & Face Device:** Versatile design for comprehensive skincare on both face and eye areas.
- **Compact Design for Convenience:** Small and handy, easy to carry and use anywhere, anytime.
- **Three Powerful Functions:** Vibration, adjustable thermal temperature (98°F to 113°F), and red light therapy.
- **Effective and Comfortable:** Provides relief for dull, puffy, and dry eyes, improves skin elasticity, and reduces fine lines and wrinkles.
- **Enhance Skincare Products Absorption:** Helps maximize the effectiveness of your serums and creams.

4. Product Components & Controls



Figure 2: Detailed view of the Eye Lift Wand's components and controls.

- **Chrome Massage Head:** The application surface, featuring an LED red light.
- **LCD Display:** Shows current thermal temperature, vibration status, red light status, and battery life.

- **Temperature Increasing Button (+):** Press to increase the temperature.
- **Temperature Decreasing Button (-):** Press to decrease the temperature.
- **Power/Mode Button:** Long press for 3 seconds to turn ON/OFF. Short press to switch between working modes.
- **USB Charging Slot:** Located at the bottom for charging the device.

5. Setup

1. **Charge the Device:** Before first use, fully charge the Eye Lift Wand using the provided USB cable. The battery indicator on the LCD screen will show charging status.
2. **Cleanse Skin:** Ensure your face and the area around your eyes are clean and dry before application.
3. **Apply Skincare Product:** Apply your preferred eye cream, serum, or conductive gel to the target area. This helps the device glide smoothly and enhances absorption.

6. Operating Instructions

EXPERIENCE SOOTHING RELIEF AND RENEWED VITALITY FOR YOUR EYES

Revive, Refresh, and Rejuvenate Tired Eyes with Precise Temperature Control, Vibration, and Red Light Therapy

9 Adjustable temperature settings ranging from 98.6° F to 113° F



Three Working Modes



Mode 1

**Vibration+Heating+
Red light**



Mode 2

Heating+Red light



Mode 3

Vibration+Heating

Figure 3: Adjustable temperature settings and three working modes.

- Power On:** Press and hold the Power/Mode button for 3 seconds to turn on the device. The LCD screen will illuminate.
- Select Mode:** Short press the Power/Mode button to cycle through the three available working modes:
 - **Mode 1: Vibration + Heating + Red Light** (Triple-Effect Rejuvenation)
 - **Mode 2: Heating + Red Light** (Eye Muscle Awakening)
 - **Mode 3: Vibration + Heating** (Muscle Stimulation & Heating)
- Adjust Temperature:** Use the '+' and '-' buttons to adjust the thermal temperature between 98°F (37°C) and 113°F (45°C).
- Begin Treatment:** Gently place the chrome massage head on the desired area (e.g., under eyes, around temples, forehead, neck). Move the device slowly and smoothly in circular or upward motions.
- Recommended Usage:** Use for 5-10 minutes per area, once or twice daily.
- Power Off:** After use, press and hold the Power/Mode button for 3 seconds to turn off the device.



EXQUISITE RADIANT EYES IN SPLENDOR AND LUXURY

Desirable Skincare Absorption
Swift and potent absorption of serums and creams for a happier, more beautiful complexion

Improved Blood Circulation
Stimulate cellular activity, rejuvenate skin, reduce wrinkles, puffiness, and under-eye bags

Firmer, Brighter Eyes
Target dark circles, enhance firmness, and bring a refreshed, confident look to your eyes

Figure 4: Key benefits of using the Eye Lift Wand.

- **Desirable Skincare Absorption:** Facilitates swift and potent absorption of serums and creams.
- **Improved Blood Circulation:** Stimulates cellular activity, rejuvenates skin, and reduces puffiness.
- **Firmer, Brighter Eyes:** Targets dark circles, enhances firmness, and promotes a refreshed look.

Product Demonstration Videos

Video 1: Vowleike Eye Lift Wand Overview. This video provides a general demonstration of the Eye Lift Wand's features and usage.

Video 2: Vowleike Eye Lift Wand for Dry Eyes. This video demonstrates how the wand can be used to alleviate symptoms of dry eyes.

Video 3: Vowleike Eye Lift Wand for Dark Circles. This video illustrates techniques for using the wand to target and reduce dark circles.

Video 4: Vowleike Eye Massager. This video showcases the massage function of the wand and its application.

7. Maintenance

- **Cleaning:** After each use, wipe the chrome massage head with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** Store the device in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Charging:** Recharge the device when the battery indicator is low to ensure optimal performance.

8. Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or not charged.	Charge the device fully. Ensure the USB cable is properly connected.
No vibration.	Incorrect mode selected or device not in contact with skin.	Ensure Mode 1 or Mode 3 is selected. Make sure the massage head is in firm contact with your skin.
No heat.	Incorrect mode selected or temperature set too low.	Ensure Mode 1, Mode 2, or Mode 3 is selected. Increase the temperature using the '+' button.
LCD display not working.	Device is off or malfunction.	Turn on the device. If the issue persists after charging, contact customer support.

9. Specifications

Feature	Detail
Model Name	Eye Lift Wand
Brand	Vowleike
Color	White
Skin Type	All
Item Weight	1.7 Ounces
Package Dimensions	7.64 x 3.11 x 2.01 inches
Batteries	1 Lithium Ion batteries required (included)
UPC	605182673488
ASIN	B0C36RJ2BF
Manufacturer	Vowleike

10. Warranty and Support

For warranty information and customer support, please refer to the product packaging or contact Vowleike Direct through

your purchase platform. Keep your proof of purchase for any warranty claims.