

[Manuals.plus](#) /

> [VINABTY](#) /

> VINABTY MBE741 Replacement Remote Control User Manual for AKAI ATE-48N1104K, ATE-55N1104K, ATE-55D1044K LCD/LED TVs

VINABTY MBE741

VINABTY MBE741 Replacement Remote Control User Manual

For AKAI ATE-48N1104K, ATE-55N1104K, ATE-55D1044K LCD/LED TVs

INTRODUCTION

This manual provides instructions for the VINABTY MBE741 replacement remote control. This remote is designed to be compatible with various AKAI LCD/LED TV models, including ATE-48N1104K, ATE-55N1104K, and ATE-55D1044K. It offers a direct replacement for your original remote without requiring complex programming.

SETUP

Battery Installation

The VINABTY MBE741 remote control requires two AAA batteries for operation. No programming or setup is needed; simply insert the batteries, and the remote will be ready to use.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back of the remote control with the battery compartment open, illustrating correct battery placement.

OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for immediate use with compatible AKAI LCD/LED TVs. Point the remote directly at your television's infrared receiver.



Image: Front view of the remote control, displaying all function buttons.

Key Functions Overview

- **POWER:** Turns the TV on or off.
- **TV/RADIO:** Switches between TV and Radio modes.
- **Number Buttons (0-9):** Direct channel selection.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the channel up or down.
- **MUTE:** Mutes or unmutes the TV sound.
- **MENU:** Accesses the TV's main menu.

- **OK:** Confirms selections within menus.
- **Navigation Arrows (Up, Down, Left, Right):** Navigates through menu options.
- **EXIT:** Exits the current menu or function.
- **SOURCE:** Selects input sources (HDMI, AV, etc.).
- **MEDIA Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip):** Controls media playback.
- **EPG:** Displays the Electronic Program Guide.
- **SUBTITLE:** Toggles subtitles on or off.
- **LANG / AUDIO:** Changes audio language or track.
- **P-MODE:** Selects picture modes.
- **S-MODE:** Selects sound modes.
- **DISPLAY:** Shows on-screen information.
- **Other Function Buttons (GOTO, ANGLE, REPEAT, A-B, FAV, TEXT, HOLD, FREEZE, SLEEP, SIZE, ZOOM, ASPECT, SUBPAGE, D.SETUP, INDEX, TITLE, D.MENU):** Provide access to specific TV features as labeled.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid using abrasive cleaners, alcohol, or solvents, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

TROUBLESHOOTING

Remote control is not responding:

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new AAA alkaline batteries.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared sensor. Point the remote directly at the TV.
- **Remote Sensor:** Ensure the TV's infrared sensor is clean and not covered.

Some buttons do not work:

- While this remote is designed for broad compatibility, some specific TV models might have unique functions not directly mapped to a button. Refer to your TV's original manual for specific feature access.
- Ensure the remote is in the correct mode (e.g., TV mode if applicable, though this remote is generally universal for the listed models).

SPECIFICATIONS

Brand	VINABTY
Model Number	MBE741
Compatible Devices	AKAI ATE-48N1104K, ATE-55N1104K, ATE-55D1044K, Linsar LED LCD HDTV TV LS50UHD LS32CHD LS40CFHD LS24CFHD12V
Connectivity Technology	Infrared
Maximum Range	10 meters
Battery Type	2 x AAA (Alkaline recommended)
Material	ABS
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

VINABTY is committed to customer satisfaction. If you encounter any issues with your product or require assistance, please contact our customer support. We aim to provide a satisfactory response within 24 hours.

For support inquiries, please refer to the contact information provided with your purchase or on the VINABTY official website.