

Manuals.plus /
› AEG /
› AEG FFB64627ZW Freestanding Dishwasher User Manual

AEG FFB64627ZW

AEG FFB64627ZW Freestanding Dishwasher User Manual

Model: FFB64627ZW | Brand: AEG

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your AEG FFB64627ZW freestanding dishwasher. Please read these instructions carefully before using the appliance and keep them for future reference.



Image 1: Front view of the AEG FFB64627ZW freestanding dishwasher.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is intended for domestic use only.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Sharp items should be loaded with points down to prevent injury.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your dishwasher. Refer to the separate installation guide for detailed instructions. Below are general guidelines.

3.1 Unpacking and Positioning

Carefully remove all packaging materials. Position the freestanding dishwasher on a level, stable surface in your kitchen. Ensure there is adequate space for the door to open fully.



Image 2: The AEG FFB6462ZW dishwasher seamlessly integrated into a kitchen setting.

3.2 Water and Drain Connection

Connect the water inlet hose to a cold water supply tap. Ensure the drain hose is securely connected to a suitable drain

point, preventing kinks or blockages.

3.3 Electrical Connection

Connect the power cord to a properly grounded electrical outlet. Verify that the voltage and frequency match the specifications on the appliance rating plate.

3.4 Initial Use

Before the first wash cycle, fill the salt dispenser with dishwasher salt and the rinse aid dispenser with rinse aid. This ensures optimal cleaning and drying performance.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and loading procedures for effective dishwashing.

4.1 Control Panel Overview

The dishwasher features an intuitive control panel with a display and push-button controls for program selection, options, and start/pause functions.

4.2 Loading the Dishwasher

Load dishes efficiently to allow water to reach all surfaces. Scrape off large food particles before loading.

- **QuickLift Basket:** The upper basket can be easily adjusted in height, even when fully loaded, to accommodate larger items in either the upper or lower basket.



Image 3: The QuickLift basket allows for easy height adjustment to fit various dish sizes.

- **SoftGrips and SoftSpikes:** The upper basket is equipped with SoftGrips and SoftSpikes to securely hold delicate glassware, preventing damage during the wash cycle.



Image 4: SoftSpikes and SoftGrips provide secure support for delicate items like wine glasses.

4.3 Adding Detergent, Salt, and Rinse Aid

Ensure the detergent dispenser is filled with the appropriate amount of dishwasher detergent. Regularly check and refill the salt and rinse aid dispensers as indicated by the control panel indicators.

4.4 Selecting a Program

Choose the appropriate wash program based on the type and soil level of your dishes. Available programs typically include:

- **Auto Program:** Automatically adjusts water consumption, temperature, and cycle time based on the soil level detected.
- **ECO Program:** Energy-efficient program for normally soiled dishes.
- Other programs for various durations (e.g., 160min, 90min, 60min, 30min) and a Rinse & Hold option.

4.5 Special Functions

- **AirDry Technology:** This feature automatically opens the dishwasher door by approximately 10 cm during the final drying phase. This allows natural air to circulate, improving drying performance and reducing energy consumption.




ABRE LA PUERTA AUTOMÁTICAMENTE

Seca los platos a la perfección con aire fresco y natural para reducir el consumo de energía.

Image 5: AirDry technology enhances drying results by allowing natural air circulation.

- **ExtraHygiene Function:** This option performs a final rinse at 69 °C and maintains this temperature for at least 10 minutes, providing a sanitizing effect for your dishes.
- **Satellite Spray Arm:** The unique double-rotating Satellite Spray Arm provides up to three times better spray coverage than a standard spray arm, ensuring water reaches every corner for a thorough and quiet clean.

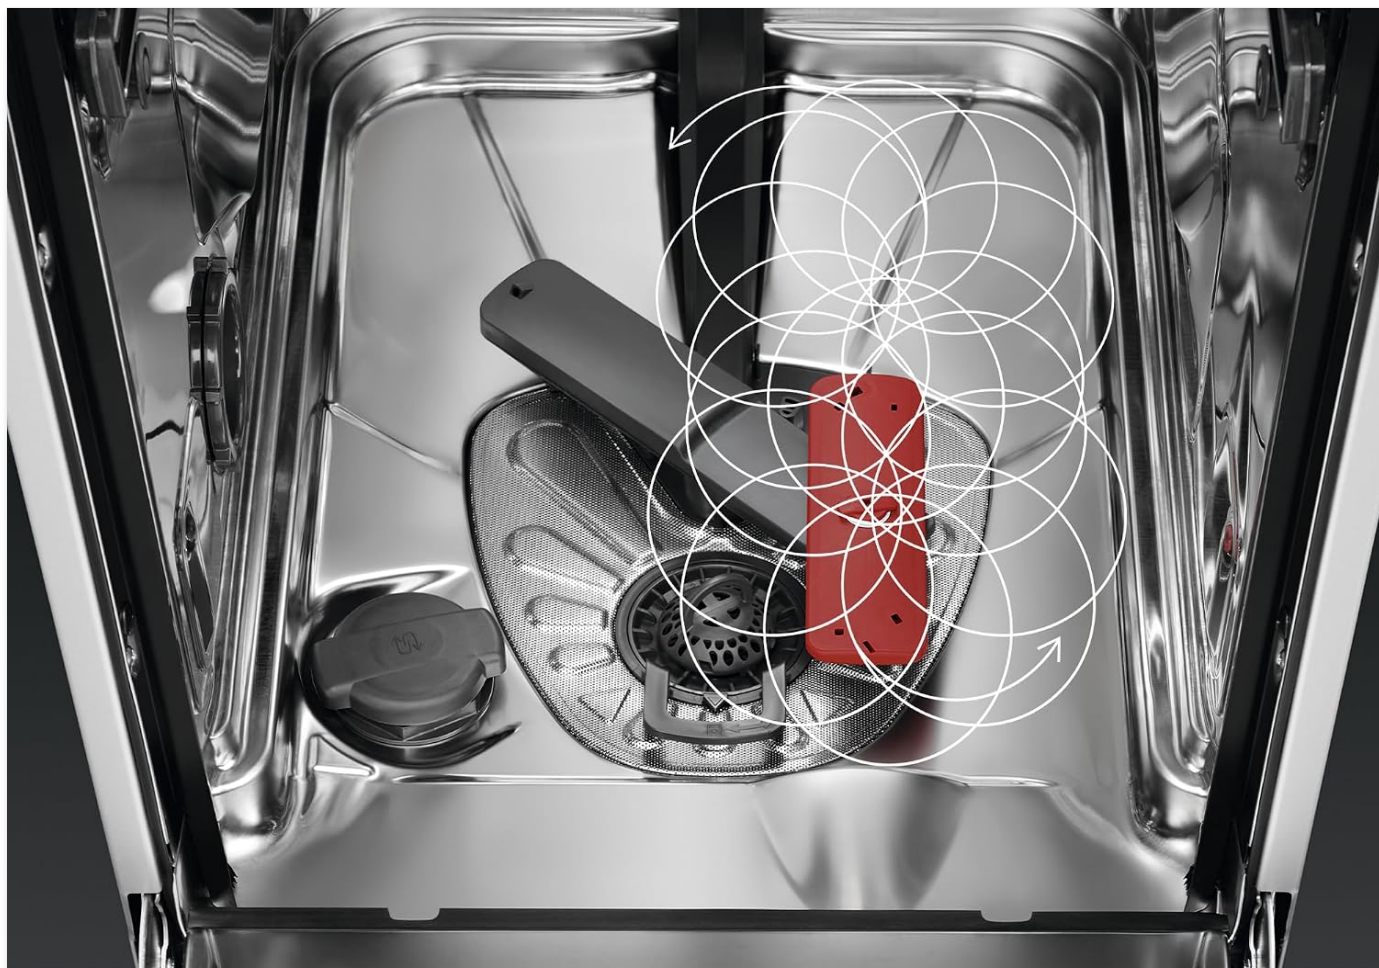

RESULTADOS DE LAVADO IMPECABLES

Lavado intenso y potente de la vajilla con un alcance de pulverización hasta 3 veces mayor sin consumir agua extra.

Image 6: The Satellite Spray Arm's advanced design ensures comprehensive water distribution.

4.6 Starting and Ending a Program

Press the Start button to begin the selected program. The dishwasher will indicate the remaining time on the display. Once the program is complete, the appliance will signal its finish, and the AirDry function may activate.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your dishwasher.

5.1 Cleaning the Filters

The filter system should be cleaned regularly to prevent blockages and ensure efficient washing. Remove the coarse and fine filters, rinse them under running water, and reassemble them correctly.



Image 7: Regular cleaning of the dishwasher filter is essential for hygiene and performance.

5.2 Cleaning the Spray Arms

Periodically check the spray arm nozzles for any blockages. If necessary, remove the spray arms and clear any debris from the holes using a thin object.

5.3 Exterior and Interior Cleaning

Wipe the exterior of the dishwasher with a soft, damp cloth. Clean the interior periodically with a dishwasher cleaner to remove grease and limescale buildup.

6. TROUBLESHOOTING

If you encounter issues with your dishwasher, consult this section for common problems and solutions. For more complex issues, contact customer service.

- **Dishwasher does not start:** Check power supply, door closure, and selected program.
- **Dishes are not clean:** Ensure proper loading, correct detergent dosage, and clean filters/spray arms.
- **Water remains in the dishwasher:** Check for drain hose kinks or blockages in the filter system.
- **Unusual noises:** Verify that dishes are not obstructing spray arms or other internal components.

7. SPECIFICATIONS

Feature	Specification
Model Name	FFB64627ZW

Feature	Specification
Product Weight	41 Kilograms
Voltage	220 V
Recommended Use	Household dishwashing, energy saving, low noise, deep cleaning
Style	SatelliteClean - 8 programs - Class C
Interior Material	Stainless Steel
Manufacturer	AEG
Product Dimensions (L x W x H)	62 x 60 x 85 cm
Country of Origin	Germany
Installation Type	Freestanding
Capacity	13 Place Settings
Special Function	Automatic Program
Color	White
Control Type	Push Button
Noise Level	44 dB
Included Components	Cutlery Basket

8. WARRANTY AND SUPPORT

Your AEG FFB64627ZW dishwasher comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including the warranty period and coverage details. For technical assistance, spare parts, or service requests, please contact AEG customer support. Contact information can typically be found on the manufacturer's website or in the documentation provided with your appliance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C372L9HB>

More documents and user manuals: <https://manuals.plus/>