

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Hoteel](#) /
- › [HOTEEL 3x3m Pop-Up Folding Gazebo Instruction Manual](#)

Hoteel Pop Up Pavillon 3x3

HOTEEL 3x3m Pop-Up Folding Gazebo Instruction Manual

Model: Pop Up Pavillon 3x3

1. INTRODUCTION

Thank you for choosing the HOTEEL 3x3m Pop-Up Folding Gazebo. This manual provides essential information for the safe and efficient setup, operation, maintenance, and storage of your gazebo. Please read these instructions carefully before assembly and retain them for future reference.

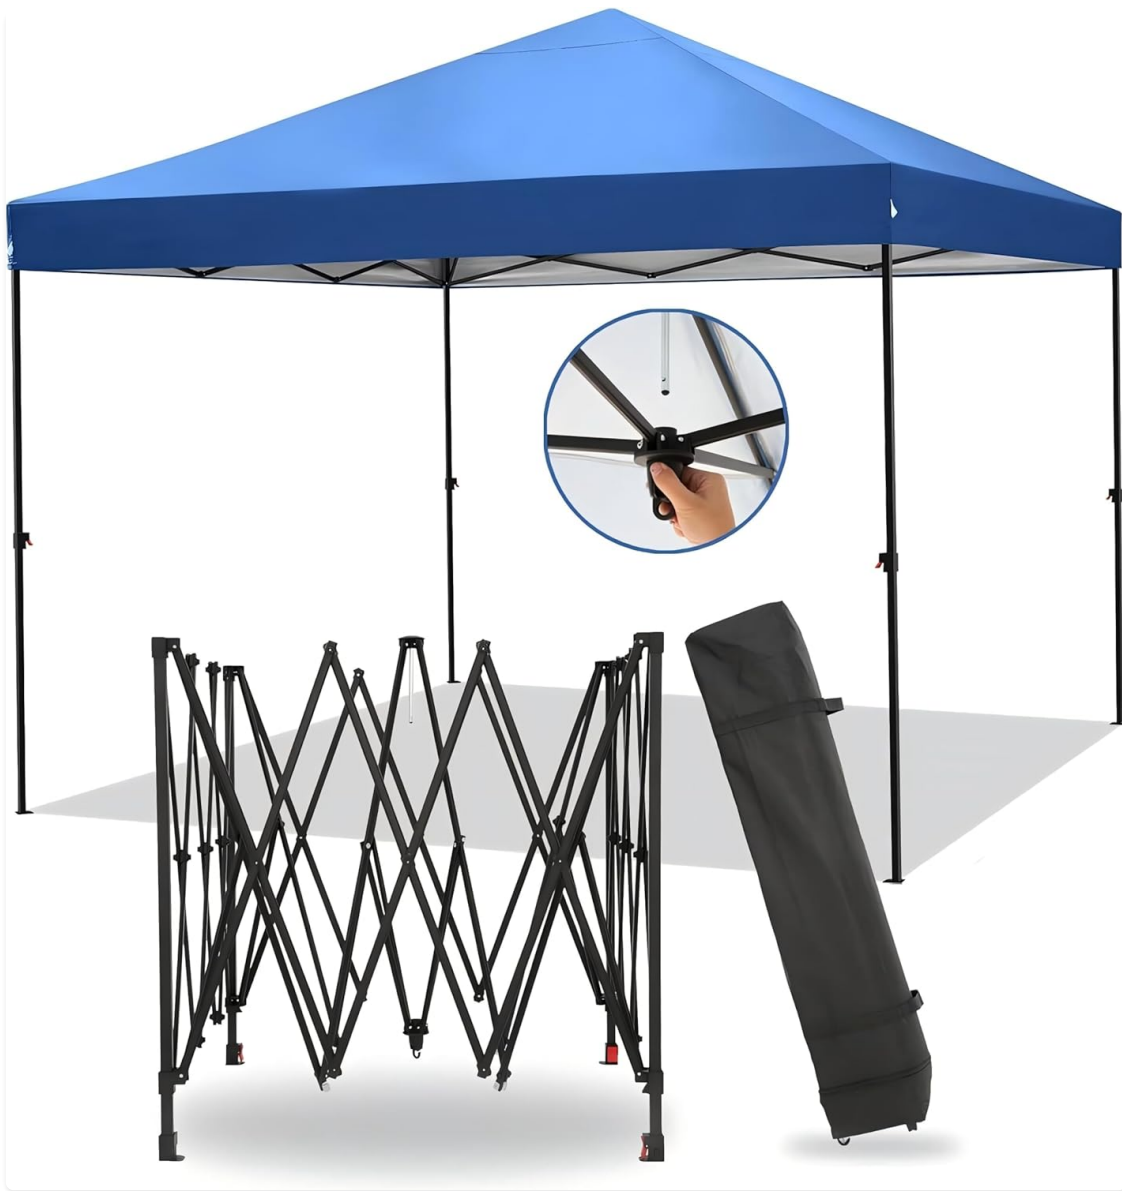


Image 1.1: HOTEEL 3x3m Pop-Up Folding Gazebo, showing the assembled tent, the folded frame, and the wheeled carry bag.

2. SAFETY INFORMATION

- Always secure the gazebo with the provided ground stakes and ropes to prevent wind damage.
- Do not use the gazebo in severe weather conditions, including heavy rain, strong winds, or snow.
- Keep children and pets away from the gazebo during setup and takedown.
- Ensure all locking mechanisms are fully engaged before use.
- Avoid placing heat sources or open flames inside or near the gazebo.
- Regularly inspect the frame and fabric for any signs of wear or damage.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- 1 x Alloy Steel Frame

- 1 x Canopy Top Cover
- 1 x Wheeled Bag
- 4 x Ropes
- 8 x Ground Stakes
- 1 x Instruction Manual



Image 3.1: Packing list showing the frame, canopy, wheeled bag, ropes, ground stakes, and manual.

4. SETUP INSTRUCTIONS

The HOTEEL Pop-Up Gazebo features a one-push center lock system for quick and easy assembly, often achievable by one person in minutes.

1. **Step 1: Unfold the Frame.** Place the folded frame in the desired location. With a partner, or by yourself, gently pull the outer legs of the frame outwards until it begins to expand.



Image 4.1: Detail of the One Push Center Lock mechanism.

2. **Step 2: Attach the Canopy Top.** Drape the canopy fabric over the partially expanded frame. Ensure the corners of the canopy align with the corners of the frame. Secure the canopy to the frame using the hook-and-loop fasteners.

UNA PERSONA CONFIGURACIÓN CON UN BOTÓN



1 botón, 1 persona, 1 minuto



« Paso 1
Abre el marco y cubre el techo

Paso 2 »
Presione el botón central y luego levante



« Paso 3
Ajustar la altura según tus deseos

Image 4.2: Step-by-step guide for opening the frame and covering it with the canopy.

3. **Step 3: Lock the Center Mechanism.** From underneath the canopy, push up on the central hub of the frame until it clicks into place. This engages the 'One Push Center Lock' technology, securing all four legs simultaneously.
4. **Step 4: Extend the Legs.** Press the red adjustment buttons on each leg and extend them to your desired height. Ensure all four legs are extended to the same height for stability.

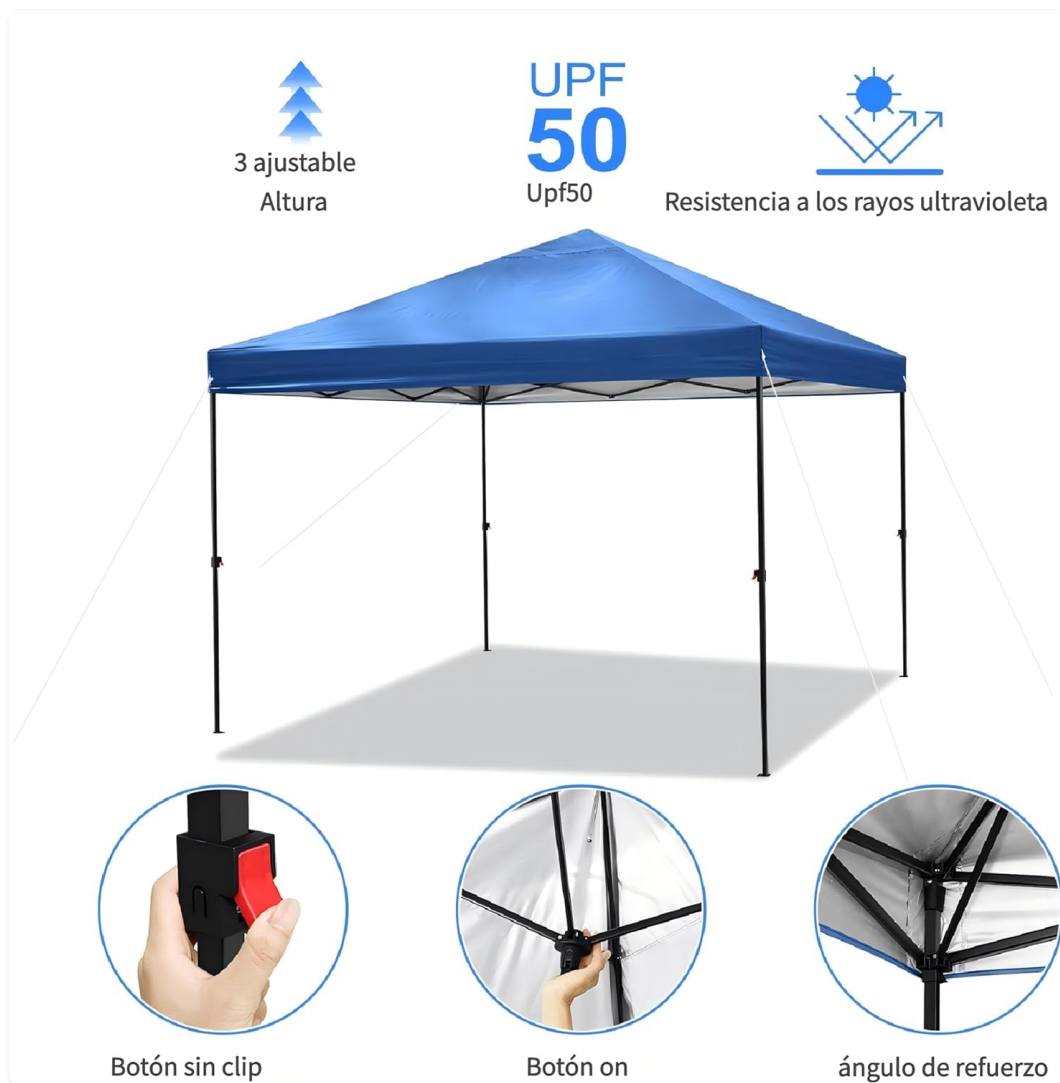


Image 4.3: The gazebo with an inset showing the red button for height adjustment.

5. **Step 5: Secure the Gazebo.** Use the provided ropes and ground stakes to anchor the gazebo firmly to the ground. Attach ropes to the canopy corners and stake them into the ground at an angle.

5. OPERATING INSTRUCTIONS

Height Adjustment

The HOTEEL gazebo offers three adjustable height options. To adjust the height:

1. Locate the red adjustment button on each leg.
2. Press the button and slide the inner leg up or down to the desired position.
3. Ensure the button locks securely into one of the pre-drilled holes at the chosen height.
4. Repeat for all four legs, ensuring they are all set to the same height for optimal stability.



Image 5.1: Detail of the adjustable leg button.

6. MAINTENANCE

- **Cleaning:** Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow the fabric to air dry completely before folding and storing.
- **Frame Care:** Wipe the steel frame with a damp cloth to remove dirt. Ensure the frame is dry before storage to prevent rust.
- **Inspection:** Periodically check all bolts, screws, and locking mechanisms to ensure they are tight and functioning correctly. Inspect the canopy for any tears or damage.

7. STORAGE

To prolong the life of your gazebo, proper storage is essential.

1. Ensure the canopy is clean and completely dry before folding.
2. Lower all legs to their shortest height.
3. Disengage the center lock mechanism and gently push the frame inwards to fold it.
4. Remove the canopy from the frame.
5. Place the folded frame and canopy into the wheeled carry bag.
6. Store the bag in a cool, dry place, away from direct sunlight and extreme temperatures.

RÁPIDO Y FÁCIL ALMACENAMIENTO CON RUEDAS

Las maletas con ruedas facilitan el transporte

Portátil y fácil



Playa



Fiesta



Acampar



Parque



Estadio



Image 7.1: The wheeled carry bag facilitates easy transport and storage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Gazebo is unstable or wobbly.	Not properly anchored; legs uneven; center lock not engaged.	Ensure all legs are at the same height. Fully engage the center lock. Use all ground stakes and ropes to secure the gazebo.
Difficulty opening/closing the frame.	Frame components are stiff or misaligned.	Apply light lubricant to moving parts if necessary. Ensure no fabric is caught in the frame. Gently expand/contract the frame evenly.
Water pooling on canopy.	Canopy not taut enough; improper setup.	Ensure the canopy is stretched tightly over the frame. Verify the frame is fully extended and locked.

9. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	Hoteel
Model Number	Pop Up Pavillon 3x3
Assembled Dimensions (L x W x H)	3m x 3m x 2.6m
Frame Material	Alloy Steel (Powder-coated)
Canopy Material	210DPU Silver-Coated Oxford Fabric
UV Protection	Yes (UV 50+, reflects 99% harmful sunlight)
Water Resistance Level	Waterproof
Adjustable Height	3 positions
Product Weight	14 lbs (6.35 kg)
Recommended Uses	Garden, Beach, Parties, Camping, Festivals, Picnics, Weddings

Carpa Plegable de Azerbaiyán



Image 9.1: Dimensional specifications of the gazebo.

10. WARRANTY AND SUPPORT

HOTEEL stands behind the quality of its products. To protect customer rights and interests, the following warranty applies:

- **Frame:** One (1) year after-sales warranty.
- **Fabric and Accessories:** Six (6) months after-sales warranty.

If you encounter any issues during use, please contact HOTEEL customer service immediately. We are committed to assisting you promptly.