

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ZNOAV](#) /
- › [ZNOAV 600W Centrifugal Juicer Instruction Manual](#)

ZNOAV juicer

ZNOAV 600W Centrifugal Juicer Instruction Manual

Model: juicer

1. INTRODUCTION

Thank you for choosing the ZNOAV 600W Centrifugal Juicer. This appliance is designed to efficiently extract juice from a variety of fruits and vegetables, providing fresh and healthy beverages. With its powerful motor, wide feeding chute, and multiple speed settings, it simplifies the juicing process. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.



Image: The ZNOAV 600W Centrifugal Juicer, red and black, surrounded by fresh fruits and vegetables like apples, grapes, oranges, and bell peppers, with a glass of green juice next to it.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the juicer.
- Ensure the safety lock is properly fixed before operation to prevent leaks and ensure safe high-speed running.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always ensure the juicer is properly assembled before plugging it in.
- Do not put fingers or other objects into the food chute while the appliance is operating. Use the food pusher provided.
- Avoid contact with moving parts.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.

- Do not immerse the motor base in water or other liquids.
- This appliance is for household use only.
- The cutter head and filter are made of food-grade stainless steel, and the lid and juice cup are made of BPA-free food-grade material for safety and health.

3. PRODUCT OVERVIEW

Components:

- Motor Base with Control Dial
- Juicer Cover
- Pulp Container
- Juice Collector
- Stainless Steel Filter Basket with Blade
- Food Pusher
- Safety Locking Bar

Key Features:

- **600W High-speed Power:** The powerful motor allows for quick juicing, producing fresh juice within 5 seconds.
- **3 Speeds Control:**
 - "I" Low Speed (12000-18000 rpm): Suitable for soft foods like oranges and strawberries.
 - "II" High Speed (18000-27000 rpm): Ideal for hard foods such as carrots and pineapples.
 - "0" Pause: Stops the machine at any time.
- **High Juice Yield:** Features a 304 stainless steel high-density filter and anti-corrosion multi-head blade, ensuring up to 30% higher juice yield compared to other centrifugal juicers.
- **Large Food Chute (3.5-inch):** Reduces preparation time as whole small fruits like apples can be inserted without dicing.
- **Anti-drip Design:** Prevents juice leakage during and after use.
- **Security Lock Clamp:** Ensures the lid is completely closed for safe operation.

SECURITY LOCK CLAMP

Keep the Lid Completely Closed



ANTI-DRIP DESIGN

Not leak juice during use



2 GRADES BUTTONS

Suitable for soft & hard foods



Image: Detailed view highlighting the security lock clamp, the anti-drip juice spout, and the three-speed control dial on the juicer's base.

3.5 IN CH LARGER FEED CHUTE FOR THE WHOLE FRUIT&VEG



Image: A green apple being dropped into the 3.5-inch wide feed chute of the juicer, illustrating its large opening for whole fruits.

HIGH JUICE YIELD FILTER



75-87%



85-95%



60-70%



85-90%



85-90%

Image: A close-up of the stainless steel filter basket and multi-head blade, showing juice splashing, indicating high juice extraction efficiency.



Image: An internal diagram illustrating the 600W high-speed motor, highlighting its powerful and efficient rotary speed for juicing.

4. SETUP

Before first use, wash all removable parts (juicer cover, pulp container, juice collector, filter basket, food pusher) in warm, soapy water. Rinse thoroughly and dry. The motor base should only be wiped with a damp cloth.

1. Place the motor base on a stable, flat, and dry surface.
2. Insert the juice collector into the motor base, ensuring it is seated correctly.
3. Place the stainless steel filter basket firmly onto the motor base, aligning it with the drive shaft.
4. Position the juicer cover over the filter basket and juice collector, ensuring it fits securely.
5. Engage the safety locking bar by lifting it and hooking it over the juicer cover. Ensure it clicks into place, indicating the lid is completely closed and locked.
6. Place the pulp container under the pulp spout.
7. Place a glass or the provided juice cup under the juice spout.

5. OPERATING INSTRUCTIONS

1. Prepare your fruits and vegetables: Wash all produce. For larger items, cut them into pieces that fit comfortably into the 3.5-inch wide chute. Small apples can be juiced whole. Remove large seeds/pits (e.g., from peaches, avocados) and hard peels (e.g., from pineapple, melon).
2. Ensure the juicer is correctly assembled and the safety locking bar is engaged.
3. Plug the juicer into a power outlet.
4. Select the appropriate speed setting using the control dial:
 - "I" (Low Speed): For soft fruits and vegetables like oranges, strawberries, grapes, tomatoes.
 - "II" (High Speed): For harder produce such as carrots, apples, celery, beets, ginger.
5. Turn the dial to the desired speed ("I" or "II"). The motor will start.
6. Gradually feed the prepared produce into the feeding chute using the food pusher. Apply gentle, even pressure. Do not force produce into the chute.
7. The fresh juice will flow into your glass/juice cup, and the pulp will collect in the pulp container.
8. When finished juicing, turn the control dial to "0" to stop the machine.
9. Unplug the juicer from the power outlet before disassembling or cleaning.

3 MODES CONTROL

0" FOR STOP



II" FOR HARD



I" FOR SOFT

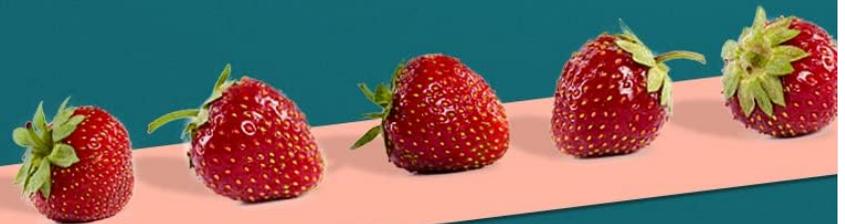


Image: Visual representation of the three modes: "0" for Stop (with cucumber slices), "II" for Hard (with carrots and orange juice), and "I" for Soft (with strawberries and red juice).



Image: A person in an apron cutting carrots on a wooden board, with various fruits and vegetables around, illustrating the preparation stage before juicing.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your juicer. Clean the juicer immediately after each use.

1. Unplug the juicer from the power outlet.
2. Disassemble all removable parts: food pusher, juicer cover, filter basket, juice collector, and pulp container.
3. All removable parts are dishwasher safe. Alternatively, wash them by hand in warm, soapy water. Use the provided cleaning brush for the stainless steel filter basket to remove any pulp residue from the mesh.
4. Rinse all parts thoroughly under running water.
5. Wipe the motor base with a damp towel. Do not immerse the motor base in water.
6. Dry all parts completely before reassembling or storing.
7. Store the juicer in a dry place.



Image: Various disassembled components of the juicer, including the lid, pulp container, and filter, shown being rinsed with water, indicating ease of cleaning.

7. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--|--|--|
| Juicer does not turn on. | Not plugged in; Safety locking bar not engaged; Overheating. | Check power connection; Ensure safety bar is locked; Unplug and let cool for 30 minutes before restarting. |
| Low juice yield or excessive pulp. | Incorrect speed setting; Filter basket clogged; Produce too soft/hard for setting. | Use appropriate speed for produce; Clean filter thoroughly; Adjust produce type or speed. |
| Juicer vibrates excessively or is noisy. | Improper assembly; Unbalanced load in filter basket. | Disassemble and reassemble correctly; Ensure produce is evenly distributed. |
| Juice leaks from the side. | Lid not properly secured; Safety locking bar not engaged. | Ensure lid is correctly placed and safety locking bar is fully engaged. |

8. SPECIFICATIONS

| Feature | Detail |
|-----------------------|------------------------|
| Brand | ZNOAV |
| Model Name | juicer |
| Color | red |
| Maximum Power | 600 Watts |
| Number of Speeds | 3 (I, II, 0) |
| Food Chute Diameter | 3.5 inches |
| Capacity | 0.6 Liters (juice cup) |
| Product Dimensions | 10"D x 10"W x 10"H |
| Item Weight | 6.38 pounds |
| Blade Material | Stainless Steel |
| Dishwasher Safe Parts | All removable parts |
| Certification | UL Certified |
| UPC | 740207776567 |

9. WARRANTY AND SUPPORT

ZNOAV provides a **12-month after-sales guarantee service** for this juicer. For any questions, concerns, or support needs, please utilize our **24-hour online service**. We are committed to resolving any issues you may encounter.

Please retain your proof of purchase for warranty claims.



© 2023 ZNOAV. All rights reserved.