



[Manuals.plus](#) /

> [ForeverPRO](#) /

> ForeverPRO AAA75946003 Accessory Assembly Nozzle for LG Appliance Instruction Manual

ForeverPRO AAA75946003

ForeverPRO AAA75946003 Accessory Assembly Nozzle Instruction Manual

Model: AAA75946003

INTRODUCTION

This manual provides essential instructions for the proper installation, use, and maintenance of the ForeverPRO AAA75946003 Accessory Assembly Nozzle. Please read this manual thoroughly before installation and retain it for future reference. This accessory is designed as a replacement part for compatible LG appliances.

PRODUCT OVERVIEW

The ForeverPRO AAA75946003 is a premium accessory assembly nozzle engineered to meet or exceed original equipment manufacturer (OEM) specifications. It serves as a direct replacement for the LG AAA75946003 part, ensuring compatibility and reliable performance for your appliance.

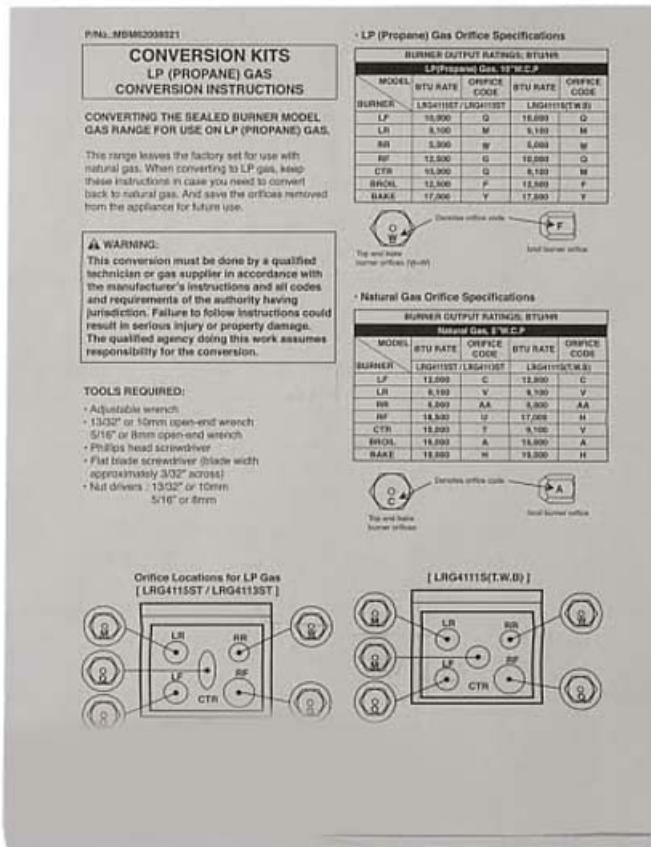


Image: ForeverPRO AAA75946003 Accessory Assembly Nozzle. This image shows the accessory nozzle, typically a plastic or metal component with a specific shape for directing air or water flow within an appliance.

Compatibility: This nozzle is compatible with various LG appliances, including models such as FB4753LS.ABDELGA, FB4753LS.ASTELGA, FB4763LS.ABDELGA, and FB4763LS.ASTELGA. Always verify compatibility with your specific appliance model before installation.

SETUP AND INSTALLATION

- Safety First:** Before attempting any installation or repair, ensure the appliance is completely disconnected from its power source (unplugged or circuit breaker off) to prevent electrical shock.
- Identify the Part:** Locate the existing nozzle or the designated installation point within your LG appliance. Refer to your appliance's specific service manual or diagrams for precise location.
- Remove Old Part (if applicable):** Carefully remove the old nozzle. This may involve unscrewing, unclipping, or gently prying the component. Note the orientation and connection points.
- Install New Nozzle:** Align the ForeverPRO AAA75946003 nozzle with the installation point. Secure it in place using the appropriate method (e.g., screws, clips, pressure fit). Ensure it is seated firmly and correctly.
- Verify Installation:** Double-check that the nozzle is securely attached and that all connections are properly made.

6. **Restore Power:** Once installation is complete and verified, reconnect the appliance to its power source.

Note: For detailed, appliance-specific installation instructions, always consult the service manual provided with your LG appliance. Professional installation is recommended if you are unsure about any steps.

OPERATING INSTRUCTIONS

As an accessory assembly nozzle, this component does not have independent operating controls. Its function is integral to the overall operation of the LG appliance it is installed in. Once correctly installed, the nozzle will perform its intended function as part of the appliance's normal operation. Refer to your LG appliance's user manual for instructions on operating the appliance itself.

MAINTENANCE

The ForeverPRO AAA75946003 Accessory Assembly Nozzle requires minimal maintenance. Periodically, during routine appliance cleaning or inspection, you may:

- **Inspect for Wear:** Check the nozzle for any signs of cracks, damage, or blockages.
- **Clean:** If accessible and necessary, gently clean the nozzle with a soft cloth and mild detergent. Ensure no residue is left behind.
- **Ensure Clear Passages:** For nozzles involved in fluid or air flow, ensure the passages are free from debris or buildup.

Caution: Always disconnect power to the appliance before performing any maintenance. Avoid using harsh chemicals or abrasive materials that could damage the nozzle.

TROUBLESHOOTING

If you experience issues after installing the ForeverPRO AAA75946003 nozzle, consider the following:

- **Incorrect Fit:** Double-check that the nozzle is the correct part for your specific LG appliance model. Refer to the compatibility list and your appliance's manual.
- **Improper Installation:** Review the installation steps to ensure the nozzle is securely and correctly seated. A loose or misaligned part can cause malfunctions.
- **Appliance Malfunction:** If the appliance continues to malfunction after replacing the nozzle, the issue may lie with another component of the appliance, not the nozzle itself. Consult your appliance's troubleshooting guide or a qualified technician.

If problems persist, contact ForeverPRO customer support or a certified appliance technician.

SPECIFICATIONS

Part Number:	AAA75946003
Item Model Number:	AAA75946003
Included Components:	Accessory Assembly Nozzle
Manufacturer:	ForeverPRO
ASIN:	B0C37GPB2N

WARRANTY INFORMATION

ForeverPRO replacement parts are designed for durability and performance. For specific warranty details regarding the AAA75946003 Accessory Assembly Nozzle, please refer to the packaging or contact ForeverPRO directly. Warranty terms typically cover manufacturing defects under normal use conditions.

SUPPORT

If you have any questions about the installation, operation, or maintenance of your ForeverPRO AAA75946003 Accessory Assembly Nozzle, please contact ForeverPRO customer support. For general appliance operation or troubleshooting not related to the nozzle, consult your LG appliance's user manual or LG customer service.

For further assistance, you may visit the [ForeverPRO brand page on Amazon](#).