

[Manuals.plus](#) /

> [Toastermaster](#) /

> Toastermaster 5 Speed Blender Instruction Manual

Toastermaster TM-600BL

Toastermaster 5 Speed Blender

INSTRUCTION MANUAL



Model: TM-600BL

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating the blender.
2. To protect against risk of electrical shock, do not immerse cord, plug, or motor base in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
11. Blades are sharp. Handle carefully.
12. Always operate blender with lid in place.
13. Do not blend hot liquids.
14. Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Toastmaster 5 Speed Blender is designed for versatile blending tasks, from smoothies to salsas. It features a powerful motor, durable stainless steel blades, and a BPA-free plastic jar.





Image: The Toastmaster 5 Speed Blender, showing the motor base, 48-ounce plastic jar, and lid.

Key Components:

- **Motor Base:** Houses the 450-watt motor and control panel with 5 speed settings and a pulse function.
- **48-oz Plastic Jar:** Durable, BPA-free jar with measurement markings.
- **Stainless Steel Blades:** Integrated into the jar for efficient blending and easy cleaning.
- **Pour-Through Lid:** Allows ingredients to be added while blending, includes a removable 1-ounce measuring cup.

Features:

- Versatile blending with five speeds and a pulse setting for desired consistency.
- Large 48-ounce BPA-free jar with a sturdy design.
- Durable and dishwasher-safe stainless steel blades.
- 450 watts of power, capable of crushing ice and blending ingredients smoothly.

Thoughtful Design



1 oz measuring cup



Pour-through lid



BPA-free jar



Stainless steel blades



Multiple speeds



STURDY,
CLASSIC
DESIGN

Image: A diagram highlighting the blender's thoughtful design, including the 1 oz measuring cup, pour-through lid, BPA-free jar, stainless steel blades, and multiple speeds.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean Before First Use:** Wash the blender jar, lid, and measuring cup in warm, soapy water. Rinse thoroughly and dry. The motor base should only be wiped with a damp cloth. Do not immerse the motor base in water.
3. **Assemble:** Place the motor base on a clean, dry, and stable surface. Ensure the jar is securely seated on the motor base. Place the lid firmly on the jar.
4. **Power Connection:** Plug the blender into a standard 120-volt AC electrical outlet.

OPERATING INSTRUCTIONS

1. **Prepare Ingredients:** Cut solid ingredients into small pieces (approximately 1-inch cubes) before placing them in the blender jar. For best results, always add liquids first.
2. **Load Jar:** Place prepared ingredients into the blender jar. Do not fill above the 48-ounce (6 cup) maximum fill line.
3. **Secure Lid:** Place the lid firmly onto the blender jar. Ensure the measuring cup is inserted into the lid's opening if not adding ingredients during blending.
4. **Select Speed:** Turn the control dial to your desired speed setting (OFF, PULSE, CHOP, MIX, GRATE, BLEND, LIQUEFY). Start with a lower speed and gradually increase if needed.
5. **Use Pulse Function:** For quick bursts of power or to chop ingredients, turn the dial to the 'PULSE' setting and release. This allows for greater control over consistency.
6. **Add Ingredients During Blending:** If additional ingredients are needed while blending, remove the 1-ounce measuring cup from the lid and carefully pour or drop ingredients through the opening. Replace the measuring cup immediately.
7. **Stop Blending:** When blending is complete, turn the control dial to the 'OFF' position.
8. **Unplug:** Always unplug the blender from the power outlet after use and before disassembling or cleaning.

5 speeds plus pulse

⬆️⬆️ Offers 5 different speeds for different tasks

⌚ Pulse offers speed flexibility Ⓜ️ Powerful enough to crush ice



Image: The Toastmaster blender motor base, highlighting the control panel with its 5 speed settings and pulse option for one-touch operation.

Tips for Best Results:

- For thick mixtures, use the pulse function to break up ingredients before continuous blending.
- Do not overload the blender. If the motor strains, reduce the amount of ingredients.
- When blending ice, ensure there is sufficient liquid to allow the blades to move freely.

Powerful for any recipe

✔ Shakes

✔ Smoothies

✔ Purées

✔ Guacamole

✔ Sauces



Image: The Toastmaster blender positioned in a kitchen, illustrating its suitability for preparing various recipes such as shakes, smoothies, purées, guacamole, and sauces.

CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your Toastmaster blender.

Cleaning:

- Always unplug the blender before cleaning.
- **Blender Jar, Lid, and Measuring Cup:** These parts are dishwasher safe (top rack recommended) or can be hand

washed in warm, soapy water. Rinse thoroughly and dry. Be cautious when handling the blades as they are sharp.

- **Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.

Storage:

Store the assembled blender in a clean, dry place. Do not store anything on top of the blender.

TROUBLESHOOTING

If you encounter issues with your blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet not active; jar not properly seated.	Ensure plug is securely in outlet; check circuit breaker; ensure jar is correctly locked onto the motor base.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients too large.	Add more liquid; reduce quantity of ingredients; cut ingredients into smaller pieces. Use pulse function.
Motor smells or seems to be overheating.	Overloaded; continuous operation for too long.	Unplug immediately. Reduce ingredients. Allow motor to cool down for at least 15-20 minutes before restarting. Do not operate continuously for more than 1 minute.
Lid leaks during operation.	Lid not properly secured; jar overfilled.	Ensure lid is firmly pressed onto the jar. Do not fill past the maximum fill line.

If the problem persists after attempting these solutions, please contact Toastmaster customer support.

PRODUCT SPECIFICATIONS

5 Speed Blender with 48-oz Plastic Jar



Image: A visual representation of the Toastmaster blender's dimensions (15.43 in H x 7.32 in W x 6.77 in D) and key specifications including weight (3 pounds), power (350 watts), and voltage (120 volts).

Specification	Detail
Brand	Toastmaster
Model Number	TM-600BL
Color	Black
Power Source	Corded Electric
Voltage	120 Volts
Number of Speeds	5 (plus Pulse)
Capacity	48-oz (6 cups)
Product Dimensions	6.77"D x 7.32"W x 15.43"H
Item Weight	3 pounds

Specification	Detail
Blade Material	Stainless Steel
Material Type Free	BPA Free
Included Components	Blender, Jar, Lid, Measuring Cup in Lid, Blade

WARRANTY AND CUSTOMER SUPPORT

This Toastmaster blender comes with a Limited Warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Toastmaster website.

For customer support, technical assistance, or to inquire about replacement parts, please contact Toastmaster directly. You can often find contact information on the brand's official website or through the retailer where the product was purchased.

Visit the [Toastmaster Store on Amazon](#) for more information and products.