

Dyzeryk JS-01

Dyzeryk MP3 Player, Model JS-01: User Manual

Brand: **Dyzeryk** | Model: **JS-01**

1. INTRODUCTION

This manual provides detailed instructions for the Dyzeryk MP3 Player, Model JS-01. Please read this manual thoroughly before using the device to ensure proper operation and to maximize your user experience.

1.1 Package Contents

Verify that all items listed below are included in your package:

- 1 x Dyzeryk MP3/MP4 Player (Model JS-01)
- 1 x 16GB Micro SD Card
- 1 x USB Cable
- 1 x Earphone
- 1 x User Manual (this document)



Image 1.1: The Dyzyryk MP3 Player, including the bundled 16GB Micro SD card and earphones.



Image 1.2: The Dyzerk MP3 Player is available in multiple color options.

2. PRODUCT FEATURES

The Dyzerk MP3 Player offers a range of features designed for portable entertainment:

- **Storage Capacity:** Includes a 16GB Micro SD card and supports expansion up to 128GB (Micro SD card not included for expansion).
- **Audio Quality:** Features HIFI lossless sound quality with a professional intelligent digital noise reduction chip and optimized circuit technology.
- **Integrated Speaker:** Built-in speaker for direct audio playback without earphones.
- **Long Battery Life:** Provides up to 10 hours of music playback on a full charge, which takes approximately 2-3 hours.
- **Multi-functional Device:** Supports music, video, and photo playback, FM radio, voice recording, and e-book reading.
- **Portable Design:** Lightweight and compact for easy carrying.

Multifunction



Image 2.1: The main menu displays icons for Music, Videos, FM Radio, Picture, Record, EBook, Files, Games, and Settings.

Portable Sports MP3

HIFI Sound Quality

High-fidelity Speaker



Image 2.2: The player is designed for portability and delivers HIFI sound quality through its high-fidelity speaker.

Included **16GB** TF card,
stores over 3000 songs and
E-books.

128GB

support up to 128GB TF card



Image 2.3: The device includes a 16GB TF card, capable of storing over 3000 songs and e-books, and supports expansion up to 128GB.

3. SETUP

3.1 Charging the Device

1. Connect the small end of the included USB cable to the MP3 player's USB port.
2. Connect the larger end of the USB cable to a computer's USB port or a compatible USB wall adapter (not included).
3. The battery icon on the screen will indicate charging status. A full charge typically takes 2-3 hours.

Note: Ensure the device is fully charged before first use for optimal battery performance.

3.2 Inserting the Micro SD Card

1. Locate the Micro SD card slot on the side of the MP3 player.
2. Gently insert the included 16GB Micro SD card into the slot with the gold contacts facing down until it clicks into place.
3. To remove, gently push the card inward until it clicks, then release, and it will eject.

3.3 Connecting Earphones

1. Plug the 3.5mm jack of the included earphones into the earphone port on the MP3 player.
2. Adjust the volume to a comfortable level before placing earphones in your ears.

3.4 Powering On/Off

- To power on, slide the power switch (usually located on the side or bottom) to the 'ON' position.
- To power off, slide the power switch to the 'OFF' position.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

The MP3 player features a central control pad with several buttons:

- **M (Menu):** Press to enter the main menu or return to the previous menu. Long press to access settings or exit current application.
- **Play/Pause (Center Button):** Press to play or pause media. In menus, press to confirm selection.
- **Previous/Next (Left/Right Arrows):** Press to skip tracks, navigate menu items, or fast-forward/rewind during playback (long press).
- **Volume Up/Down (VOL button, Up/Down Arrows):** Press to adjust volume. In menus, these may also function as up/down navigation.

4.2 Music Playback

1. From the main menu, select 'Music'.
2. Navigate through your music library (e.g., 'All Songs', 'Artists', 'Albums').
3. Select a song and press the Play/Pause button to begin playback.
4. Use the Previous/Next buttons to change tracks.
5. Use the VOL button to adjust the volume.

4.3 Video Playback

1. From the main menu, select 'Videos'.
2. Navigate to the desired video file (supported formats: AMV, AVI).
3. Press the Play/Pause button to start playback.

4.4 Photo Viewing

1. From the main menu, select 'Picture'.
2. Browse your image files (supported formats: JPEG, BMP, GIF).

3. Select an image to view it. Use Previous/Next buttons to cycle through images.



Image 4.1: The player supports viewing pictures and videos.

4.5 FM Radio

1. From the main menu, select 'FM Radio'.
2. The device will automatically scan for available stations (87.5MHz~108MHz).
3. Use the Previous/Next buttons to tune to different stations.
4. You can save up to 30 channels. Refer to the on-screen menu for saving options.



FM Radio

When resting, turning on the radio can reignite your emotions; with the radio function, you can increase your fun during long trips or leisure activities.



Image 4.2: The FM Radio function allows you to listen to broadcasts.

4.6 Voice Recorder

1. From the main menu, select 'Record'.
2. Choose 'Start Voice Recording' to begin.
3. Press the Play/Pause button to stop and save the recording (WAV or MP3 format).

4.7 E-Book Reader

1. From the main menu, select 'EBook'.
2. Navigate to your TXT format e-book files.
3. Select a file to open and read.

5. MAINTENANCE

5.1 Cleaning

- Use a soft, dry, lint-free cloth to clean the device's screen and body.
- Do not use liquid cleaners, aerosols, or harsh chemicals, as these may damage the device.

5.2 Battery Care

- Avoid exposing the device to extreme temperatures (hot or cold), as this can affect battery life.
- If storing the device for an extended period, ensure it has at least a 50% charge.
- Do not attempt to replace the built-in Li-ion battery yourself. Contact support if battery issues arise.

5.3 Storage

- Store the MP3 player in a cool, dry place away from direct sunlight and moisture.
- Keep the device away from strong magnetic fields.

6. TROUBLESHOOTING

6.1 Device Does Not Turn On

- Ensure the battery is charged. Connect the device to a power source and allow it to charge for at least 30 minutes.
- Verify the power switch is in the 'ON' position.

6.2 No Sound

- Check the volume level. Increase it using the VOL button.
- Ensure earphones are properly connected. Try another pair of earphones to rule out faulty earphones.
- If using the built-in speaker, ensure earphones are unplugged.
- Check if the audio file format is supported (MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP).

6.3 Cannot Transfer Files

- Ensure the USB cable is securely connected to both the player and the computer.
- Verify the computer recognizes the device as a removable disk.
- Check if the Micro SD card is properly inserted and not full.
- Try a different USB port on your computer.

6.4 Device Freezes or Becomes Unresponsive

- Press and hold the 'M' button for several seconds to attempt a soft reset.
- If unresponsive, slide the power switch to 'OFF', wait a few seconds, then slide it back to 'ON'.

7. SPECIFICATIONS

Screen Size	1.8 inches
Internal Storage	None (requires Micro SD card)

Included Storage	16GB Micro SD Card
Max. Storage Support	128GB Micro SD/MMC/SDHC card
MP3 Weight	25g (0.88 oz) / Item Weight: 2.08 ounces
MP3 Size	3.5 x 1.5 x 0.3 inches (Product Dimensions)
Battery	Built-in Li-ion battery (1 Lithium Ion battery required, included)
Charging Time	2-3 hours
Music Playback Format	MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP
Video Format	AMV, AVI
Picture Format	JPEG, BMP, GIF
Record Format	WAV, MP3
E-book Format	TXT
FM Radio Frequency	87.5MHz~108MHz (saves up to 30 channels)
File System Support	FAT16/FAT32
Connectivity	USB
Compatible Devices	Laptop
Model Name	build-in
Manufacturer	Dyzeryk

8. WARRANTY AND SUPPORT




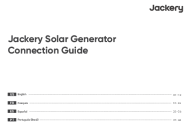


8.1 Warranty Information

The Dyzeryk MP3 Player, Model JS-01, comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8.2 Customer Support

If you encounter any issues or have questions regarding your Dyzeryk MP3 Player, please refer to the troubleshooting section of this manual first. If the problem persists, please contact Dyzeryk customer support for assistance. Contact details are typically provided on the product packaging or the seller's platform.

Related Documents - JS-01

	<p>Dyzeryk MP3 Player User Instructions</p> <p>User instructions for the Dyzeryk MP3 Player, covering button navigation, supported formats for music, videos, radio, pictures, recordings, ebooks, settings, and troubleshooting.</p>
	<p>Hyundai GD-01 MP3/USB/AUX/Bluetooth/iPod CD Player with AM/FM Radio Instruction Manual</p> <p>This instruction manual provides detailed information on operating the Hyundai GD-01 car audio system, including its CD player, MP3/USB/AUX/Bluetooth/iPod capabilities, and AM/FM radio functions. Learn about general controls, steering wheel controls, tuner operations, media playback, and settings.</p>
	<p>Panasonic JS-950 Series POS Workstation User Manual</p> <p>User's manual for the Panasonic JS-950 series POS Workstation, providing setup, operation, and safety guidelines. Includes product details and troubleshooting information.</p>
	<p>Jackery Solar Generator Connection Guide: SolarSaga Panels to Explorer Power Stations</p> <p>A comprehensive guide detailing how to connect Jackery SolarSaga solar panels (models JS-40A, SPL061, JS-80A, JS-100A, JS-100C, JS-100D, JS-100E, JS-100F, JS-200A, JS-200C, JS-200D, JS-85A, JS-500A) to various Jackery Explorer power station models using USB-C, DC7909, and DC8020 input ports.</p>
	<p>SmallRig SD3.0/SD4.0 Card Reader: Operating Instructions and Compatibility</p> <p>Comprehensive operating instructions, product details, installation guide, and compatibility list for SmallRig's SD3.0 (model 4869) and SD4.0 (model 4870) card readers.</p>
	<p>BOSS JS-10 eBAND Training Guide: Features, Effects, and Comparison</p> <p>Comprehensive training guide for the BOSS JS-10 eBAND, detailing its features, quick demo, effects, amp models, recording capabilities, and comparison with the JS-8. Learn to use the JS-10 for practice, jamming, and performance.</p>