

Manuals.plus /

› ALLIMITY /

› ALLIMITY Replacement Remote Control Instruction Manual

ALLIMITY QYSY-STR1-QYSY

Instruction Manual for ALLIMITY Replacement Remote Control

PRODUCT OVERVIEW

This ALLIMITY replacement remote control is designed to be fully compatible with a wide range of Strong Sat DTT models. It provides all the functions of your original remote control, ensuring seamless operation of your device. No programming is required; simply insert batteries, and it is ready for immediate use.





Image: Front view of the ALLIMITY replacement remote control, displaying its full button layout.

KEY FEATURES

- Covers all functions of your previous remote control.
- No programming required; works immediately after battery insertion.
- Compatible with numerous Strong Sat DTT models.
- Infrared connectivity for reliable signal transmission.

COMPATIBLE MODELS

This remote control is compatible with the following Strong Sat DTT models:

- SRT7404, SRT7405, SRT7406, SRT7407

- SRT7007, SRT7403, SRT8212
- SRT7501, SRT7511, SRT8525, SRT8526, SRT8527
- SRT3000, SRT7535, SRT8541
- SRT7006, SRT7502, SRT7504, SRT7505
- SRT7521, SRT7806, SRT8211, SRT8540, SRT8550



Image: Angled view of the remote control, showing its side profile and button arrangement.

SETUP

Inserting Batteries

Follow these steps to correctly insert batteries into your remote control:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two AAA alkaline batteries (not included), ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment.
4. Close the battery compartment cover securely.

Initial Operation

Once batteries are inserted, the remote control is ready for use. No pairing or programming steps are required. Point the remote directly at your Strong Sat DTT device and begin operating.

OPERATING INSTRUCTIONS

Basic Functions

The remote control features standard buttons for common operations:

- **POWER:** Turns the device on or off.
- **Number Buttons (0-9):** Directly select channels.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the channel up or down.
- **MUTE:** Mutes or unmutes the audio.
- **Navigation (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.

Advanced Functions

Utilize these buttons for enhanced control:

- **MENU:** Accesses the main menu of your device.
- **INFO:** Displays program information.
- **EPG:** Opens the Electronic Program Guide.
- **FAV:** Accesses your favorite channels list.
- **AUDIO:** Changes audio tracks or languages.
- **TEXT:** Activates teletext.
- **SUB:** Toggles subtitles on or off.
- **OPT:** Accesses options or settings.
- **P+/-:** Page up/down in menus or lists.
- **LIST:** Displays a list of channels or recordings.
- **TV/R:** Switches between TV and Radio modes.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the current menu or program.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Previous, Next, Record):** Controls media playback if your device supports it.



Image: Angled view of the remote control, providing a clear look at all buttons and their labels.

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid using abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops working. Always replace both batteries at the same time with new alkaline batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Handling:** Avoid dropping the remote control or exposing it to strong impacts, as this can damage internal components.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the table below for common problems and their solutions:

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly inserted batteries	Replace batteries with new ones, ensuring correct polarity.
Remote not responding	Obstruction between remote and device	Ensure a clear line of sight between the remote and the device's IR receiver.
Buttons are unresponsive or sticky	Dirt or debris under buttons	Clean the remote's surface and around the buttons. Avoid liquid entering the remote.
Limited operating range	Weak batteries or interference	Replace batteries. Ensure no strong light sources or other IR devices are causing interference.
Remote works for some functions but not others	Device-specific compatibility or settings	Verify your device model is listed as compatible. Check your device's settings for remote control options.

SPECIFICATIONS

- **Brand:** ALLIMITY
- **Model Number:** QYSY-STR1-QYSY
- **Color:** Black
- **Connectivity Technology:** Infrared
- **Compatible Devices:** Strong Sat DTT models (SRT7404, SRT7405, SRT7406, SRT7407, SRT7007, SRT7403, SRT8212, SRT7501, SRT7511, SRT8525, SRT8526, SRT8527, SRT3000, SRT7535, SRT8541, SRT7006, SRT7502, SRT7504, SRT7505, SRT7521, SRT7806, SRT8211, SRT8540, SRT8550)
- **Maximum Range:** 10 Meters
- **Battery Description:** Alkaline (AAA, not included)
- **Number of Supported Devices:** 1

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. For any questions regarding warranty, returns, or technical support, please contact the seller or manufacturer directly through your purchase platform. Ensure you have your order details and product model number (QYSY-STR1-QYSY) ready when contacting support.

