

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KEMEI](#) /

› [KEMEI KM-1113 Professional Cordless Hair Clipper User Manual](#)

KEMEI KM-1113

KEMEI KM-1113 Professional Cordless Hair Clipper User Manual

Model: KM-1113

INTRODUCTION

Thank you for purchasing the KEMEI KM-1113 Professional Cordless Hair Clipper. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and keep it for future reference.

SAFETY INSTRUCTIONS

- Keep the appliance dry. Do not use it near water or in wet conditions.
- Do not disassemble the unit. For repairs, contact qualified service personnel.
- Keep out of reach of children.
- Use only the provided charging cable.
- Ensure the power adapter voltage is compatible with your local power supply.
- Avoid prolonged charging. Unplug the device once fully charged.
- Do not use if the blades are damaged, as this may cause injury.

PACKAGE CONTENTS

Verify that all items are present in the package:

- KEMEI KM-1113 Hair Clipper
- USB Charging Cable
- Guide Combs (1.5mm, 3mm, 4.5mm)
- Cleaning Brush
- Lubricating Oil
- User Manual

PRODUCT OVERVIEW

The KEMEI KM-1113 features a durable stainless steel blade and a powerful motor for efficient hair trimming. It includes an LCD display for battery status and comes with multiple guide combs for various cutting lengths.



Image: Main view of the KEMEI KM-1113 Professional Cordless Hair Clipper.

Key Components:

- **Stainless Steel Blades:** Precision-engineered for sharp, smooth cutting.
- **Power Button:** To turn the clipper on/off.
- **LCD Display:** Shows remaining battery percentage and maintenance indicators.
- **USB Charging Port:** For convenient charging.
- **Guide Comb Attachment Points:** For securing the guide combs.

Stainless Steel Cutter Head

Steel precision hair clipper & trimmer



Image: Close-up of the stainless steel cutter head, highlighting its precision design.

LCD display

percentage of remaining power
display, machine status at a glance



Image: The LCD display on the clipper, showing the remaining power percentage and a maintenance indicator.

SETUP

Attaching Guide Combs:

1. Select the desired guide comb (1.5mm, 3mm, or 4.5mm) for your preferred hair length.
2. Align the comb with the clipper blades and push it firmly until it clicks into place.
3. To remove, gently pull the comb away from the blades.

3 Types of Limit Combs

THREE LENGTH LIMIT COMBS DESIGN YOUR HAIR IN ALL DIRECTIONS



Image: The KEMEI KM-1113 clipper shown with its three included guide combs (1.5mm, 3mm, and 4.5mm) and examples of use.

CHARGING

The clipper is powered by a built-in rechargeable lithium-ion battery. Before first use, fully charge the device.

1. Ensure the clipper is turned off.
2. Insert the USB charging cable into the clipper's charging port.
3. Connect the other end of the USB cable to a compatible USB power source (e.g., wall adapter, power bank, car charger).
4. The LCD display will show the charging status. A full charge takes approximately 2.5 hours and provides up to 210 minutes of operating time.
5. Unplug the clipper once charging is complete to preserve battery life.



Image: Visual representation of the KEMEI KM-1113's charging capabilities, showing the USB cable, power bank, and car charger options, along with battery capacity (1200mAh), charging time (2.5 hours), and working time (210 minutes).

OPERATING INSTRUCTIONS

General Hair Trimming:

1. Ensure your hair is clean and dry.
2. Attach the desired guide comb.
3. Press the power button to turn on the clipper.
4. Hold the clipper with the blades pointing downwards and move it against the direction of hair growth.
5. Use smooth, even strokes.
6. For detailed work or outlining, remove the guide comb and use the bare blades carefully.
7. After use, turn off the clipper and clean it as described in the Maintenance section.

Professional Clipper

DESIGNED FOR THE PROFESSIONAL



Image: A KEMEI KM-1113 professional hair clipper being used to trim hair, demonstrating its ergonomic design and precision.

MAINTENANCE

Regular cleaning and lubrication will ensure optimal performance and extend the life of your clipper.

Cleaning the Blades:

1. Turn off the clipper and disconnect it from any power source.
2. Remove the guide comb.
3. Use the provided cleaning brush to remove loose hairs from the blades and the clipper body.
4. For a more thorough clean, you may carefully detach the blade head (refer to specific instructions if available, otherwise proceed with caution).
5. Do not rinse the clipper under water unless explicitly stated as waterproof (this model is not specified as waterproof).

Lubricating the Blades:

1. After cleaning, apply 1-2 drops of the provided lubricating oil onto the blades.

2. Turn on the clipper for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.
4. Lubricate regularly, especially after every few uses, to maintain blade sharpness and smooth operation.

Storage:

Store the clipper in a cool, dry place, away from direct sunlight and moisture. Ensure it is turned off and unplugged before storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper fully.
Clipper runs slowly or pulls hair.	Blades are dirty or not lubricated.	Clean and lubricate the blades.
Clipper is making unusual noise.	Blades may be misaligned or damaged.	Turn off and inspect blades. If damaged, do not use. Contact support.
Charging indicator not working.	Faulty charging cable or power source.	Try a different USB cable or power source.

SPECIFICATIONS

Feature	Detail
Model Number	KM-1113
Brand	KEMEI
Blade Material	Stainless Steel
Power Source	Rechargeable Battery (USB)
Battery Type	Lithium-ion (1200mAh)
Charging Time	Approx. 2.5 hours
Operating Time	Up to 210 minutes
Guide Comb Sizes	1.5mm, 3mm, 4.5mm
Noise Level	Under 65dB
Product Dimensions (L x W x H)	15 x 4 x 3 cm
Weight	349 grams
Target Audience	Men

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official KEMEI website. Keep your proof of purchase for warranty claims.

