



Manuals.plus /

- › SKMEI /
- › SKMEI Model 2049 Men's Dual Display Electronic Watch Instruction Manual

**SKMEI 2049**

# SKMEI Model 2049 Men's Dual Display Electronic Watch Instruction Manual

Model: 2049

## 1. INTRODUCTION

---

This manual provides detailed instructions for the operation and maintenance of your SKMEI Model 2049 Dual Display Electronic Watch. This timepiece combines analog and digital displays, offering multiple functions including triple time zones, chronograph, stopwatch, countdown timer, alarm, and date/week display. Please read this manual thoroughly to ensure proper use and longevity of your watch.



Image 1.1: Front view of the SKMEI Model 2049 watch, showcasing its dual display and overall design.

## 2. KEY FEATURES

- **Dual Display:** Analog and Digital timekeeping.
- **Multi-functional:** Triple time zones, chronograph, stopwatch, countdown timer, alarm, date, and week display.
- **Water Resistance:** 3ATM (30 meters), suitable for splashes, rain, and light swimming.
- **Durable Construction:** Zinc alloy case, stainless steel band, and scratch-resistant glass.
- **EL Backlight:** For visibility in low-light conditions.

# Key Features

Display

**Analog-Digital**

Dial Shape

**Round**

Features

**3 Time, Alarm  
& EL Light**

Strap Material

**Stainless Steel**

Water Resistance

**30 m**



Image 2.1: Visual summary of the watch's key features, highlighting its display type, functions, and materials.

## 3. WATCH COMPONENTS AND BUTTONS

Familiarize yourself with the watch's buttons and crown for effective operation.



Image 3.1: Detailed view of the watch face and side buttons, indicating their positions.

- **A Button (Top Left):** EL Light / Reset (in setting modes).
- **B Button (Bottom Left):** Mode selection.
- **C Button (Top Right):** Start / Increase value.
- **D Button (Bottom Right):** Reset / Decrease value.
- **Crown (Right Side):** Analog time adjustment.

## 4. SETUP AND INITIAL CONFIGURATION

### 4.1. Setting Analog Time

1. Pull out the crown located on the right side of the watch.
2. Rotate the crown to adjust the analog hour and minute hands to the desired time.
3. Push the crown back in to start the analog movement.

### 4.2. Setting Digital Time and Date

1. Press the **B Button** repeatedly to cycle through modes until you reach the Time Setting mode (usually indicated by flashing digits).

2. Once in Time Setting mode, press the **A Button** to select the item you wish to adjust (e.g., seconds, hour, minute, year, month, day).
3. Use the **C Button** to increase the value or the **D Button** to decrease the value of the selected item.
4. Continue pressing the **A Button** to move to the next setting item and adjust as needed.
5. After all adjustments are made, press the **B Button** to exit the setting mode and return to normal time display.

### 4.3. Strap Adjustment

The stainless steel strap is adjustable. For precise fitting, it is recommended to have the strap adjusted by a professional watch technician to avoid damage to the watch or strap.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Mode Cycle

Press the **B Button** to cycle through the following modes:

- Normal Time Display (Hour, Minute, Second, Day, Week)
- Chronograph (Stopwatch)
- Alarm Setting
- Countdown Timer
- Dual Time Zone Setting

### 5.2. Chronograph (Stopwatch)

1. Enter Chronograph mode by pressing the **B Button**.
2. Press the **C Button** to start the stopwatch.
3. Press the **C Button** again to pause the stopwatch.
4. Press the **D Button** to reset the stopwatch to zero.
5. To resume from pause, press the **C Button**.

### 5.3. Alarm Setting

1. Enter Alarm mode by pressing the **B Button**.
2. Press the **A Button** to select the hour or minute digits for adjustment (they will flash).
3. Use the **C Button** to increase the value or the **D Button** to decrease the value.
4. Press the **B Button** to confirm and exit alarm setting.
5. To activate/deactivate the alarm, press the **C Button** while in Alarm mode (a bell icon usually indicates activation).

### 5.4. Countdown Timer

1. Enter Countdown Timer mode by pressing the **B Button**.
2. Press the **A Button** to select the hour or minute digits for adjustment.
3. Use the **C Button** to increase the value or the **D Button** to decrease the value.
4. Press the **C Button** to start the countdown.
5. Press the **C Button** again to pause, and **D Button** to reset.

### 5.5. EL Backlight

Press the **A Button** at any time to activate the EL (Electroluminescent) backlight for a few seconds,

illuminating the digital display for better visibility in the dark.

## 6. MAINTENANCE AND CARE

### 6.1. Water Resistance (3ATM / 30M)

Your SKMEI 2049 watch is water-resistant to 30 meters (3ATM). This means it is suitable for daily use, such as accidental splashes, rain, and brief immersion in water like light swimming. It is **not** suitable for showering with hot water, diving, or prolonged underwater activities. Do not operate buttons while the watch is wet or submerged.



Image 6.1: Rear view of the watch, confirming its water resistance rating and model number.

### 6.2. Cleaning

Wipe the watch case and strap regularly with a soft, dry cloth to remove dirt and moisture. For stainless steel bands, a slightly damp cloth can be used, followed by immediate drying.

### 6.3. Battery Replacement

The watch uses a CR2016/SR626SW battery. When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch

technician to ensure proper sealing and water resistance.

## 7. TROUBLESHOOTING

- **Digital Display is Blank or Dim:** Check battery level. If the battery is low, replace it. Ensure the watch is not exposed to extreme temperatures.
- **Analog Hands Not Moving:** Check if the crown is pushed in completely. If the issue persists, the battery may need replacement or there could be a mechanical issue requiring professional service.
- **Buttons Unresponsive:** Ensure the watch is not in a locked mode (if applicable, though not a feature of this model). If wet, dry thoroughly. If still unresponsive, a professional check is advised.
- **Time Inaccuracy:** Re-set both analog and digital times. If the watch consistently loses or gains time, the battery may be weak or the movement may require servicing.
- **Backlight is Weak:** This can be a sign of a low battery. Replace the battery if necessary.

## 8. SPECIFICATIONS

 
Feature	Detail
Model Number	2049
Display Type	Analog-Digital
Case Material	Zinc Alloy
Band Material	Stainless Steel
Water Resistance	3ATM (30 Meters)
Movement Type	Quartz
Case Diameter	4.7 Centimeters
Case Thickness	1.88 Centimeters
Strap/Lug Width	20mm
Item Weight	126.6 Grams
Battery Type	CR2016/SR626SW



Case Width  
**47MM**



Strap Material  
**Stainless Steel**



Case Thickness  
**18.8MM**

Image 8.1: Dimensional specifications of the watch, including case height, width, and strap width.

## 9. WARRANTY AND SUPPORT

### 9.1. Warranty Information

Your SKMEI Model 2049 watch comes with a **6-month limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper use, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

### 9.2. Customer Support

For further assistance, technical support, or warranty inquiries, please contact SKMEI customer service through the retailer where the product was purchased or visit the official SKMEI website for contact details.