

VIKICON G-264L

VIKICON Men's Beard Trimmer G-264L

Instruction Manual

1. INTRODUCTION

Thank you for choosing the VIKICON Men's Beard Trimmer G-264L. This manual provides essential information for the safe and effective use, maintenance, and care of your new trimmer. Please read these instructions thoroughly before first use and retain them for future reference.

2. SAFETY INFORMATION

- This appliance is not waterproof. Do not immerse the trimmer in water or use it in the shower. Clean only with a damp cloth or the provided brush.
- Keep the appliance dry. Water damage can lead to electric shock or malfunction.
- Do not use the trimmer if the blades are damaged or broken, as this may cause injury.
- Keep out of reach of children. This appliance is not a toy.
- Use only the charging cable provided with the device.
- Ensure the power adapter is compatible with your local voltage before charging.
- Unplug the trimmer from the power outlet immediately after charging and before cleaning.
- Do not attempt to repair the appliance yourself. Contact qualified service personnel for repairs.

3. PACKAGE CONTENTS

Please check the package for the following items:

- VIKICON Men's Beard Trimmer G-264L
- Length Adjustable Comb 1 (10mm)
- Length Adjustable Comb 2 (20mm)
- USB Charging Cable
- Cleaning Brush
- Clipper Oil

- Travel Pouch

4. PRODUCT OVERVIEW

The VIKICON G-264L is a cordless, rechargeable beard trimmer designed for precision grooming. It features an ergonomic design for comfortable handling and ultra-sharp stainless steel blades for efficient cutting.



Figure 4.1: Overview of the VIKICON G-264L Beard Trimmer with its adjustable comb attachment.




Features an **ERGONOMIC DESIGN**

meticulously crafted to provide optimal comfort and support.

Figure 4.2: The ergonomic design of the trimmer allows for comfortable and precise handling during use.

ULTRA-SHARP STAINLESS STEEL BLADE

Smooth & Close Cutting
gentle on sensitive skin

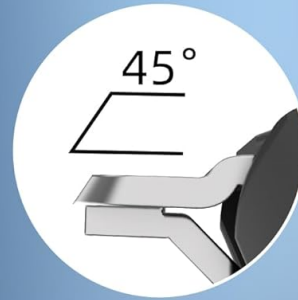

Safe



Sharp



Detachable



Washable

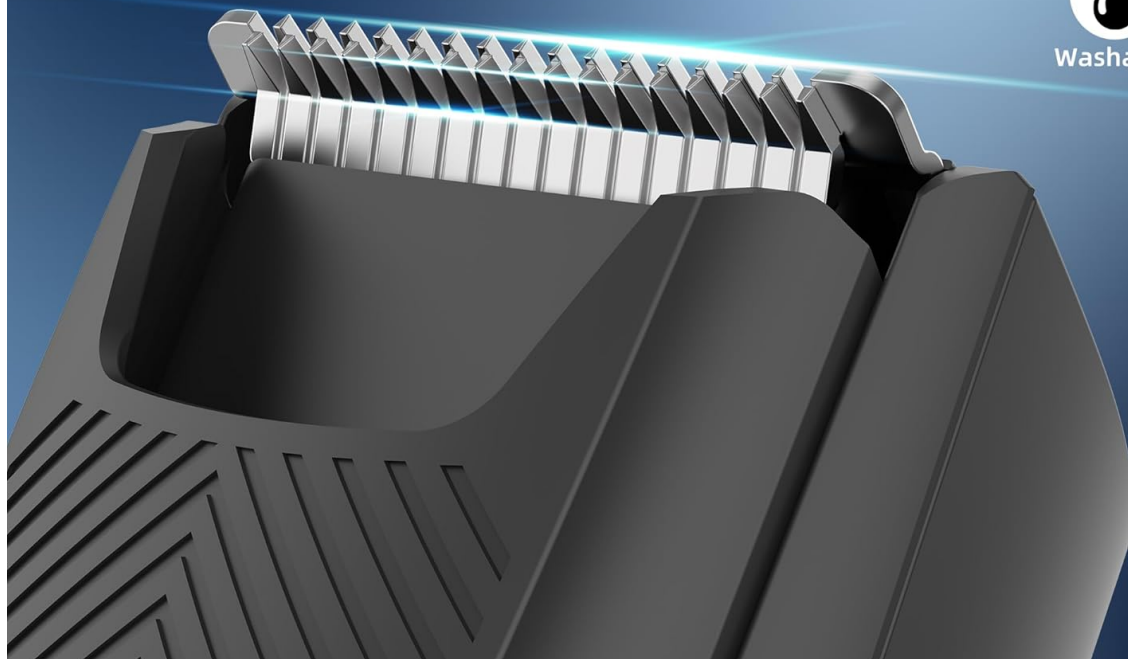


Figure 4.3: The trimmer features ultra-sharp stainless steel blades, designed for smooth and close cutting, gentle on sensitive skin. The blades are detachable and washable for easy cleaning.

5. CHARGING INSTRUCTIONS

Before first use, fully charge the trimmer. A full charge typically takes approximately 1.5 hours and provides up to 150 minutes of cordless operation.

1. Ensure the trimmer is switched off.
2. Connect the USB charging cable to the charging port on the trimmer.
3. Plug the other end of the USB cable into a suitable USB power adapter (not included) or a USB port.
4. The charging indicator light will illuminate to show that the trimmer is charging.
5. Once fully charged, the indicator light may change color or turn off, depending on the model. Disconnect the trimmer from the charger.



Figure 5.1: The trimmer requires approximately 1.5 hours of charging to provide 150 minutes of cordless operation.

6. OPERATING INSTRUCTIONS

6.1 Attaching and Adjusting Length Combs

The trimmer comes with two length adjustable combs (10mm and 20mm) and a precision dial for fine-tuning cutting lengths from 0.5mm to 10mm.

1. Ensure the trimmer is switched off.
2. Select the desired comb (10mm or 20mm) and slide it onto the trimmer head until it clicks into place.
3. To adjust the cutting length, rotate the precision dial located on the trimmer body. The dial allows for incremental adjustments within the range of the attached comb, offering up to 40 length settings.
4. To remove a comb, gently push it upwards and slide it off the trimmer head.

Seamless Precision at Your Fingertips with Zero Effort.

For Use on Beard and Hair



Figure 6.1: The zoom wheel allows for precise length adjustments, complemented by two interchangeable combs for different trimming needs.

6.2 Trimming Your Beard or Hair

1. Ensure your beard or hair is clean and dry before trimming.
2. Attach the appropriate comb and set the desired length using the precision dial. If you desire a 0-gapped trim, remove the length guard cage and use the clipper directly.
3. Press the power button to turn on the trimmer.
4. Hold the trimmer with the blades facing upwards and move it against the direction of hair growth.
5. Use slow, controlled movements for an even trim.
6. For detailing or shaping, you may remove the comb and use the bare blade carefully.
7. After use, switch off the trimmer and clean it as described in the Maintenance section.

7. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your trimmer.

1. **Cleaning the Blades:** After each use, switch off the trimmer and detach the comb. Use the provided cleaning brush to remove any loose hairs from the blades and the trimmer head. The stainless steel blades are detachable and washable; you may rinse them under running water, but ensure they are completely dry

before reattaching to the trimmer body. Do not rinse the entire trimmer body under water as it is not waterproof.

- Oiling the Blades:** Periodically, apply a small drop of the provided clipper oil to the blades. Turn on the trimmer for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and smooth operation.
- Cleaning the Trimmer Body:** Wipe the trimmer body with a dry or slightly damp cloth. Do not use abrasive cleaners or solvents.
- Hair Collection:** Be aware that while the trimmer has a design feature intended to catch hair, it may not be fully effective. You may need to frequently tap out collected hair from the comb or clean the blades during longer trimming sessions.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for 1.5 hours.
Poor cutting performance or pulling hair.	Blades are dirty or not oiled. Blades are dull.	Clean and oil the blades. If performance does not improve, blades may need replacement.
Trimmer stops during use.	Battery is low. Hair buildup is jamming the blades.	Recharge the trimmer. Clean the blades and comb thoroughly.
Difficulty cleaning hair from the trimmer.	Hair is accumulating in internal pockets.	Use the cleaning brush frequently during and after use. Detach and rinse the blades. Avoid rinsing the entire unit.

9. SPECIFICATIONS

- **Model:** G-264L
- **Brand:** VIKICON
- **Power Source:** Rechargeable Battery (Lithium Ion)
- **Charging Time:** Approximately 1.5 hours
- **Cordless Run Time:** Up to 150 minutes
- **Blade Material:** Stainless Steel
- **Adjustable Lengths:** 0.5mm - 20mm (with combs)
- **Special Features:** Portable, Rechargeable, Precision Dial
- **Item Weight:** 259 g (0.26 Kilograms)
- **Package Dimensions:** 18.01 x 10.49 x 5.99 cm
- **Target Audience:** Men

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included in your product packaging or contact VIKICON customer service directly. Keep your purchase receipt as proof of purchase.

