

EarFun Air Pro 3

EarFun Air Pro 3 ANC Wireless Earbuds User Manual

Model: Air Pro 3 (TW500)

1. INTRODUCTION

Thank you for choosing the EarFun Air Pro 3 ANC Wireless Earbuds. These earbuds are designed to provide a superior audio experience with advanced features such as Active Noise Cancellation (ANC), Bluetooth 5.3 connectivity, and a dedicated mobile application for customization. Please read this manual carefully before use to ensure proper operation and to maximize your enjoyment of the product.



EarFun Air Pro 3 ANC Wireless Earbuds and Charging Case

2. WHAT'S IN THE BOX

The package contains the following items:

- EarFun Air Pro 3 Bluetooth Earbuds (Left and Right)
- Charging Case
- Eartips (XS, S, M, L sizes)
- USB-C Charging Cable
- User Manual

 
3. SETUP

3.1 Initial Pairing

1. Ensure the earbuds are fully charged.
2. Open the charging case. The earbuds will automatically enter pairing mode (LED indicators will flash blue/white).
3. On your device (smartphone, tablet, PC), enable Bluetooth and search for available devices.
4. Select "EarFun Air Pro 3" from the list to connect. Once connected, the LED indicators will turn off.

3.2 Ear Tip Selection and Fit


For optimal sound quality and Active Noise Cancellation performance, it is crucial to choose the correct size of ear tips. The EarFun Air Pro 3 comes with four sizes (XS, S, M, L) of soft silicone ear tips. Experiment with different sizes to find the best fit for your ears. A good fit ensures a secure seal, enhancing bass response and noise isolation.



Select the optimal ear tips for comfort and sound performance.

3.3 EarFun Audio App Installation

 Download the "EarFun Audio" app from the Google Play Store (for Android) or the Apple App Store (for iOS). The app allows you to customize sound settings (EQ), switch ANC modes, activate low latency mode, and personalize touch controls. No mandatory registration is required to use the app.



EarFun Audio App interface for customization.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **Power On:** Open the charging case, and the earbuds will automatically power on and connect to the last paired device.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging.

4.2 Active Noise Cancellation (ANC) Modes

The EarFun Air Pro 3 features hybrid ANC technology with EarFun's proprietary QuietSmart 2.0, offering up to 43dB of noise reduction. You can switch between three modes:

- **Noise Cancelling Mode:** Reduces ambient noise for an immersive listening experience.
- **Normal Mode:** Standard audio playback without noise cancellation or ambient sound.
- **Ambient Sound Mode:** Allows you to hear your surroundings while listening to audio.

Switch modes via the touch controls on the earbuds or through the EarFun Audio app.



Experience up to 43dB noise reduction with ANC.

4.3 Touch Controls

The earbuds feature intuitive touch controls. You can customize these controls using the EarFun Audio app.

Default Touch Controls

Action	Left Earbud	Right Earbud
Single Tap	Volume Down	Volume Up
Double Tap	Play/Pause, Answer/End Call	
Triple Tap	Previous Track	Next Track
Long Press (2s)	Switch ANC Modes / Decline Call	
Voice Assistant	Triple tap (customizable via app)	

4.4 Low Latency Gaming Mode

Activate the low latency mode via the EarFun Audio app to reduce audio delay to as low as 55ms, providing a more synchronized experience for gaming and video playback. Note that this mode may reduce connection range. It is recommended to turn off low latency mode when primarily listening to music for optimal audio quality.



Enjoy synchronized audio with 55ms low latency gaming mode.

4.5 Multipoint Connection

The EarFun Air Pro 3 supports multipoint connection, allowing you to connect to two devices simultaneously (e.g., a smartphone and a PC). This enables seamless switching between music and calls without needing to manually disconnect and reconnect.



Connect to two devices simultaneously with multipoint connection.

5. MAINTENANCE

To ensure the longevity and optimal performance of your EarFun Air Pro 3 earbuds, regular cleaning is recommended.

- **Cleaning Ear Tips:** Remove the silicone ear tips and clean them with a soft, damp cloth. Ensure they are completely dry before reattaching.
- **Cleaning Charging Contacts:** Use a dry cotton swab or a soft, dry cloth to gently clean the charging contacts on both the earbuds and inside the charging case. This prevents charging issues caused by dirt or debris.
- **Water Resistance:** The earbuds are IPX5 water-resistant, meaning they can withstand sweat and light rain. Avoid submerging them in water or using them for swimming.

IPX5防水

ランニングやジムなどの運動時の汗や、雨にも耐えるIPX5の防水・防汗性能を備えています。

*水泳や長時間の水の中での着用は避け下さい。



IPX5 water resistance for protection against sweat and splashes.

6. CHARGING

The EarFun Air Pro 3 offers extended battery life and convenient charging options.

- **Battery Life:** The earbuds provide up to 9 hours of continuous music playback on a single charge. With the charging case, the total playback time extends to up to 45 hours.
- **Charging the Case:** The charging case can be charged via the included USB-C cable or wirelessly using a compatible wireless charging pad.
- **Quick Charge:** A quick 10-minute charge can provide up to 2 hours of playback time.



Up to 45 hours of total playback with the charging case.

7. TROUBLESHOOTING

If you encounter any issues with your EarFun Air Pro 3 earbuds, please refer to the following common solutions:

- **No Sound/Low Volume:**
 - Ensure earbuds are properly seated in your ears and ear tips provide a good seal.
 - Check device volume and earbud volume.
 - Clean the earbud mesh and charging contacts.
 - If one earbud has low bass or no sound, try resetting the earbuds and re-pairing.
 - Adjust the equalizer settings in the EarFun Audio app. If volume is too low even at max, try increasing all 6 EQ points to +10. If too loud at min, try decreasing to -10.
- **Earbuds Not Connecting/Pairing:**
 - Ensure Bluetooth is enabled on your device.

- Place earbuds in the case, close, then open to re-enter pairing mode.
- Forget/delete "EarFun Air Pro 3" from your device's Bluetooth list and try pairing again.
- Restart your device.

• **Charging Issues:**

- Ensure the charging cable is securely connected.
- Clean the charging contacts on both earbuds and the case.
- Try a different USB-C cable or power adapter.

• **App Issues:**

- Ensure the app is updated to the latest version.
- Uninstall and reinstall the EarFun Audio app.

8. SPECIFICATIONS

Feature	Detail
Brand	EarFun
Model Name	Air Pro 3 (TW500)
Color	Black
Ear Placement	In-Ear
Headphone Style	Earbuds
Impedance	32 Ohms
GTIN (Global Trade Identification Number)	06974173980183
Included Items	EarFun Air Pro 3 Bluetooth Earbuds, Eartips, Charging Cable, Charging Case, User Manual
Noise Control	Active Noise Cancellation (up to 43dB)
Audio Driver Size	11 mm
Frequency Response	20 Hz - 20 kHz
Wireless Type	Bluetooth 5.3
Compatible Devices	Android smartphones, iPhones (15/Pro/Mini/MAX, 14, 13, 12, 11, XS/MAX, XR, X, 8/Plus, 7, SE, 6s, 6, 5s), iPads (Pro/Air/Mini), iPods, Galaxy, Huawei, Xiaomi, OPPO, Xperia, Nexus, ASUS, Fujitsu, Windows PCs, Macbooks, Walkman, and other Bluetooth-enabled devices.
Waterproof Type	IPX5
Product Weight	53 grams
Additional Features	Qualcomm QCC3071 Chip, aptX Adaptive, cVc 8.0 Call Noise Reduction, EarFun Audio App Support, Multipoint Pairing

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Your EarFun Air Pro 3 comes with an 18-month standard warranty from the date of purchase. In case of product defects or malfunctions under normal use, please contact our support team. You can extend your warranty by an additional 6 months (total 24 months) by registering your product as a VIP member on the EarFun website.



Warranty details: 18 months standard + 6 months extended.

9.2 Contact Support

For warranty claims, product inquiries, or technical support, please contact us through the following method:

Go to your Amazon account: **"Account Service" > "Order History" > "Seller" > "Ask a Question"**

Our products comply with the technical standards stipulated by the Electrical Appliance and Material Safety Act (PSE).

© 2023 EarFun. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question