

Sekey FW43

Sekey 300L Extended Collapsible Wagon FW43 Instruction Manual

Model: FW43 | Brand: Sekey

INTRODUCTION

Thank you for choosing the Sekey 300L Extended Collapsible Wagon. This manual provides essential information for the safe and efficient use of your wagon. Please read it thoroughly before assembly and operation, and retain it for future reference.

This heavy-duty, collapsible utility wagon is designed for transporting various items, offering a large capacity and robust construction for diverse outdoor and indoor tasks. Its foldable design ensures convenient storage and portability.

SAFETY INFORMATION

- **Maximum Load Capacity:** Do not exceed the maximum load capacity of 660 lbs (300 kg). Overloading can cause damage to the wagon and potential injury.
- **Not for Children:** This product is not designed to transport children. Always ensure children are kept away from the wagon during loading, unloading, and operation.
- **Secure Load:** Always secure items within the wagon to prevent shifting or falling during transport.
- **Even Distribution:** Distribute weight evenly across the wagon bed to maintain stability.
- **Brake Usage:** Engage the wheel brakes when the wagon is stationary, especially on inclines, to prevent unintended movement.
- **Terrain:** Exercise caution when operating on uneven, soft, or steep terrain. The wagon is designed for all-terrain use but extreme conditions may affect stability.
- **Maintenance:** Regularly inspect the wagon for any signs of wear or damage. Do not use if any components are broken or compromised.
- **Pinch Points:** Be aware of pinch points during folding and unfolding operations. Keep hands and fingers clear of moving parts.

PACKAGE CONTENTS

 
Verify that all components are present and in good condition:

- 1 x Sekey 300L Extended Collapsible Wagon (Pre-assembled)
- 1 x Removable Bottom Pad
- 1 x Carry Bag (for storage)


SETUP INSTRUCTIONS

1. Unfolding the Wagon

1. Remove the wagon from its carry bag.
2. Place the folded wagon on a flat, stable surface.
3. Gently pull the sides of the wagon outwards until it begins to expand.
4. Push down firmly on the center of the wagon's base until it fully extends and locks into place.

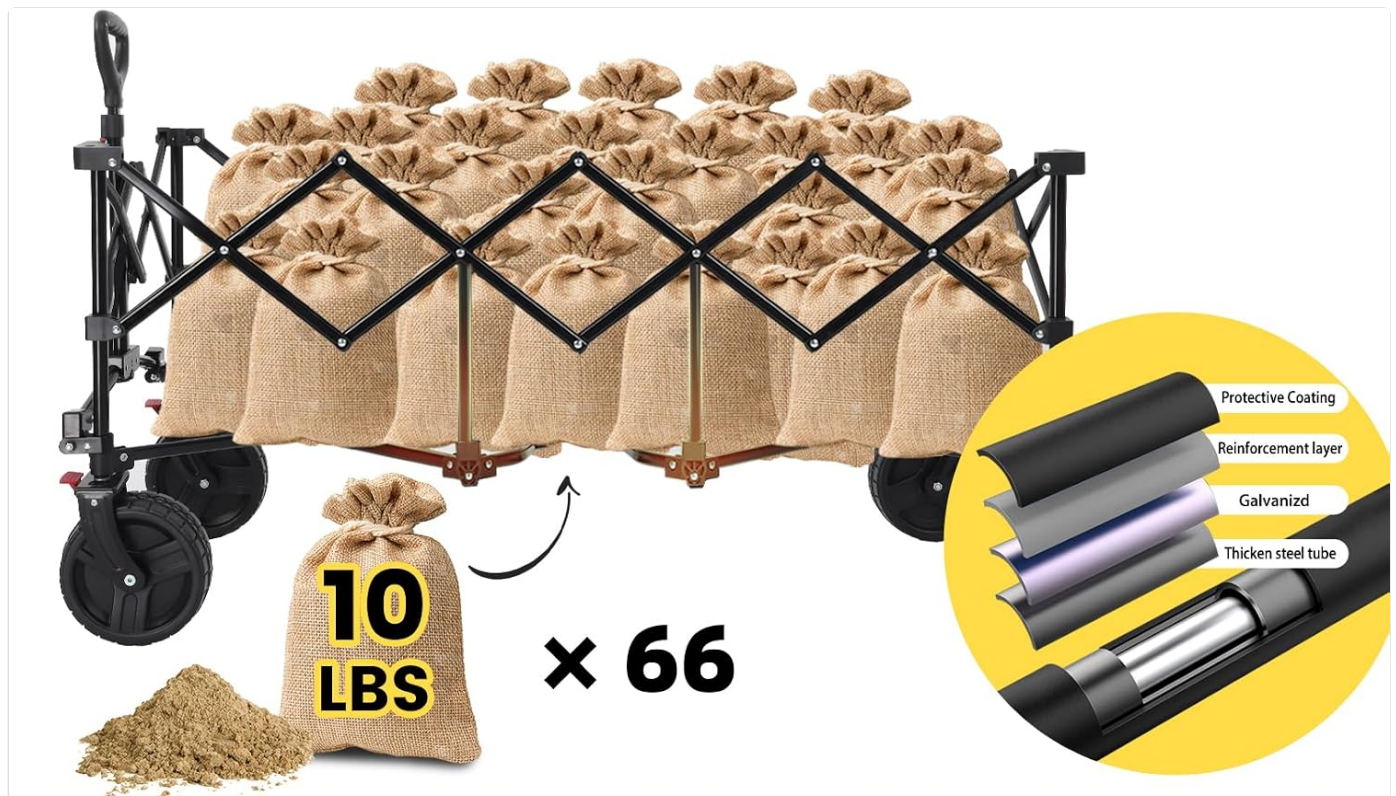

Heavy Duty & Ultra-stable structure

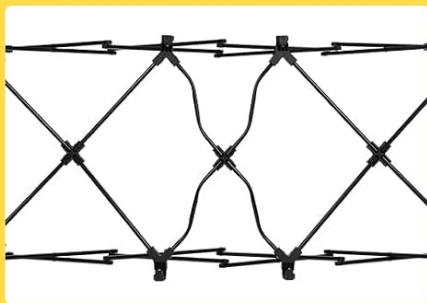 

**Patent 3 Cross
Chassis**



**Anti-Rust and
Thickened**



**High Strength
Carbon Steel Frame**

Image: The wagon in its folded state and partially unfolded, demonstrating the expansion process.

Larger And Stronger



Image: The Sekey wagon fully unfolded and ready for use.

2. Inserting the Bottom Pad

- Once the wagon is fully unfolded, place the removable bottom pad inside the wagon bed. This provides a stable and flat surface for your items.

Your browser does not support the video tag.

Video: Demonstration of how to easily unfold the Sekey wagon and prepare it for use by inserting the bottom pad.

OPERATING INSTRUCTIONS

1. Loading the Wagon

- Place items evenly within the wagon bed, ensuring the weight does not exceed 660 lbs.
- Utilize the two mesh cup holders for beverages or small items.



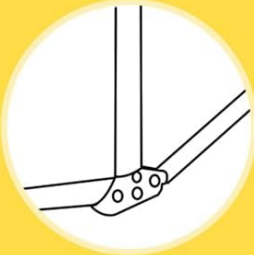
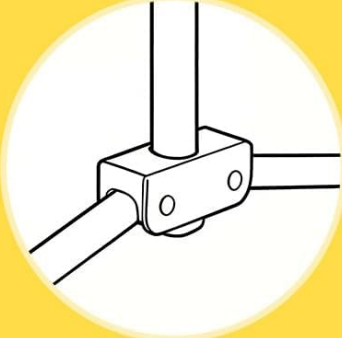 
 Swing Back and Forth	 Before	 Upgraded	 Straight Line
 Not Following			 Easy to Maneuver
 Unstable			 No Slipping

Image: The wagon loaded with items, showcasing its large capacity for transport.

 

Image: Visual representation of the wagon's extra large capacity and features like cup holders and brakes.

2. Adjusting the Handle

The wagon features an adjustable handle for comfortable pulling. Press the button on the handle to extend or retract it to your desired length.



Image: Close-up of the wagon's upgraded adjustable handle, designed for ergonomic use.

3. Using the Brakes

Each wheel is equipped with a brake. To engage, press down on the red lever located above each wheel. To release, lift the lever. Always engage brakes when the wagon is stationary.

Your browser does not support the video tag.

Video: A short preview demonstrating the functionality of the wheel brakes on the Sekey wagon.

4. Maneuvering the Wagon

The wagon features 360-degree rotating all-terrain wheels for smooth movement across various surfaces, including road, beach, grass, and rough terrain. The upgraded triangular structure enhances stability and prevents slipping.



Image: The Sekey wagon being used on a beach, demonstrating its all-terrain capability.



Image: The Sekey wagon in a park, suitable for camping and outdoor activities.

Image: The wagon positioned on a sandy beach, highlighting its suitability for beach outings.

Image: The wagon being used for grocery shopping, demonstrating its versatility.

Image: The wagon in a garden setting, illustrating its utility for gardening tasks.

Image: The wagon at a campsite, showing its use for transporting camping gear.

5. Folding for Storage

To fold the wagon, remove the bottom pad. Pull up on the fabric loop located in the center of the wagon bed. The wagon will

collapse inwards. Secure it with the integrated strap or clip, and place the bottom pad around it for compact storage in the carry bag.

Image: The wagon folded into its compact size, demonstrating ease of storage.



Image: The folded wagon stored in the trunk of a car, illustrating its portability.

MAINTENANCE

- **Cleaning:** The Oxford fabric can be spot cleaned with mild soap and water. Allow to air dry completely before folding and storing. Do not machine wash.
- **Wheel Care:** Periodically check the wheels for debris and ensure they rotate freely. Clean any accumulated dirt or sand.
- **Frame Inspection:** Regularly inspect the metal frame for any signs of rust, bends, or damage. Ensure all joints and fasteners are secure.
- **Storage:** Store the wagon in a dry, cool place away from direct sunlight when not in use to prolong its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Wagon difficult to unfold/fold.	Mechanism is stiff or obstructed.	Ensure no debris is caught in the folding mechanism. Apply gentle, even pressure. Refer to setup instructions.
Wheels not rolling smoothly.	Debris in wheels or brakes engaged.	Check for and remove any debris (sand, dirt, hair) from the wheels and axles. Ensure brakes are fully disengaged.
Wagon feels unstable.	Uneven load distribution or not fully unfolded.	Redistribute the load evenly. Ensure the wagon is fully unfolded and the bottom pad is correctly inserted.
Brakes not holding.	Brake mechanism worn or not fully engaged.	Ensure the brake levers are pressed down completely. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	FW43
Brand	Sekey
Expanded Dimensions (L x W x H)	48.43" x 22.44" x 38.19"
Folded Dimensions (L x W x H)	Approx. 12.2" x 14.57" x 24" (based on image)
Weight Capacity	660 lbs (300 kg)
Internal Storage Volume	300 Liters
Item Weight	29.5 lbs
Material	Oxford Fabric, PVC, Carbon Steel (Handle), Metal (Frame)
Wheels	4 x 3" All-Terrain Wheels with 360° Rotation and Brakes
Special Features	Adjustable Handle, Bold Bracket, Extra Storage, Foldable, Upgraded Triangular Structure

WARRANTY

Sekey wagons come with a 2-year warranty from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your Sekey 300L Extended Collapsible Wagon, please do not hesitate to contact our customer support team. For the quickest service, please refer to the contact information provided on the Sekey official website or your purchase platform.

We are committed to providing excellent service and support for your product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question