

YEAUPE PRO S6516

YEAUPE PRO Square High Pressure Shower Head with Filter and 1.6M Hose

Model: S6516

INTRODUCTION

Thank you for choosing the YEAUPE PRO Square High Pressure Shower Head with Filter. This product is designed to enhance your showering experience by providing powerful water flow, even in low-pressure environments, and filtering impurities from your bath water. This manual provides essential information for the correct installation, operation, and maintenance of your new shower head and hose system.

PACKAGE CONTENTS

Please verify that all components are present before beginning installation:

- 1 x YEAUPE PRO Square Shower Head
- 1 x 1.6m Stainless Steel Shower Hose
- 1 x Set of Filter Beads (pre-installed or separate for initial setup)
- 1 x Installation Instructions (this document)

SETUP AND INSTALLATION

No specialized tools or plumbing expertise are required for installation. The shower hose features a standard 1/2 inch connection thread, compatible with most shower fixtures.

1. **Preparation:** Ensure your main water supply is turned off before starting. Remove your old shower head and hose assembly by unscrewing it from the shower arm.
2. **Install Filter Beads:** If the filter beads are not pre-installed, carefully unscrew the handle of the shower head and insert the beads as shown in the diagram. Ensure the filter layers are correctly oriented.
3. **Connect Hose to Shower Head:** Screw one end of the 1.6m stainless steel hose onto the YEAUPE PRO shower head. Hand-tighten until secure.
4. **Connect Hose to Shower Arm:** Screw the other end of the hose onto your existing shower arm. Hand-tighten until secure. Do not overtighten.

5. **Check for Leaks:** Turn on your main water supply and check for any leaks at the connection points. If leaks occur, ensure connections are tight and consider using plumber's tape if necessary (not included).

Figure 1: The 1.6m anti-twist shower hose with standard G1/2 connectors, designed for durability and ease of installation.

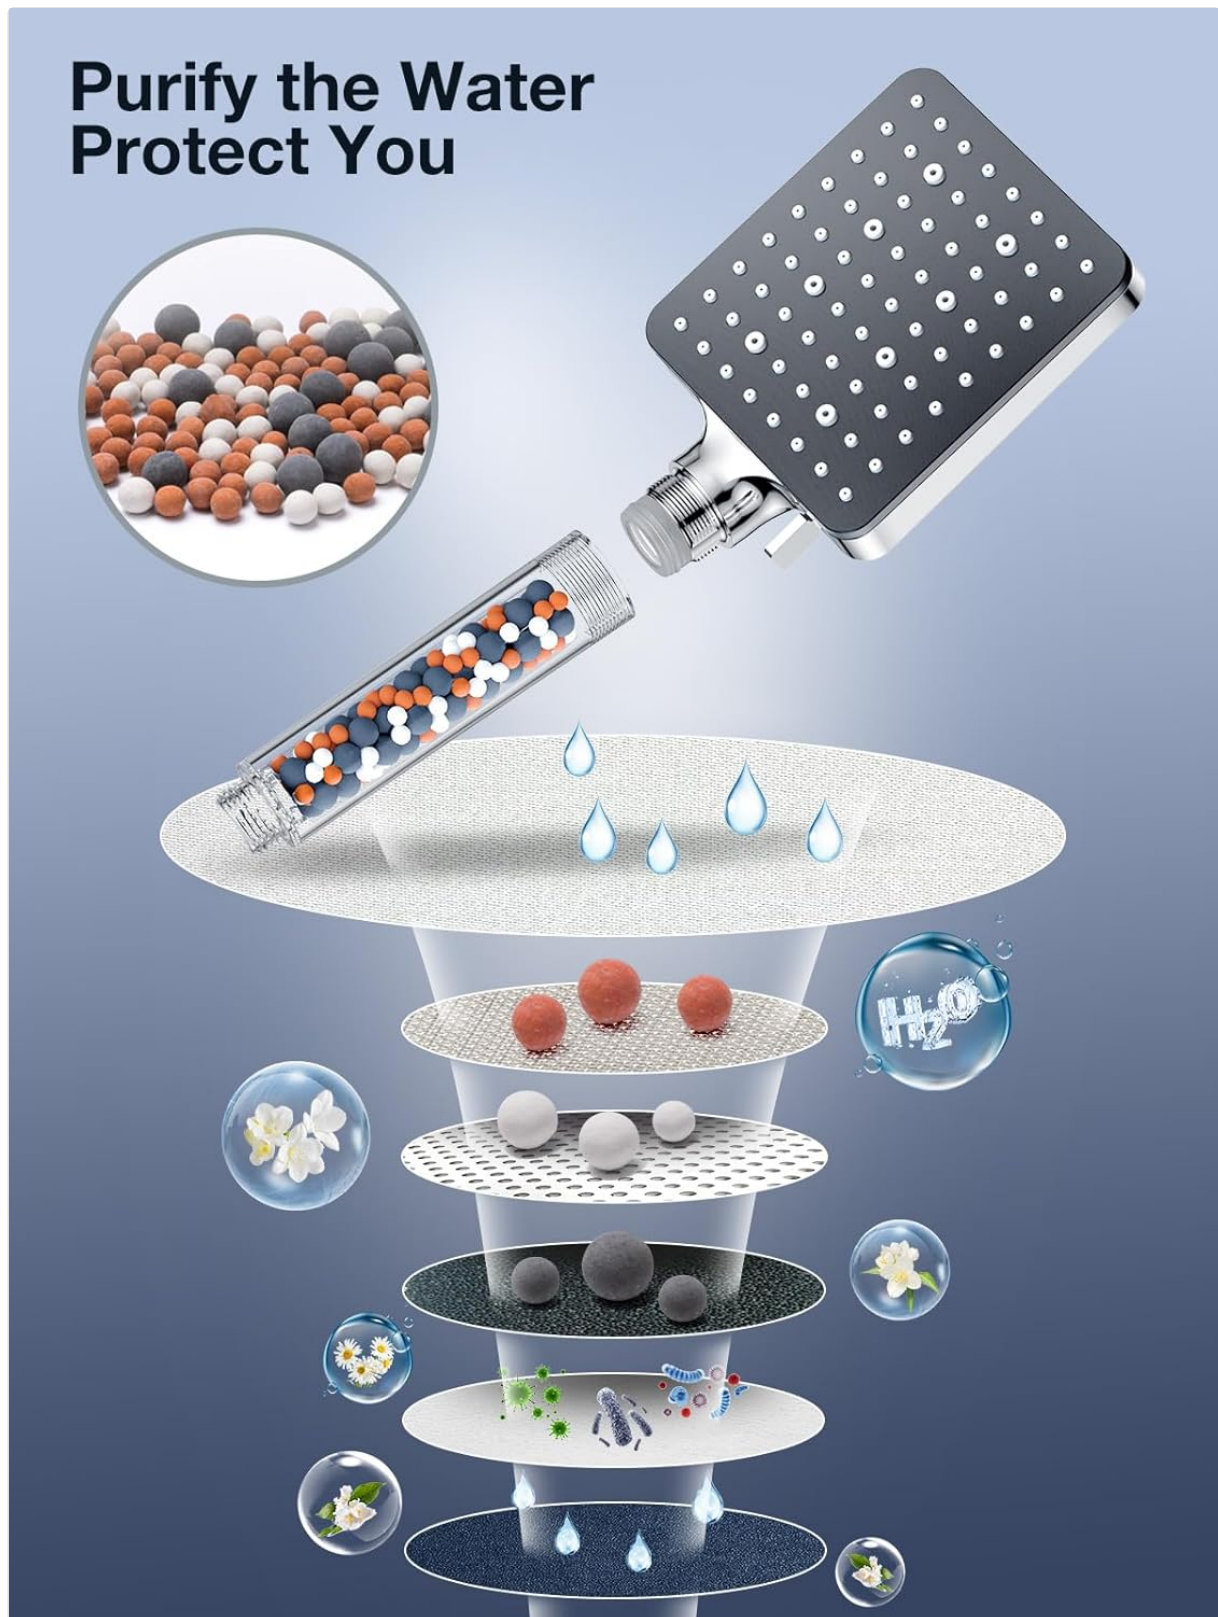


Figure 2: Illustration of the shower head's internal filtration system, detailing the various mineral beads and filter layers that purify water.

Your YEAUPE PRO shower head features 6 distinct spray settings, allowing you to customize your shower experience. The integrated filter system continuously purifies the water as it passes through the shower head.

Changing Spray Settings

To switch between the 6 spray modes, simply use the selector lever located on the side of the shower head. Rotate the lever to cycle through the available settings:

- **Rain:** A gentle, full-coverage spray.
- **Rain + Oxygenated Shower Spray:** Combines rain with an aerated, soft spray.
- **Oxygenated Shower Spray:** A soft, aerated spray for a gentle experience.
- **Power Massage + Oxygenated Shower Spray:** A combination of powerful massage jets and aerated spray.
- **Power Massage:** Concentrated, strong jets for muscle relaxation.
- **Rain + Power Massage:** A blend of rain and massage for a balanced experience.

6 Spray Settings



Figure 3: Visual representation of the 6 adjustable spray settings available on the shower head.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your shower head.

Cleaning the Nozzles

The shower head is equipped with flexible silicone nozzles designed to prevent limescale buildup. To clean, simply wipe the nozzles with your finger or a soft cloth to dislodge any mineral deposits. This should be done periodically, especially in hard water areas.

Upgraded Anti-Blocking Silicone Nozzles



High and Dense
Water Flow



Clogged, Spray in
Different Ways

Figure 4: Comparison of a clean shower head with consistent water flow versus a clogged one, demonstrating the effectiveness of anti-blocking nozzles.

Replacing Filter Beads

The mineral filter beads have a limited lifespan and should be replaced periodically to maintain water purification effectiveness. The replacement frequency depends on your water quality and usage. Typically, beads should be replaced every 3-6 months.

1. Turn off the water supply to the shower.
2. Unscrew the handle of the shower head.
3. Carefully remove the old filter beads and any remaining filter layers.

4. Insert new filter beads and layers in the correct order (refer to Figure 2 for guidance).
5. Screw the handle back onto the shower head, ensuring a tight seal.
6. Turn on the water supply and check for leaks.

TROUBLESHOOTING

If you encounter issues with your shower head, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---------------------------------|--|--|
| Low Water Pressure | Clogged nozzles or filter beads; low household water pressure. | Clean nozzles as described in Maintenance. Replace filter beads if they are old. Check household water pressure. |
| Water Leakage | Loose connections; worn-out washer. | Ensure all connections are hand-tight. Check washers for damage and replace if necessary. |
| Uneven Spray Pattern | Clogged nozzles. | Wipe the silicone nozzles to remove mineral deposits. |
| Water Not Filtering Effectively | Expired filter beads. | Replace filter beads as described in Maintenance. |

SPECIFICATIONS

- **Brand:** YEAUPE PRO
- **Model Number:** S6516
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Finish:** Chrome
- **Shape:** Square
- **Colour:** Chrome+black
- **Hose Length:** 1.6 meters (160 Centimeters)
- **Product Dimensions:** 26.4 x 11 x 12.7 cm
- **Item Weight:** 650 g
- **Number of Spray Settings:** 6
- **Special Features:** Water Softener, Pressure Boosting Technology
- **Installation Method:** Wall Mounted

SUPPORT

For any questions or assistance regarding your YEAUPE PRO shower head, please contact our customer support. We are committed to providing timely assistance to ensure your satisfaction.

Please refer to the contact information provided with your purchase or visit the official YEAUPE PRO website for support details.

