

[manuals.plus](#) /

› [SKMEI](#) /

› [SKMEI Digital Watch Model 2042 User Manual](#)

SKMEI 2042

SKMEI Digital Watch Model 2042 User Manual

Model: 2042 | Brand: SKMEI

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your SKMEI Digital Watch Model 2042. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.

Key Features

Display
Digital

Dial Shape
Square

Features
EL Light, Alarm & 12/24 Hours

Strap Material
TPU

Water Resistance
30 m



Image: Front view of the SKMEI 2042 digital watch highlighting key features like digital display, EL light, alarm, and 12/24-hour format.

WATCH OVERVIEW

The SKMEI 2042 is a digital wristwatch featuring a durable ABS case, TPU strap, and multiple functions. It is designed for everyday wear and sports activities.

Components:

- Display:** Digital time, date, day, and other function indicators.
- Buttons:** Typically four buttons for mode selection, light, start/stop, and reset.
- Strap:** Thermoplastic Polyurethane (TPU) for comfort and durability.
- Case:** ABS material.
- Rear Cover:** Stainless Steel.



Image: Rear view of the SKMEI 2042 digital watch, showing the stainless steel back cover and strap attachment.

SETUP AND BASIC OPERATION

Initial Setup:

- 1. Remove Protective Film:** Before first use, carefully remove any protective film from the watch face.
- 2. Power On:** The watch is typically pre-installed with a battery and should be operational upon removal from packaging.



Image: A close-up of the SKMEI 2042 watch face, illustrating the removal of the protective film.

Setting Time and Date:

Note: Specific button labels and sequences may vary slightly. Refer to the watch's physical buttons for exact identification. Common button names are used below.

1. Press the **MODE** button repeatedly until the time setting mode is activated (usually indicated by flashing digits).
2. Use the **RESET** or **START** button to adjust the flashing digit (hours, minutes, seconds).
3. Press the **MODE** button again to cycle through the settings (hours, minutes, month, date, day of week).
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

12/24-Hour Format:

In time display mode, press the **RESET** or **START** button to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

OPERATING FUNCTIONS

EL Backlight:

Press the **LIGHT** button (usually located on the top left) to illuminate the display for a few seconds in low-light conditions.

Alarm Function:

1. Press the **MODE** button until the alarm mode is displayed.
2. Press the **RESET** button to select the hour or minute to set.
3. Use the **START** button to adjust the time.
4. Press **MODE** to confirm and exit.
5. To activate/deactivate the alarm, press the **START** button in alarm mode. An alarm icon will appear/disappear.

Stopwatch Function:

1. Press the **MODE** button until the stopwatch mode is displayed (usually "00:00:00").
2. Press the **START** button to begin timing.
3. Press **START** again to pause/resume.
4. Press the **RESET** button to reset the stopwatch to zero.
5. To record split times, press **RESET** while the stopwatch is running. The display will show the split time while the

internal timer continues. Press **RESET** again to return to the running time.

Countdown Timer:

*If available, typically accessed via the **MODE** button.*

1. Press the **MODE** button until the countdown timer mode is displayed.
2. Use the **RESET** and **START** buttons to set the desired countdown time.
3. Press **START** to begin the countdown.
4. Press **START** again to pause/resume.
5. Press **RESET** to stop and reset the timer.

MAINTENANCE AND CARE

Water Resistance:

The SKMEI 2042 watch is rated for 50 meters (5ATM) water resistance. This means it is suitable for daily use, splashes, rain, and short periods of swimming. **Do not press any buttons while the watch is submerged in water.** Avoid hot water, steam, and prolonged exposure to water to prevent damage.



Image: The SKMEI 2042 digital watch partially submerged in water, illustrating its water resistance.

Cleaning:

Wipe the watch case and strap with a soft, damp cloth. Avoid using chemical cleaners, as they may damage the materials.

Battery Replacement:

When the display becomes dim or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

Storage:

Store the watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable). If the issue persists, the

internal mechanism may require inspection.

- **Time is inaccurate:** Re-set the time according to the "Setting Time and Date" section. If inaccuracy continues, the watch may require servicing.
- **Water inside the watch:** Immediately stop using the watch and seek professional repair. Water damage is typically not covered under warranty if proper water resistance guidelines were not followed.

SPECIFICATIONS

Feature	Detail
Model Number	2042
Display Type	Digital
Case Material	ABS
Strap Material	Thermoplastic Polyurethane (TPU)
Water Resistance	50 Meters (5ATM)
Movement Type	Quartz
Case Diameter	4.1 Centimeters
Case Thickness	1 Centimeter
Item Weight	35.6 Grams
Functions	EL Light, Alarm, Stopwatch, Countdown Timer, Auto Calendar, Week Display, 12/24-Hour Format



Image: Diagram illustrating the dimensions of the SKMEI 2042 digital watch, including case height, strap/lug width, case width, and case thickness.

WARRANTY AND SUPPORT

Your SKMEI Digital Watch Model 2042 comes with a **Limited Warranty**. For specific details regarding warranty coverage and duration, please refer to the warranty card included with your purchase or contact SKMEI customer support. For further assistance or inquiries, please visit the official SKMEI website or contact their authorized service centers.