

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [SKMEI](#) /

› SKMEI Digital Watch User Manual

SKMEI 1988DKGN

SKMEI Digital Watch User Manual

Model: 1988DKGN

Brand: SKMEI

INTRODUCTION

This manual provides comprehensive instructions for operating and maintaining your SKMEI Young Men Casual Design Digital Watch, Model 1988DKGN. This watch is designed for daily wear and outdoor activities, featuring a durable construction and multiple functions. Please read this manual carefully to ensure proper use and longevity of your timepiece.



Image: Front view of the SKMEI 1988 Digital Watch in dark green.

KEY FEATURES

- **Multifunctional Digital Display:** Features dual time display, stopwatch, countdown timer, alarm, and date/week display.
- **Durable & Lightweight Design:** Constructed with a strong ABS case, TPU band, and stainless steel buckle for long-lasting wear.
- **50M Water Resistance:** Suitable for handwashing and light splashes. *Not recommended for swimming or diving.*
- **EL Backlight:** Electroluminescent backlight for easy time reading in low-light conditions.
- **Display Type:** Digital
- **Dial Shape:** Square
- **Strap Material:** Thermoplastic Polyurethane (TPU)

Key Features

Display
Digital

Dial Shape
Square

Features
2 Time, Date, EL Light, Week, Alarm

Strap Material
TPU

Water Resistance
50 m



Image: Visual representation of the watch's key features including display type, dial shape, and water resistance.

SETUP

Initial Activation

Your SKMEI 1988 watch comes with a pre-installed CR2032 battery. It should be ready for use upon arrival. If the display is blank, gently press any button to activate it. If it remains blank, the battery may need replacement (refer to Maintenance section).

Setting Time and Date

1. In normal time display mode, press the **MODE** button repeatedly until the seconds start flashing. This indicates you are in setting mode.
2. Press the **RESET** button to cycle through the settings: seconds, hour, minute, month, date, day of the week.
3. Use the **START** button to adjust the flashing value.

4. Once all settings are correct, press the **MODE** button to exit the setting mode and return to normal time display.



Image: Close-up of the watch display showing current time and date.

OPERATING INSTRUCTIONS

Mode Switching

Press the **MODE** button to cycle through the different functions:

- Normal Time Display
- Stopwatch Mode
- Alarm Setting Mode
- Countdown Timer Mode
- Dual Time Mode

Using the Stopwatch

1. From normal time display, press **MODE** until "CHRONO" or "STW" appears.
2. Press **START** to begin timing.
3. Press **START** again to pause.
4. Press **RESET** to reset the stopwatch to zero.

Setting the Alarm

1. From normal time display, press **MODE** until "ALARM" or "ALM" appears.
2. Press **RESET** to select the hour or minute to set.
3. Use **START** to adjust the flashing value.
4. Press **MODE** to exit alarm setting.
5. To turn the alarm on/off, in alarm mode, press **START**. An alarm icon will appear/disappear.

Using the EL Backlight

Press the **LIGHT** button (typically on the upper left side of the watch) to illuminate the display for a few seconds. This feature is useful in low-light conditions.

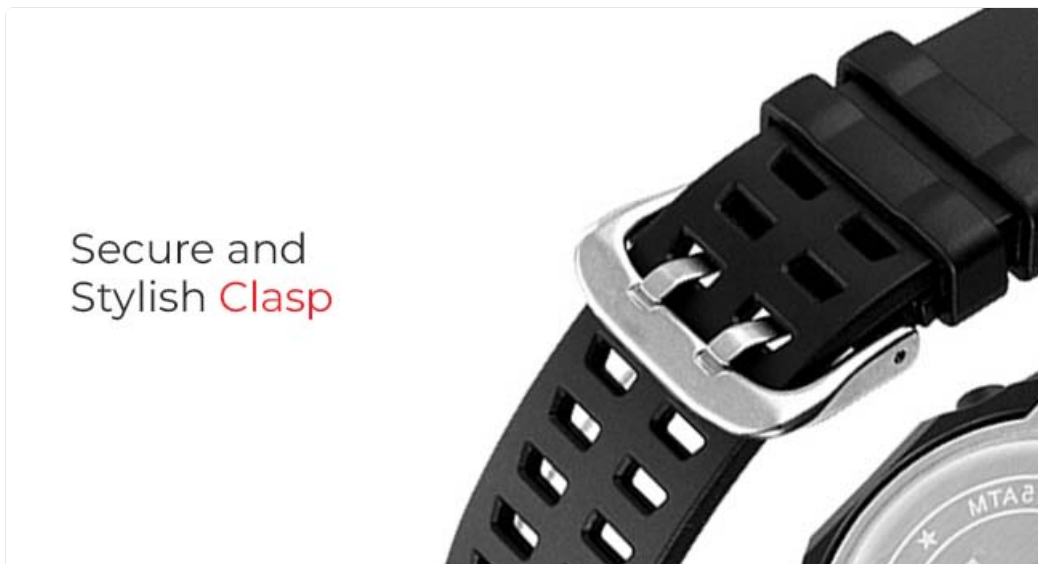


Image: The watch display illuminated by the EL backlight, showing clear visibility in the dark.

Official Product Video

Your browser does not support the video tag.

Video: A demonstration of the SKMEI 1988 Digital Watch, showcasing its features, various color options, and water resistance.

MAINTENANCE

Water Resistance

The SKMEI 1988 watch is rated for 50M (5 ATM) water resistance. This means it is suitable for daily use, such as handwashing, rain, and accidental splashes. It is *not* designed for swimming, diving, or prolonged submersion in water. Avoid pressing buttons underwater to prevent water ingress.



Image: The watch partially submerged in water, illustrating its water-resistant capabilities.

Cleaning Your Watch

To clean your watch, wipe it gently with a soft, damp cloth. Do not use harsh chemicals, solvents, or abrasive cleaners, as these can damage the case, band, or display. Ensure the watch is dry before storing.

Battery Replacement

The watch uses a CR2032 battery. When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure the water resistance seal is properly maintained.



Image: The stainless steel back cover of the watch, indicating the battery type (CR2032) and water resistance rating.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery or battery needs replacement.	Replace the CR2032 battery.
Buttons are unresponsive.	Temporary software glitch or low battery.	Try pressing all buttons firmly. If issue persists, replace battery.
Time is inaccurate.	Incorrect setting or low battery.	Re-set the time and date. Replace battery if necessary.

Problem	Possible Cause	Solution
Condensation inside display.	Water ingress due to seal compromise or extreme temperature changes.	Stop using the watch immediately. Seek professional repair to prevent further damage.

SPECIFICATIONS


Attribute	Detail
Model Number	1988DKGN
Movement Type	Quartz
Case Material	ABS
Band Material	Thermoplastic Polyurethane (TPU)
Band Color	Dark Green
Water Resistance	50M (5 ATM)
Product Dimensions (LxWxH)	27 x 4.5 x 1.4 Centimeters
Item Weight	47.8 Grams
Battery Type	1 C battery (CR2032) (included)



Case Width
45.4MM



 Strap Material
TPU



Case Thickness
13.8MM

Image: Diagram illustrating the case height (51.2mm), case width (45.4mm), strap/lug width (19mm), and case thickness (13.8mm) of the watch.

WARRANTY AND SUPPORT

This SKMEI watch comes with a limited warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact the seller directly. For any product-related inquiries, technical support, or warranty claims, please reach out to the authorized SKMEI seller from whom you purchased the watch.

Seller: **skmei** (Seller ID: A3MXOO0DSD2Y8Z)

Please retain your proof of purchase for warranty purposes.

